




Lenovo IdeaPad Flex 4-1470 Removing the Lower Case

Remove the lower case to access and replace the internal components.

Written By: Demario Robinson

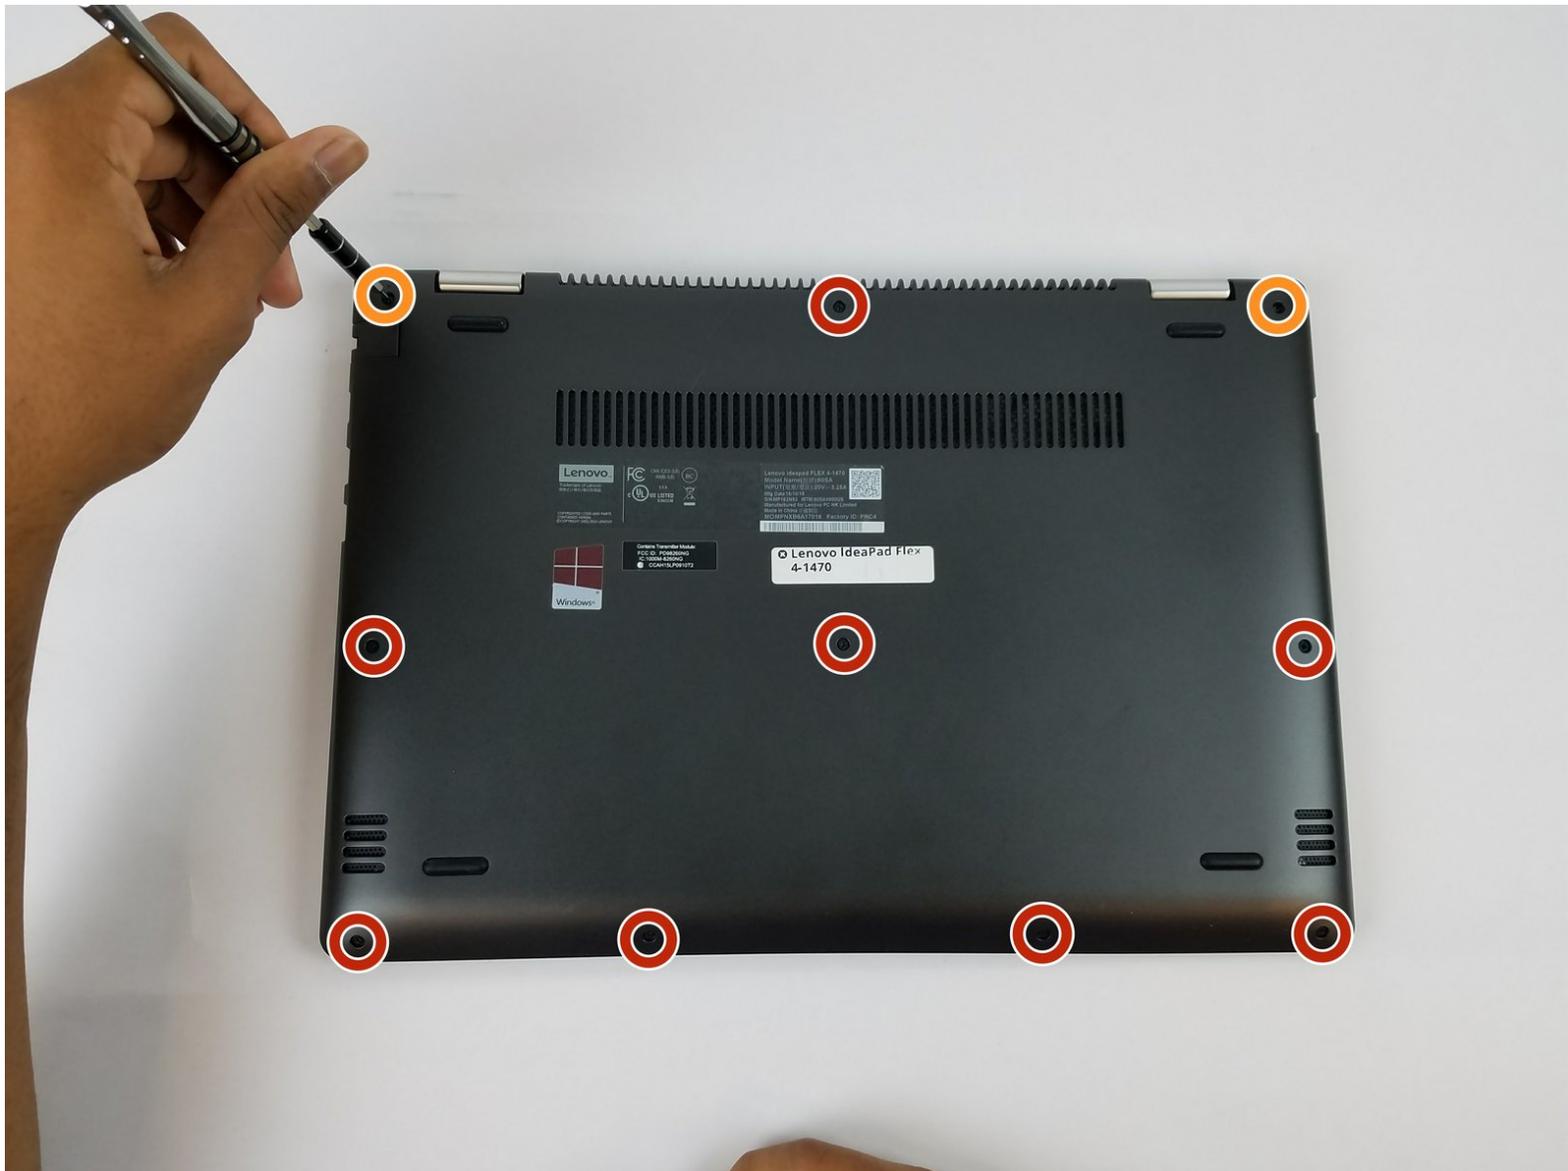

INTRODUCTION

This guide will show you how to remove the cover. This is a prerequisite guide for all other replacement guides on this page. It is also useful if you need to clean out dust that may be causing overheating.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Lenovo Flex 4-1470 and Flex 4-1480 Lower Case](#) (1)



Step 1 — Lower Case

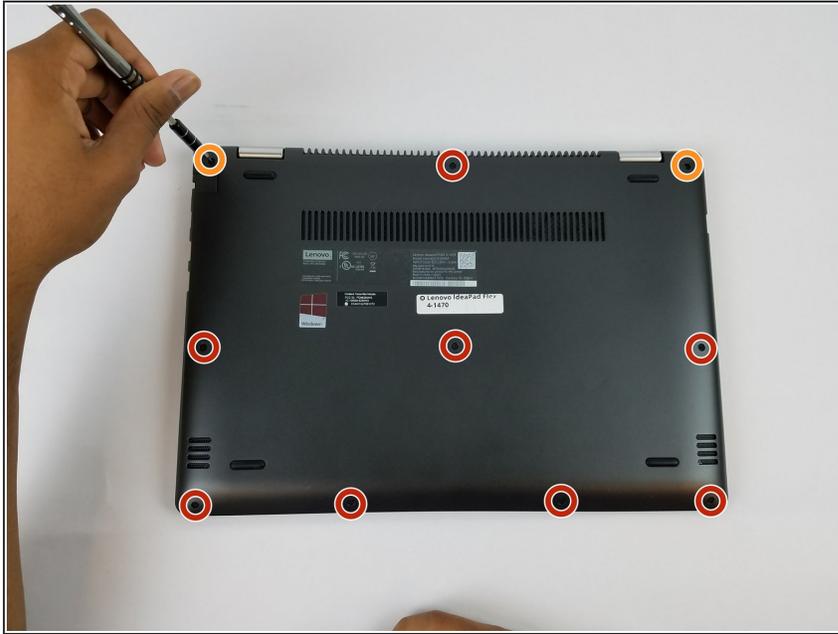

 Ensure your computer is completely OFF before starting this guide.

- Remove the eight 6 mm screws using a Phillips #0 screwdriver.
- Remove the two 11 mm screws using a Phillips #0 screwdriver.

Step 2

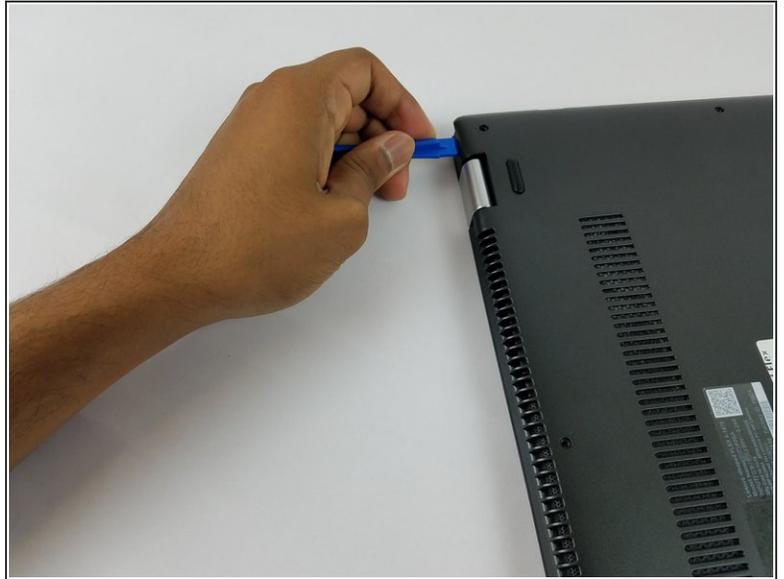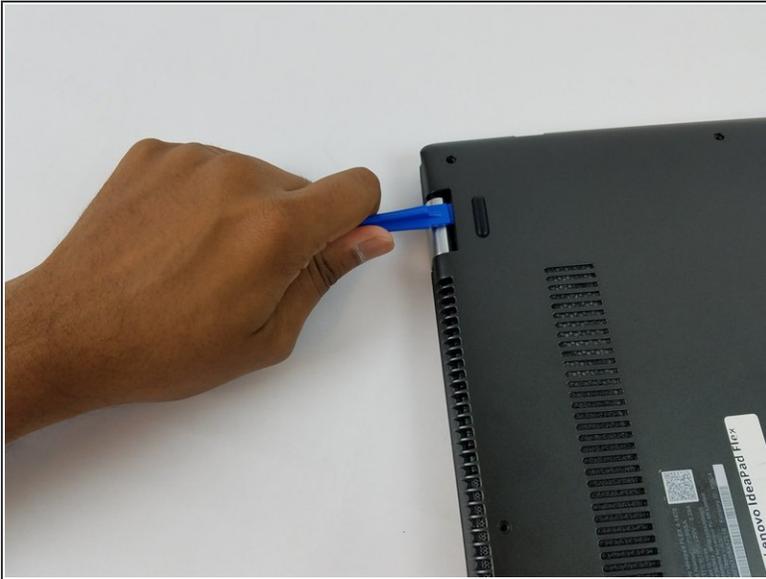

- Pry the back cover off by inserting the plastic opening tool at the hinges and wedging it between the Back cover and the body.
- Follow along the back edge with the plastic opening tool, lifting the cover off as you go. It is normal to hear snapping/clicking sounds as the back cover is held on by clips.
- Remove the cover.

To reassemble your device, follow these instructions in reverse order.