



Black and Decker Pivot MAX Pivot Lock Button Replacement

This guide is to replace the Pivot Lock Button located in the handle of the Black and Decker Pivot MAX.

Written By: Jesse Sipes



INTRODUCTION


This guide is to replace the pivot lock button located in handle of the Black and Decker Pivot Max. No special tools are necessary, only a phillips screw driver is needed for this replacement.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

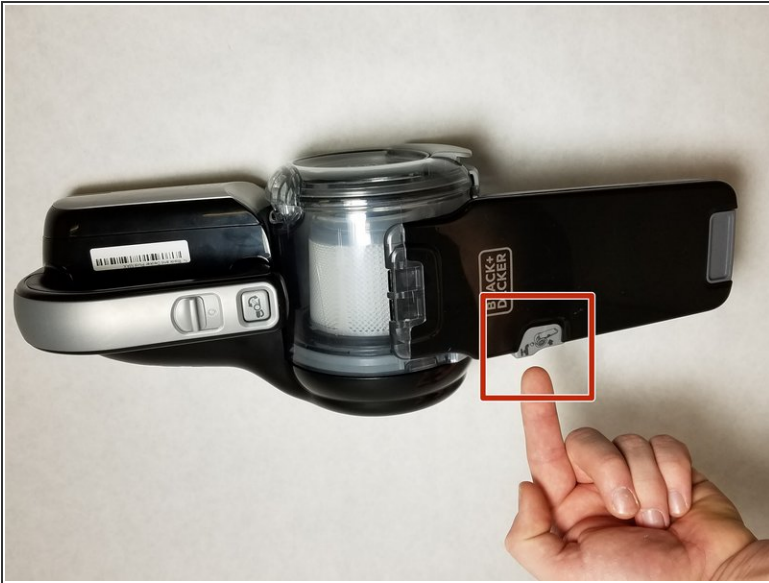

- Press in and hold the release button.
- Rotate the dust filter chamber counter-clockwise.
- Remove the dust filter chamber.

Step 2



- Remove the two 10 mm screws from the motor casing with a Phillips #1 screwdriver.

Step 3




- Pull the battery cover up and then slide it away from the motor to remove.

Step 4



- Remove the battery unit by pulling it out of the main body.

Step 5

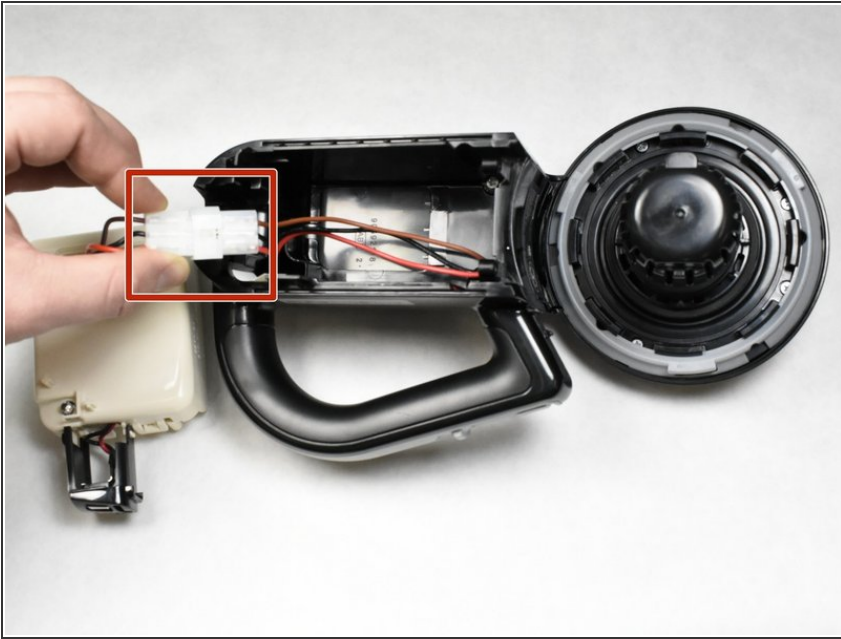

- Disconnect the quick connect wire harness that connects the motor and battery located in the battery storage compartment.

Step 6 — Pivot Lock Button



- Remove the handle cover by removing the three PH1 20mm screws

Step 7



- Pull out the pivot lock button.

To reassemble your device, follow these instructions in reverse order.