



HP Officejet Pro 6835 Cover Disassembly

How to disassemble the cover of the HP Officejet Pro 6835 printer.

Written By: Jake Park



INTRODUCTION

This guide will teach you how to remove the Cover on your HP Officejet Pro 6835 or 6830 to reach the main components.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T9 Torx Screwdriver](#) (1)
-

Step 1 — HP Officejet Pro 6835 Cover Disassembly



- Open the main lid as far as it will go.
- Use a plastic opening tool to gently pry off the hinge on the right side by pushing it to the left and off the hook.
- Open the lid further.


Step 2

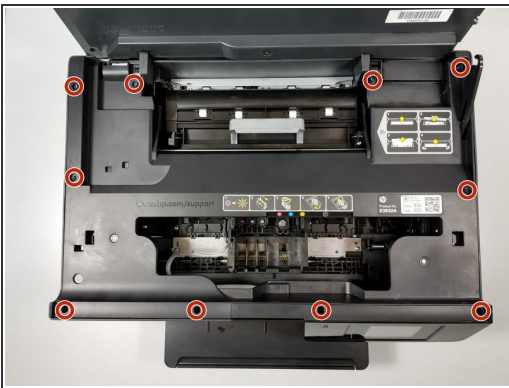


- Use a T9 torx screwdriver to remove a total of ten (10) 12mm screws from the main cover by turning the screwdriver counterclockwise.

i The two screws above the screen assembly are deep so you may need a long screwdriver.


Step 3

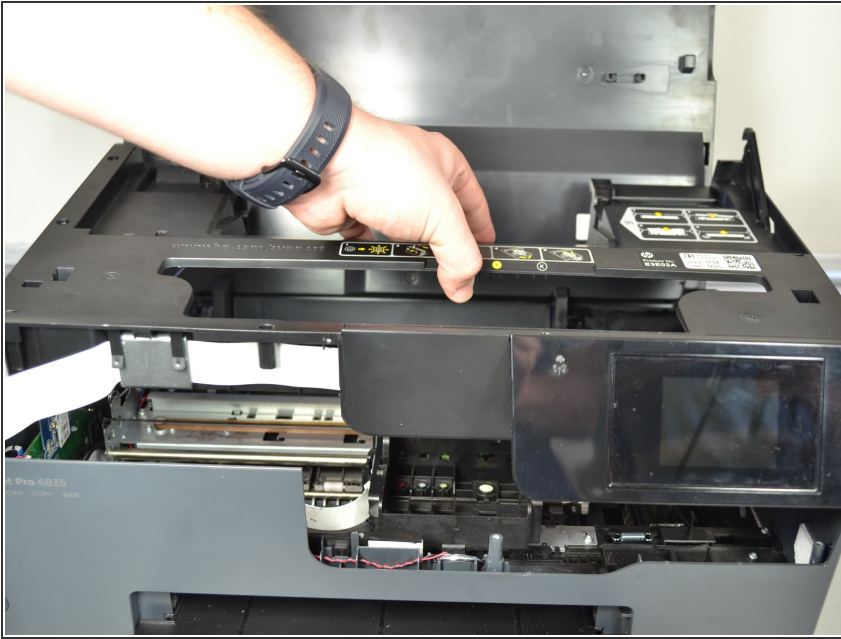

- Grab the main cover and lift it up slightly.

 Do not pull too hard—there is a cable connecting the cover to the printer.

Step 4

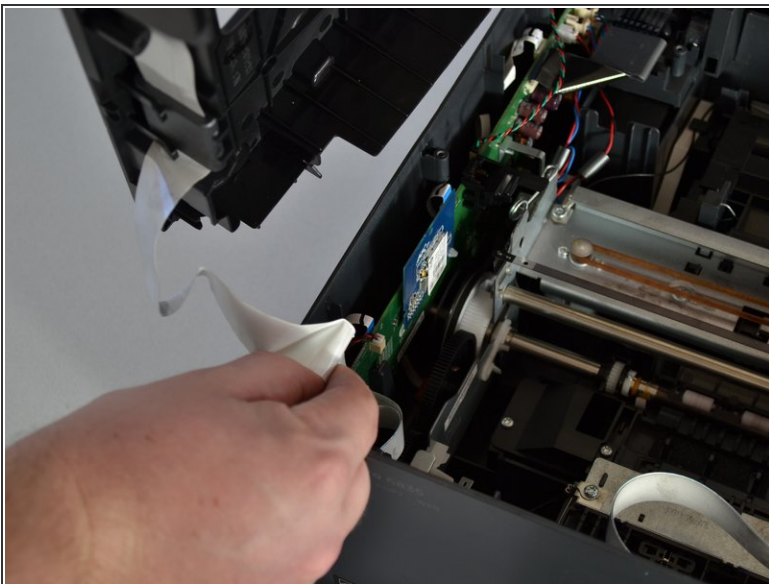

- Grab the base of the white ribbon cable connecting the cover to the base of the printer and pull it out.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:25:15 AM (MST).

