



# Palm Pre 2 Keyboard Replacement

The following guide will show readers how to...

Written By: Elliott Van Hoy



# INTRODUCTION

The following guide will show readers how to properly remove the keyboard from the Palm Pre 2.

## TOOLS:


[T5 Torx Screwdriver](#) (1)

[Spudger](#) (1)

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

## Step 1 — Keyboard

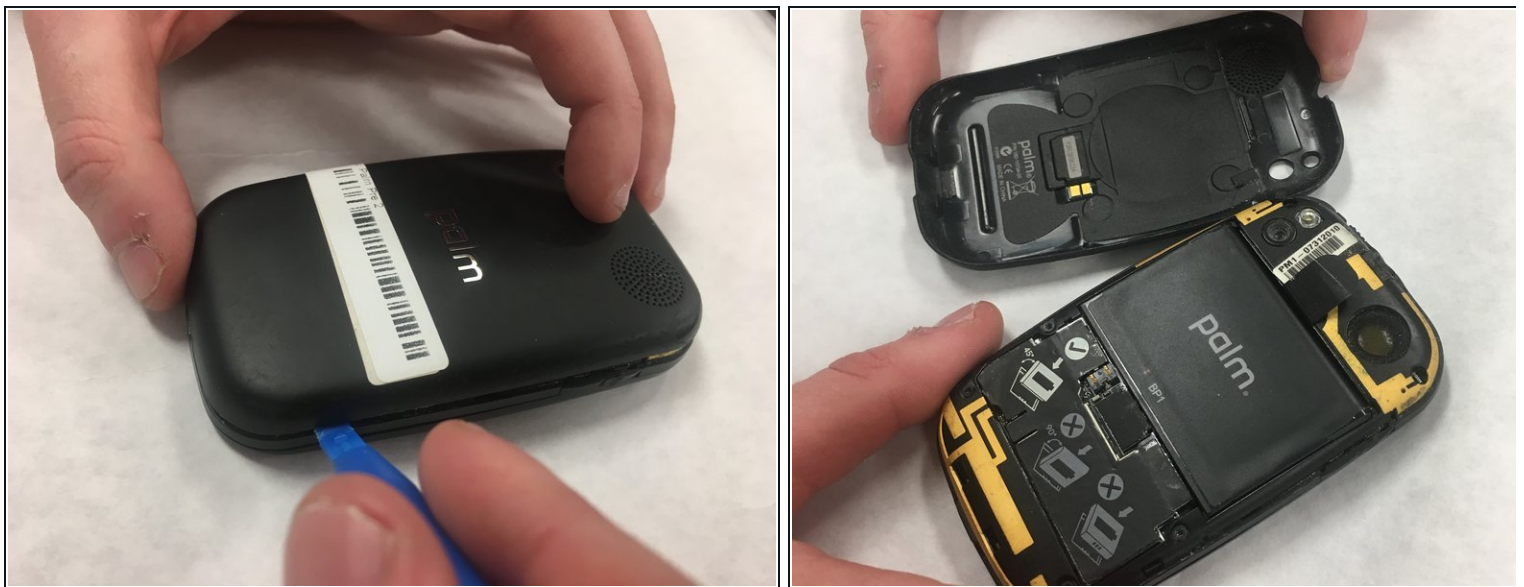

 Make sure your Palm Pre 2 is turned off before taking apart the phone.



- Snap off the back panel to reveal the battery using the opening tool.

## Step 2



- Pull on the tab to remove the battery.


## Step 3

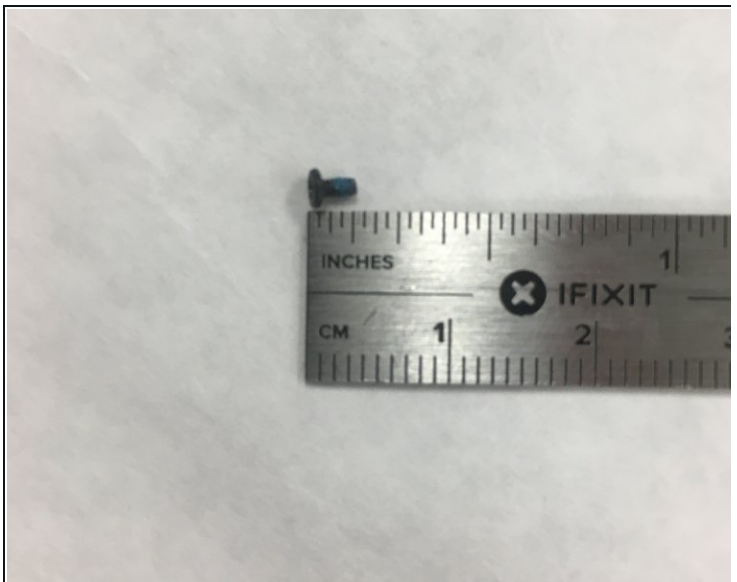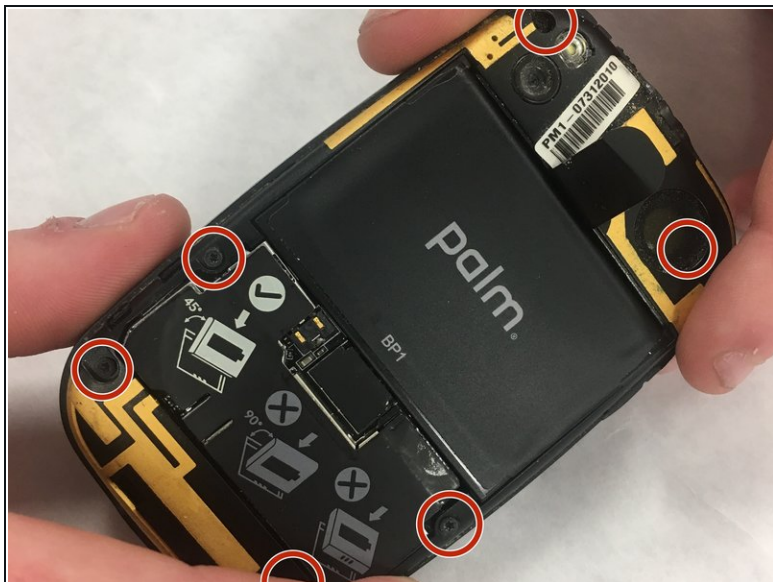

- Use the T5 Torx Screwdriver to remove the six screws that hold the back of the frame in place.




## Step 4

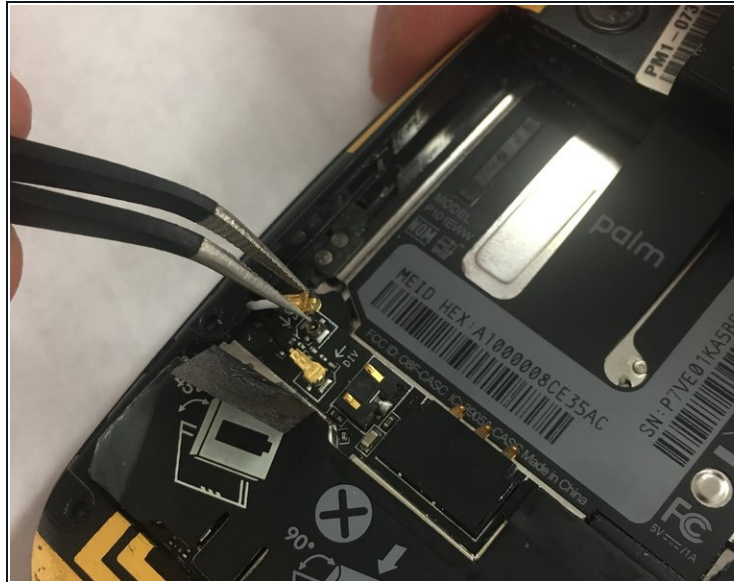




- Use a spudger to open the hinge that covers the black and white GPS and DIV antennas.
- Use tweezers to remove the two antennas from the keypad control board.

## Step 5

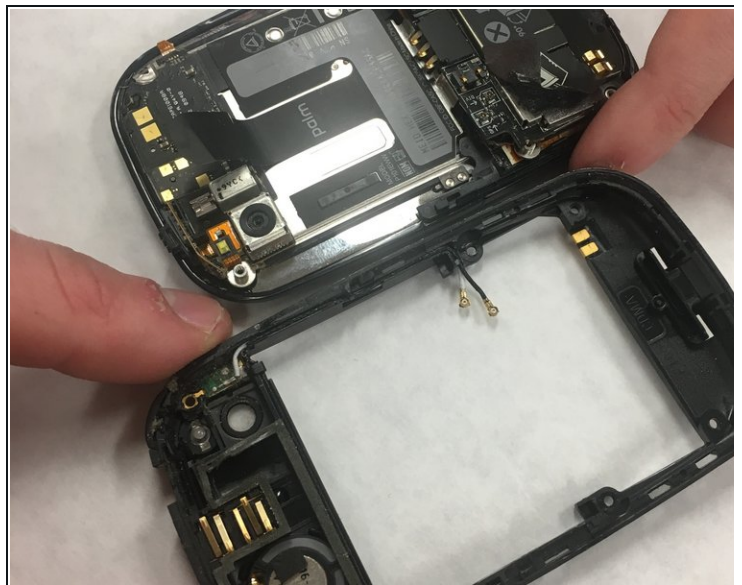

- Use the opening tool to pry off the (black and yellow) back frame.

## Step 6

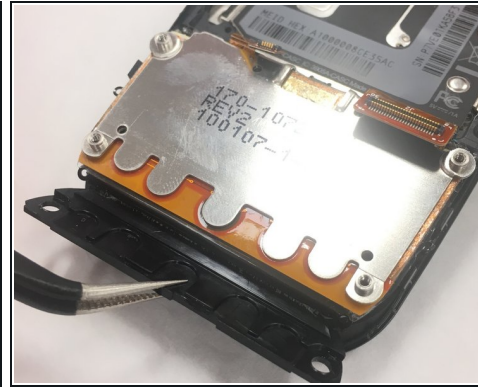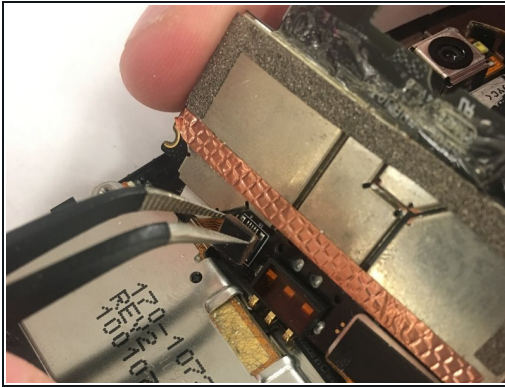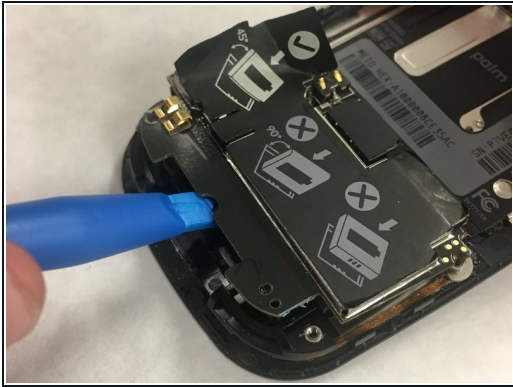

- Use the opening tool to remove the panel on the main part of the phone.
- Use the tweezers to get access to remove the panel giving access to the cable connectors.
- Remove the two ribbon cable connectors using the tweezers.

## Step 7



- Use tweezers to separate the keyboard from the phone.

To reassemble your device, follow these instructions in reverse order.