



KitchenAid KSM150PSE Carbon Brushes Replacement

How to replace KitchenAid KSM150PSE carbon brushes.

Written By: Hayley Young



INTRODUCTION

If your device is not turning on it could be because of worn down carbon brushes. Here is a guide to replace these brushes.

TOOLS:

- [Flathead Screwdriver](#) (1)
-

Step 1 — Carbon Brushes



- Using a flat head screwdriver, unscrew the brush cap on each side of the mixer by turning them counter clockwise.
 - Remove brush cap by pulling it toward you.
-  The brushes are held in by springs and will fly out if removed too fast.

Step 2



- Remove brush by pulling it toward you.
- ⓘ One corner of the brush is flattened. You can check which way the brush is oriented by shining a flashlight inside the hole.

To reassemble your device, follow these instructions in reverse order.