




# Alienware M18x RAM Replacement

This guide will show you how to replace the RAM in your Alienware M18x laptop. Replace the RAM if you need more storage or faster speed in your computer.

Written By: Rachel Greenberg

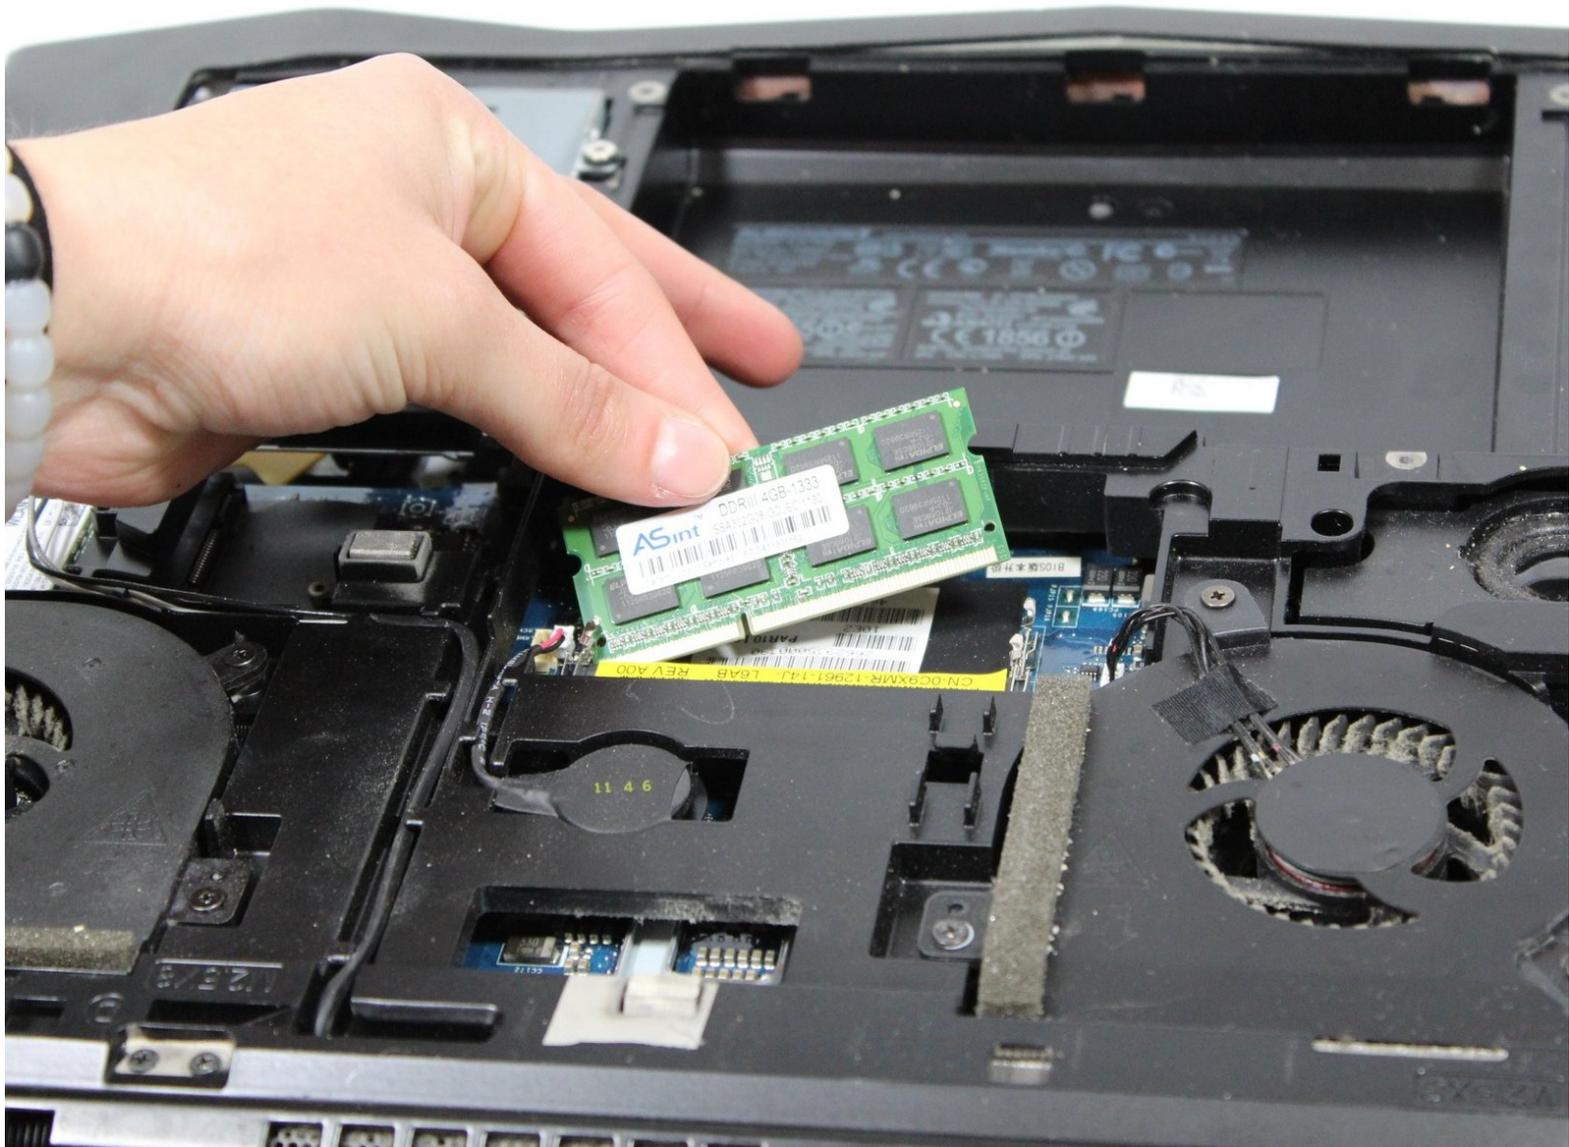

---

## INTRODUCTION

This guide shows how to replace the RAM in an Alienware M18x laptop.

---

### TOOLS:


- [JIS #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — RAM



- Turn your computer over.
- Slide the bar over and lift the battery out.

## Step 2

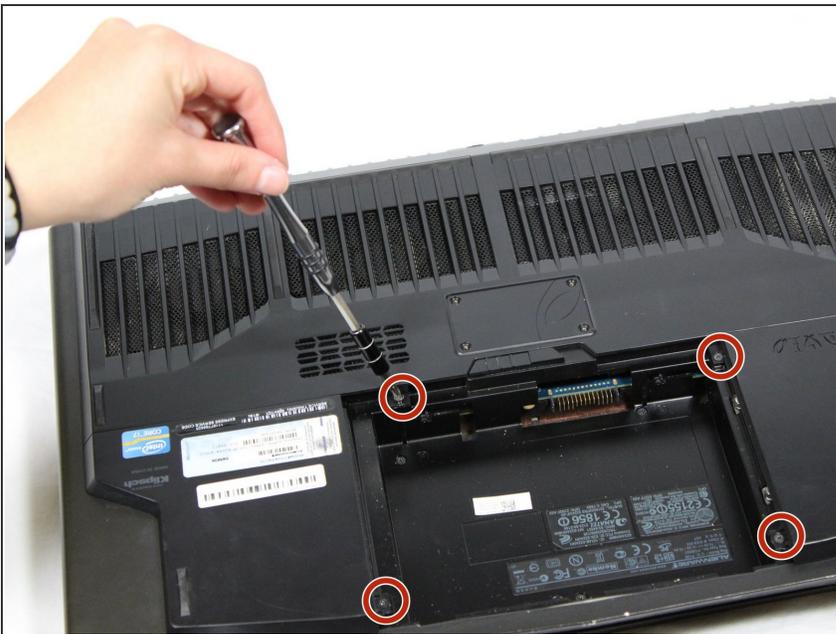



- Unscrew four screws with a J000 screwdriver.

### Step 3




- Use the plastic pryer tool to lift the bottom cover off.

### Step 4

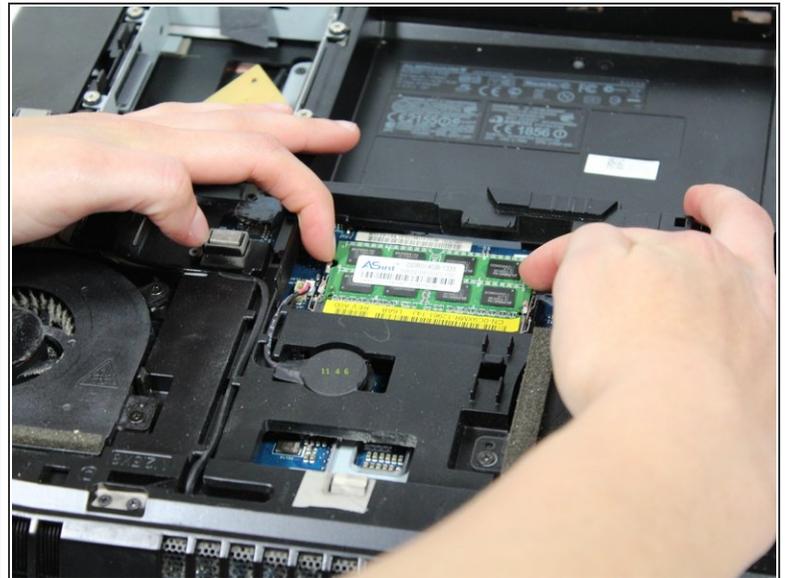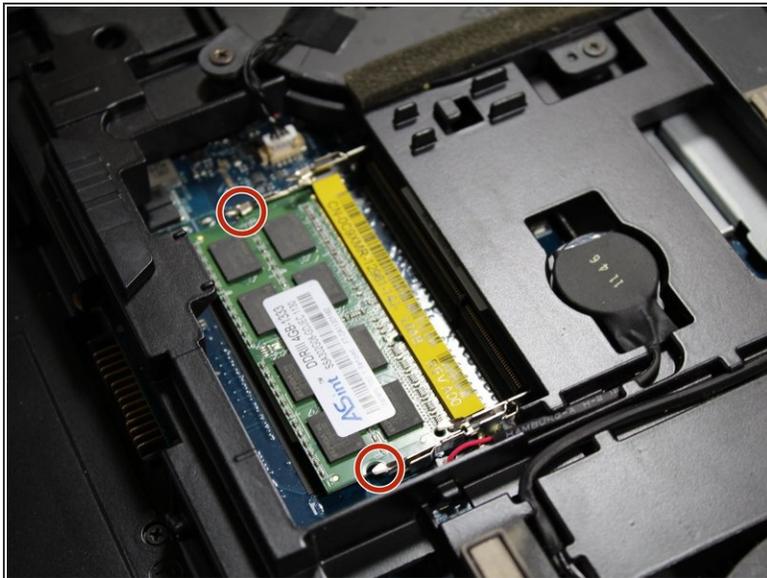

- Push outwards on the two silver tabs on either side of the RAM.

## Step 5

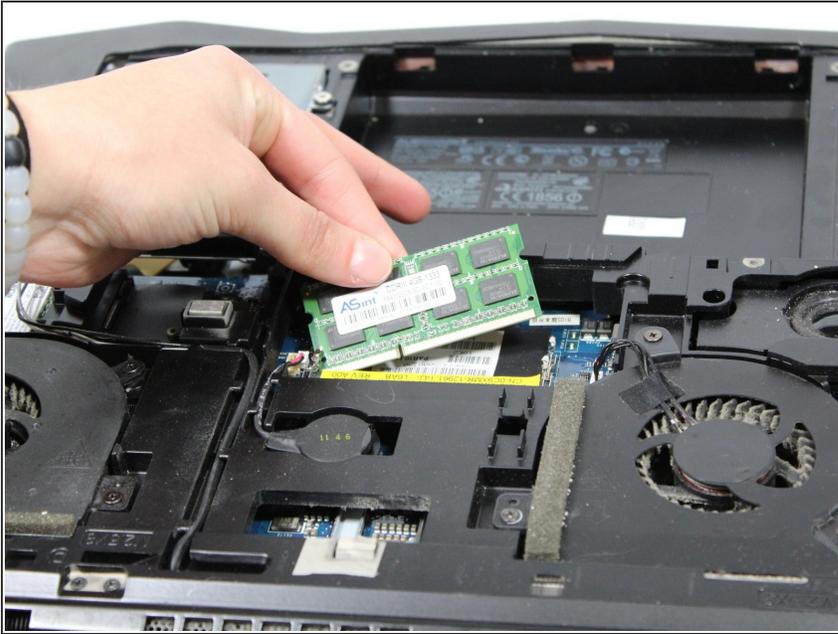

- Pull out the RAM card.

To reassemble your device, follow these instructions in reverse order.