



Written By: Ean Hobbs



INTRODUCTION

This guide will help you replace the RAM of your device.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover



 
 
- Flip the device so the back is facing you.
- Using the Phillips #0 screwdriver, unscrew the fourteen screws from the device.

Step 2



- Use the blue Opening Tool to pry-open the back cover.
- Slide it around the perimeter of the PC freeing the back cover.
- Remove the back cover from the device.

Step 3 — RAM

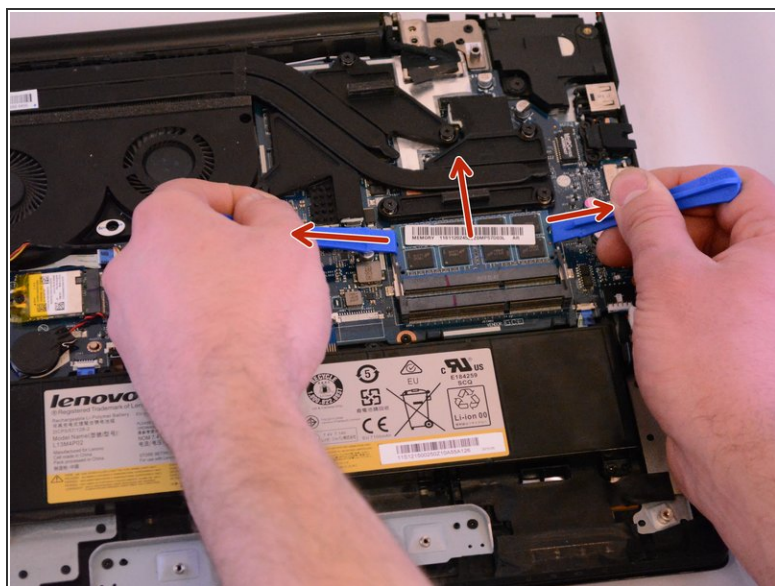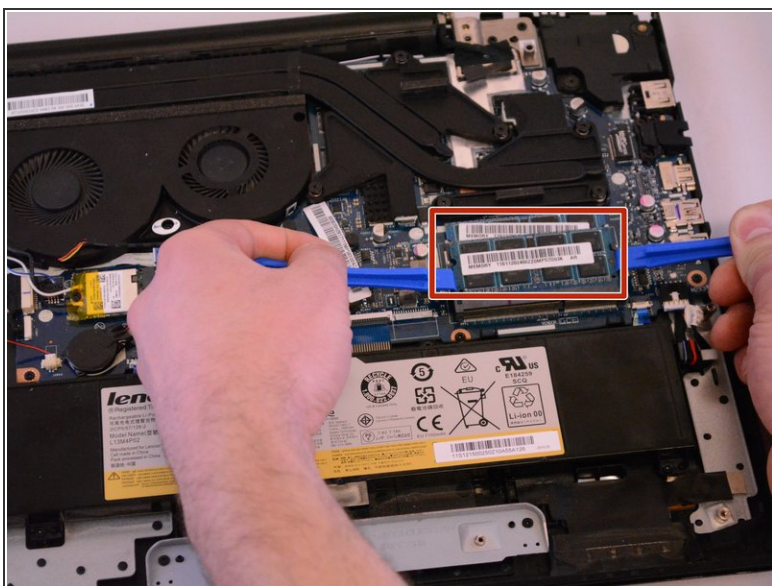

- Use your fingers or two of the blue Opening Tools to lightly pull the tabs away from the RAM to free the first stick.
- Remove the first stick and do the same thing to the second RAM stick.

To reassemble your device, follow these instructions in reverse order.