



# iBook G3 Clamshell CD Faceplate Replacement

Written By: iRobot



## INTRODUCTION

Replace or change the CD drive faceplate.



### TOOLS:

- [Coin](#) (1)
- [Paper Clip](#) (1)
- [Phillips #0 Screwdriver](#) (1)



### PARTS:

- [iBook Clamshell CD Drive Faceplate \(Blueberry\)](#) (1)

## Step 1 — Battery



- Use a coin to turn both battery locking screws 90 degrees to the left.
- Remove the battery cover.
- Remove the battery from the computer by pulling up on the plastic tab.

## Step 2 — CD Faceplate



- Use a straightened paperclip to manually eject the CD-ROM tray.

### Step 3



- Remove the single black Phillips screw from the center of the CD-ROM bezel.

### Step 4



- Grasp the CD-ROM bezel and rotate it upward to remove it from the drive.

To reassemble your device, follow these instructions in reverse order.