



Lexus RX / Toyota Harrier Engine Air Filter Replacement

Simple guide with pictures to replace engine air filter.

Written By: exomen



INTRODUCTION

Simple guide with pictures to replace engine air filter.



TOOLS:

- [Phillips Screwdriver](#) (1)



PARTS:


- [Engine Air Filter](#) (1)

Step 1 — Find air filter lid




- Find air filter cover under the bonnet

Step 2 — Unscrew the lid

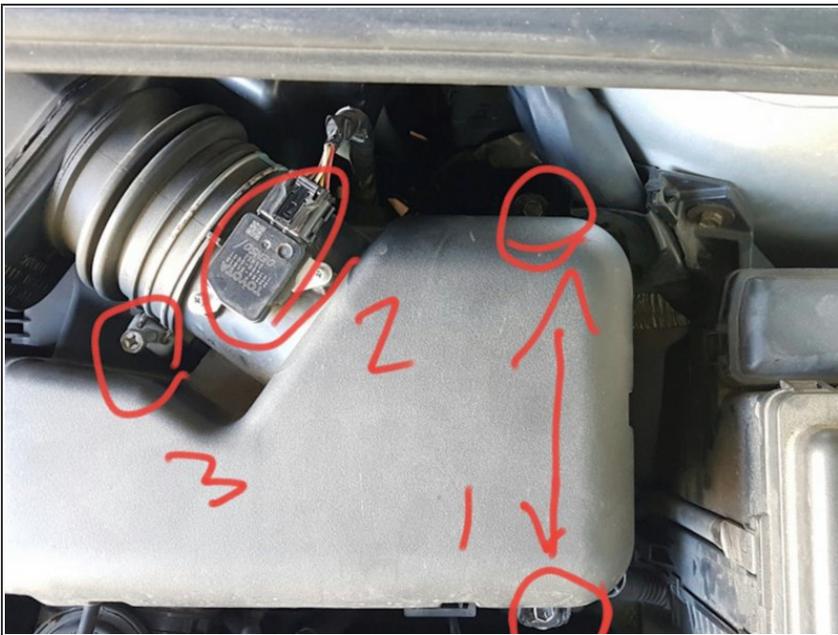


- remove (1) screws

Step 3 — Unplug the connector

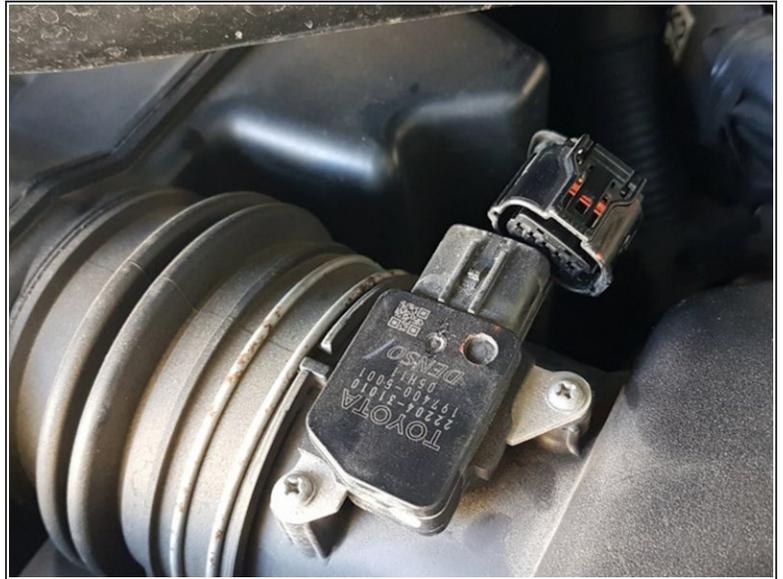


- Unplug (2) the connector

Step 4 — Loose the screw

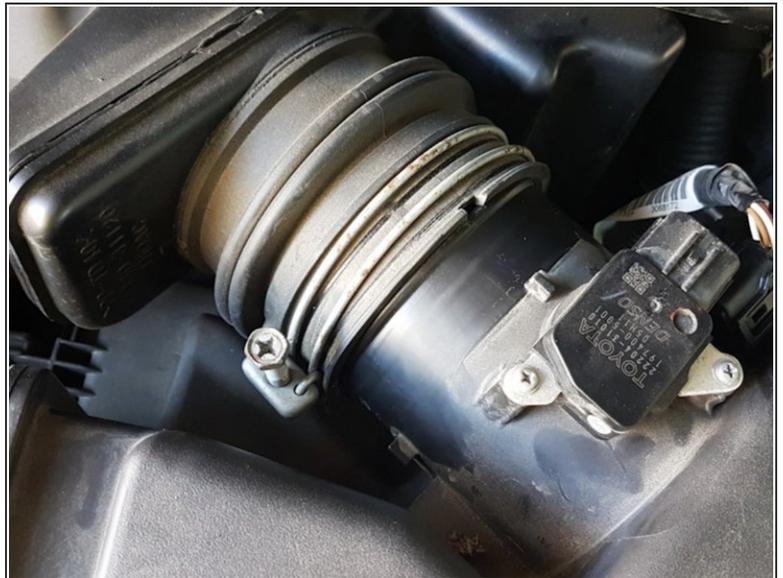

- Insert wisdom here.

Step 5 — Remove the lid

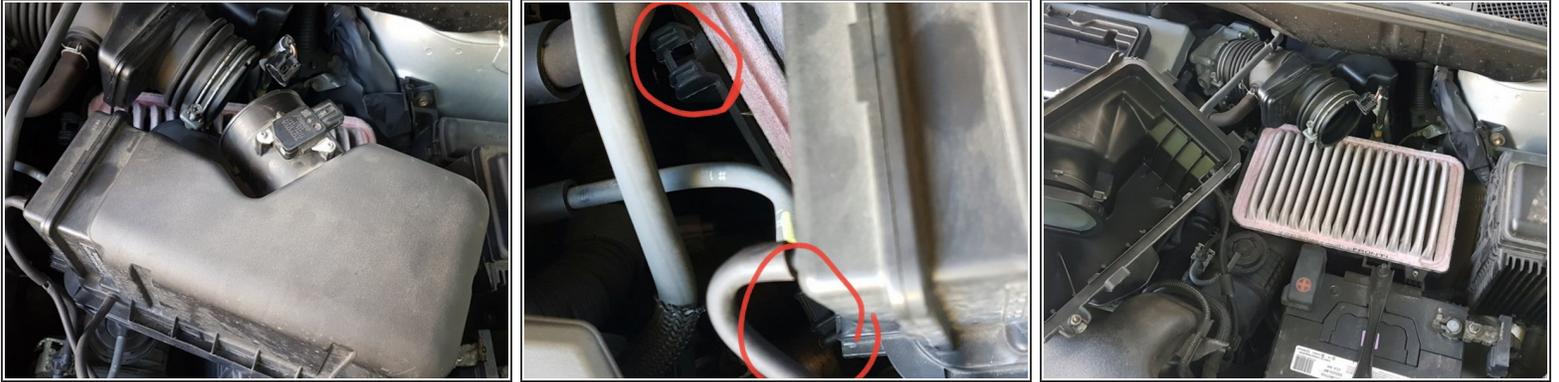

- Safely remove the lid from 2 grooves on the left side

Step 6 — Replace the air filter



- Replace the filter and assemble in reverse order.

To reassemble your device, follow these instructions in reverse order.