 




Swann Doorphone Video Intercom Wire Replacement

Replace the wires to bring the sound and display back to your Swann Doorphone Video Intercom.

Written By: Emily Stenke

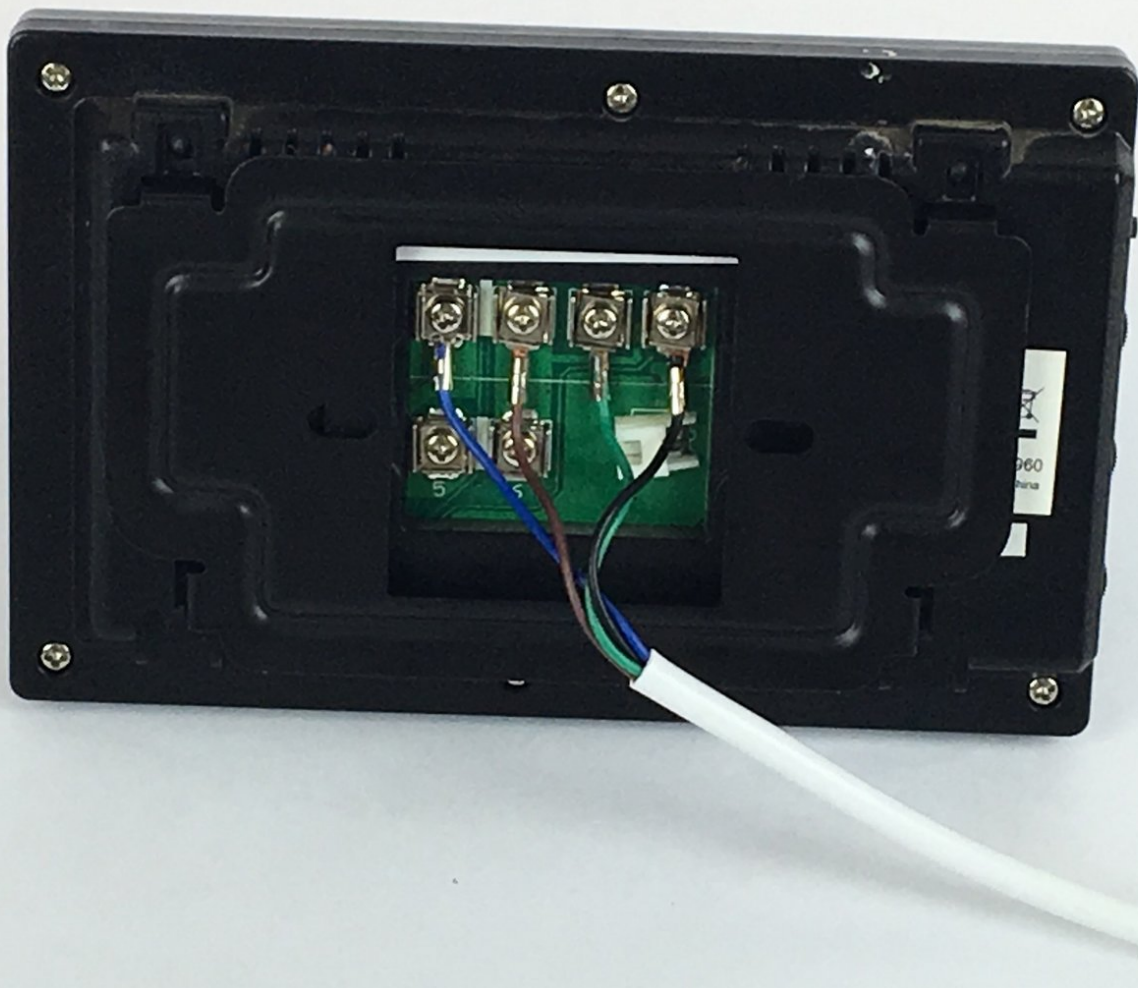

INTRODUCTION


This guide can be used to replace the wires to ensure that all the wires are connected correctly for your Swann Doorphone Video Intercom.



TOOLS:

- [JIS #0 Screwdriver](#) (1)
-

Step 1 — Wire

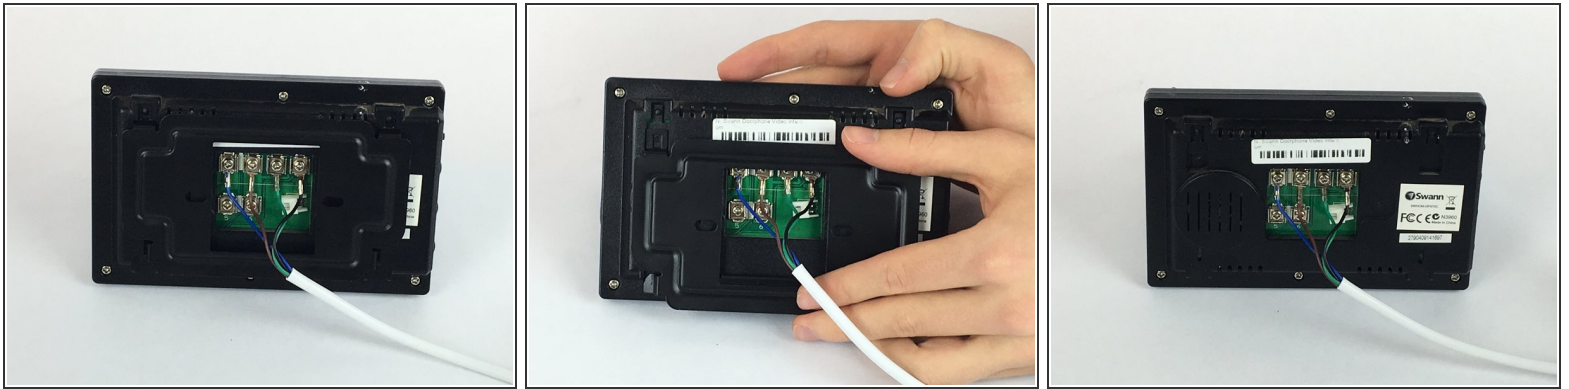


- Flip the monitor of the Swann Doorphone over so that the underside is facing up.
- Grip the sides of the black rectangular frame where they extend outwards and pull down.
- After pulling down, pull the frame towards you to remove it from the monitor.

Step 2



- Using the JIS #0 screwdriver, unscrew the 2 mm screw in terminal 1 with the blue wire underneath.
- Pull the blue wire out from beneath the metal plate.

 
 Be careful when removing the screw from terminal 1, the metal plate behind the screw is not connected and may fall off.

Step 3



- Flip the outdoor camera over so that the underside is facing up.
- Remove the back cover by grabbing the sides of the camera and pulling towards your body.

Step 4

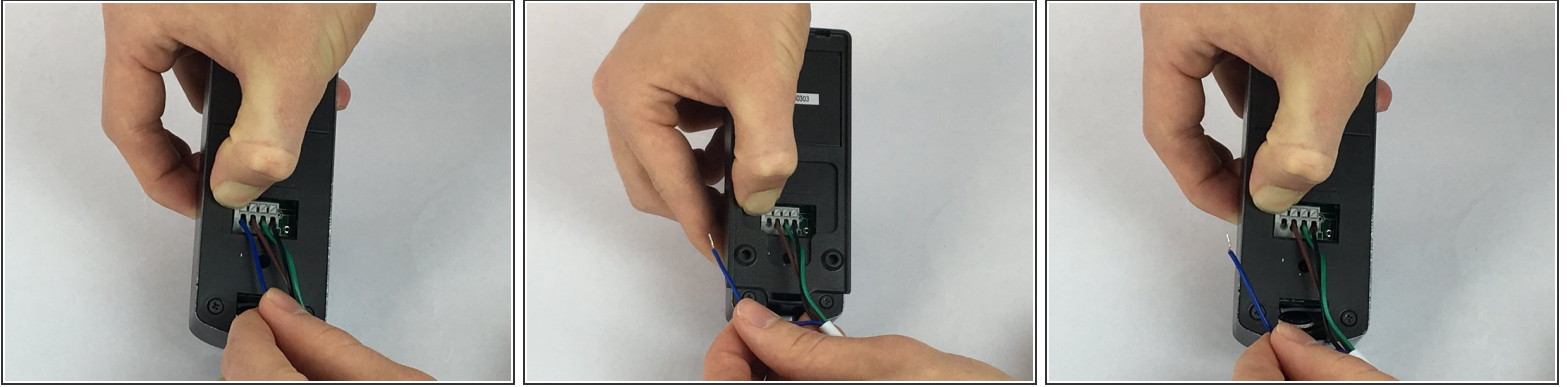

- With the back cover of the outdoor camera off, press the first gray square button with blue wire down.
- While pressing the gray square button, remove the blue wire from the first opening under the button.
- ☑ Be sure to remove the same color wire for the outdoor camera as was used for the indoor video intercom.
- ⓘ In this guide, we are using the blue wire in terminal 1 for the audio. As a recommendation; * Use the blue wire in terminal 1 for the audio wire. * Use the brown wire in terminal 2 for the ground wire. * Use the green wire in terminal 3 for the video wire. * Use the black wire in terminal 4 for the power wire.

To reassemble your device, follow these instructions in reverse order.