



# Nikon D7100 LCD Screen Replacement

If the LCD screen is cracked or broken you will need to disassemble the camera to fix this problem.

Written By: Wesley Eveld





## TOOLS:

- [JIS #000 Screwdriver](#) (1)
-

## Step 1 — LCD Screen




- Remove the five screws on the bottom of the camera with a JIS #000 head screwdriver.

## Step 2



- Remove the 3 screws under the battery flap and remove the bottom cover.

### Step 3

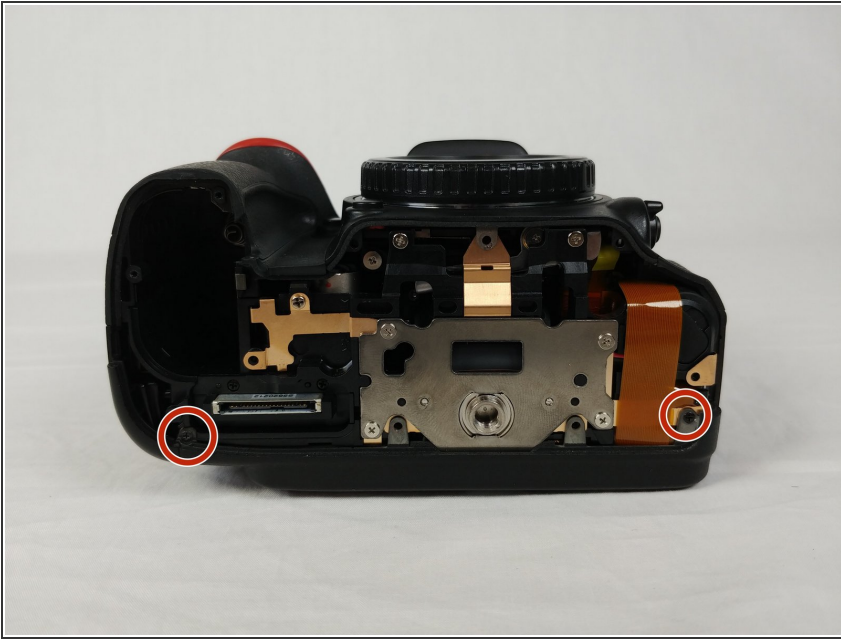

- Remove the 2 screws inside the camera on the back corners.

### Step 4



- Open the HDMI flap and remove the 2 screws.



## Step 5



- Remove the screw next to the camera strap loop.

## Step 6



- Remove the 2 screws on each side of the view finder.

## Step 7




- Remove the 2 screws above and below the SD card flap.

## Step 8




- Peel off the adhesive leather screw cover and remove the 2 screws under it.

## Step 9

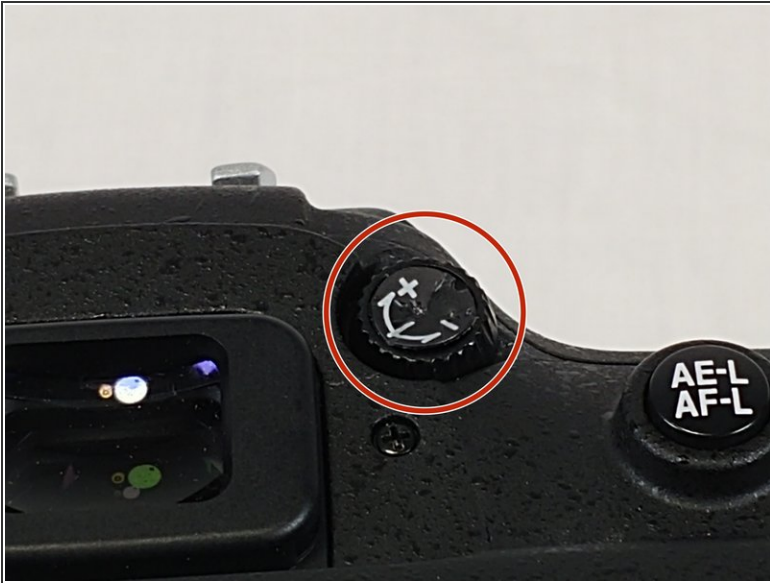

- Remove the Diopter adjustment control sticker and remove the screw under it.


## Step 10

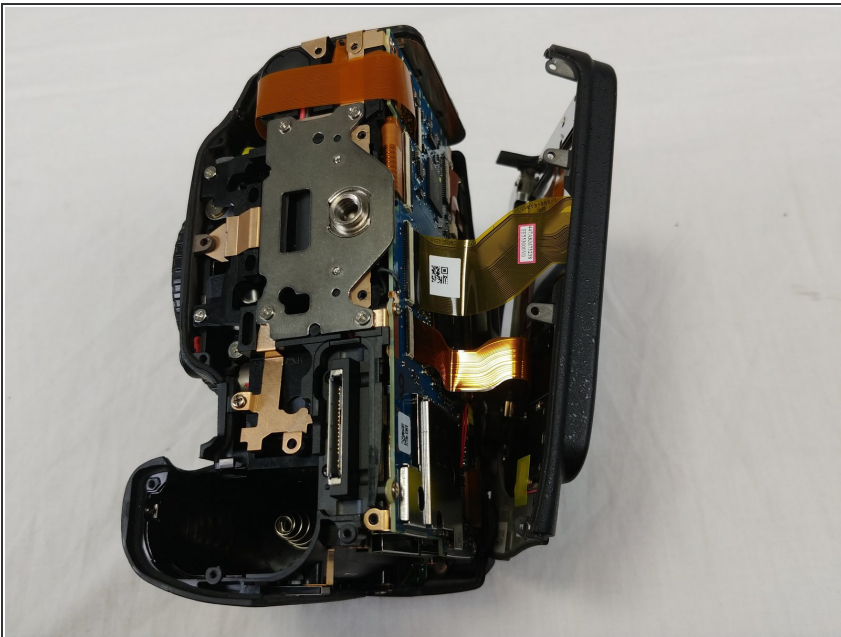

- Separate the back panel of the camera from the actual camera.
- ⚠ Be careful not to tear any of the ribbon cables.



## Step 11

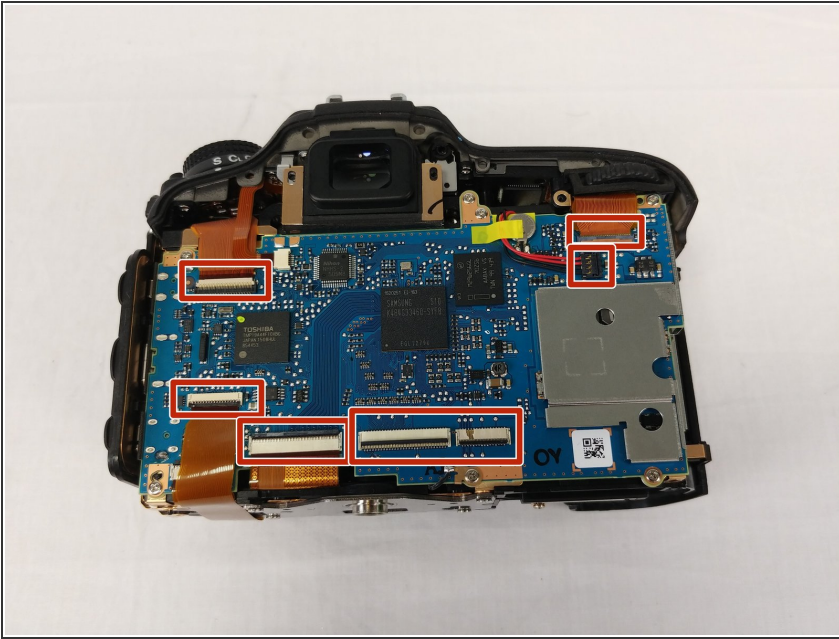

- Disconnect the LCD ribbon cables and power cable from the motherboard.


## Step 12



- Unscrew all 16 screws around the back plate of the camera.



## Step 13

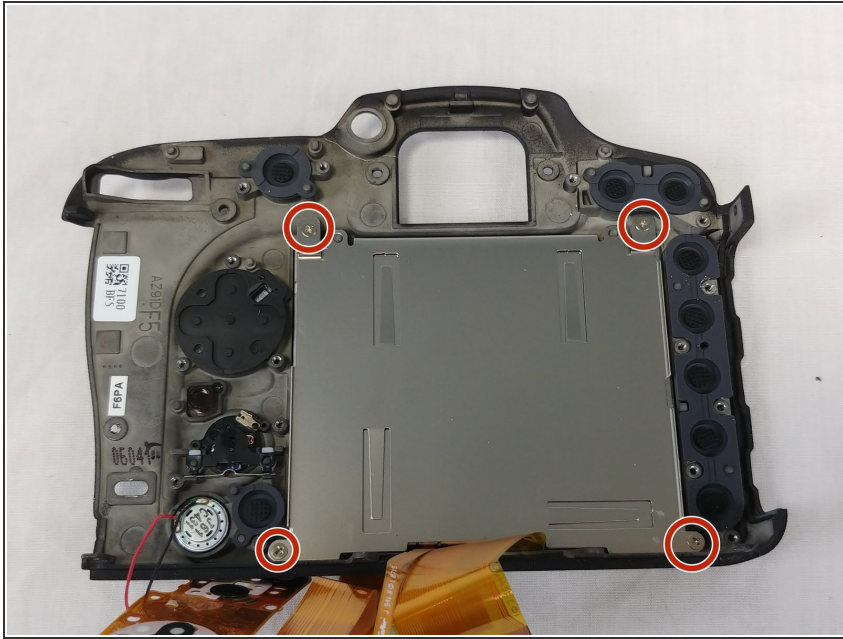

- Then unscrew the remaining screws holding the back plate to the LCD.
- Then simply remove the plate with the LCD.

To reassemble your device, follow these instructions in reverse order.