



# Nikon D7100 Battery Replacement

Make sure battery for the camera is fully charged. If it is charged and still not working as it should, use this guide to replace the battery.

Written By: Wesley Eveld



## Step 1 — Battery



- Turn the power off on the camera by turning the power dial.

## Step 2



- Open the battery compartment on the bottom of the camera by sliding the release button.
- This will release the door and you will be able to open it.

## Step 3



- Push in the yellow tab to release the battery.
- Slowly pull the battery out of the camera.
- ⚠ When putting the new battery in, do not force it in, it should go in smooth and easily.

To reassemble your device, follow these instructions in reverse order.