

DBPOWER RD-810 Top Cover Replacement

Remove the top cover to access the internal components of the RD-810.

Written By: John Russell



INTRODUCTION

The top cover of the RD-810 protects the internal components. It must be removed to conduct any repairs.

TOOLS:

۶

• Phillips #3 Screwdriver (1)

Step 1 — Top Cover



- (i) Make sure the projector is unplugged before starting
- Place the projector upside down to access the screws on the bottom.
- Remove the five 7mm long screws using a #3 Phillips screwdriver at least 2 inches long.

Step 2



• Flip the projector over and then remove the cover by lifting it up.

To reassemble your device, follow these instructions in reverse order.