


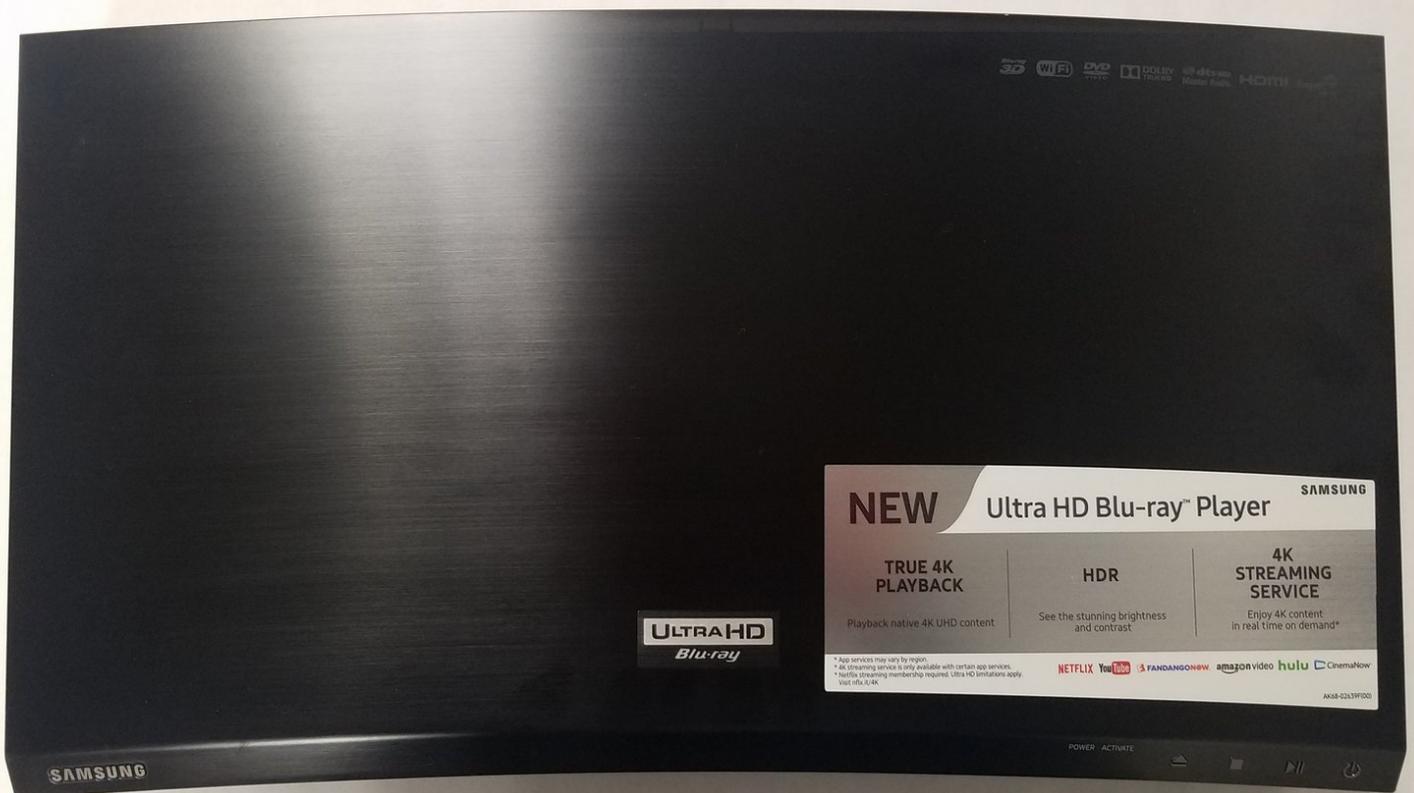

Samsung UBD KM85C Outer Shell Replacement

This guide is for replacing a scratched, cracked, bent, or otherwise damaged outer casing of the Blu-Ray Player.

Written By: Breanna Ainsworth



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Outer Shell



- On the back side of the unit, remove the three 8.1mm screws marked with a Phillips #1 screwdriver.

Step 2

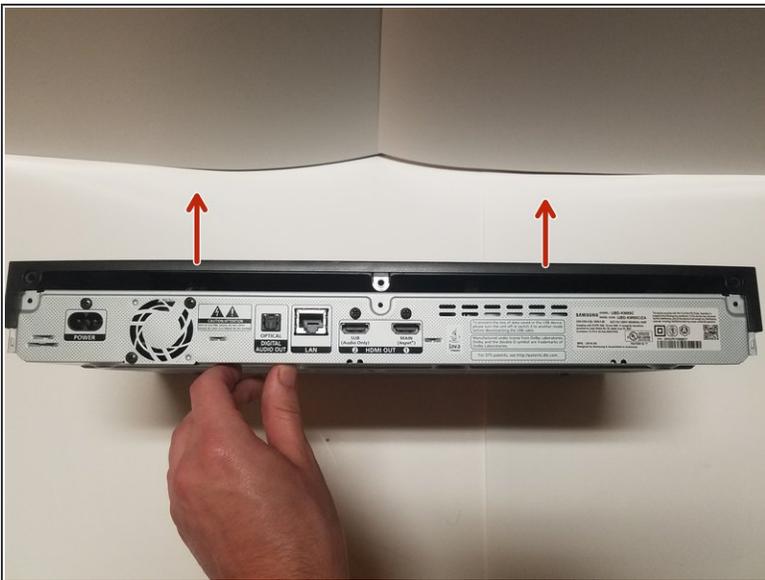

- From the back, lift the case upwards away from the unit then forwards, releasing the prongs on the front.

Step 3



- There is one group of wires located towards the front of the case and attached directly to the motherboard and the case. Using two fingers in a pinching motion, release the wire from the clip and disconnect it.

Step 4



- Remove the cover from the device.

To reassemble your device, follow these instructions in reverse order.