



Dell Inspiron 15-3543 RAM Replacement

Replace your RAM so that your computer stops showing the blue screen of death, and/or stops programs or the computer from running or booting slowly.

Written By: Brianna Blackburn



INTRODUCTION

Is the RAM in your Dell Inspiron 15-3543 defective or full? If so, here is the guide to fix the problem by simply replacing your RAM. All you need is the standard #0 Phillips Screwdriver head in order to remove the one screw involved with this replacement.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)

Step 1 — RAM



- Using a #0 Phillips screwdriver, remove the 2.0mm screw from the back of the device beside the vents.

Step 2

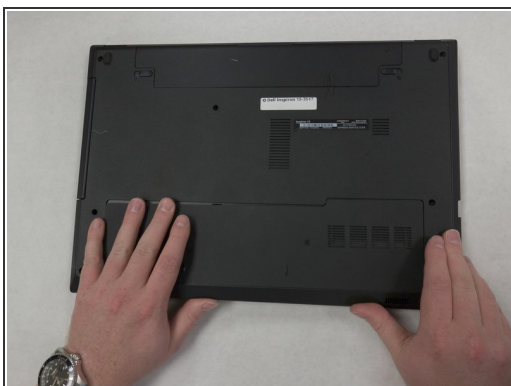

- Slide the panel off by placing your hands on top and, while using a little force, sliding your hands down.

Step 3



- Using two fingers, slide the two notches holding the RAM in place outwards.
- After the notches are moved outwards, the RAM will pop up and it can be pulled out.

To reassemble your device, follow these instructions in reverse order.