




Dell Alienware 18 Battery Pack Replacement

How to remove and replace a worn out battery for the Dell Alienware 18 laptop.

Written By: darrius

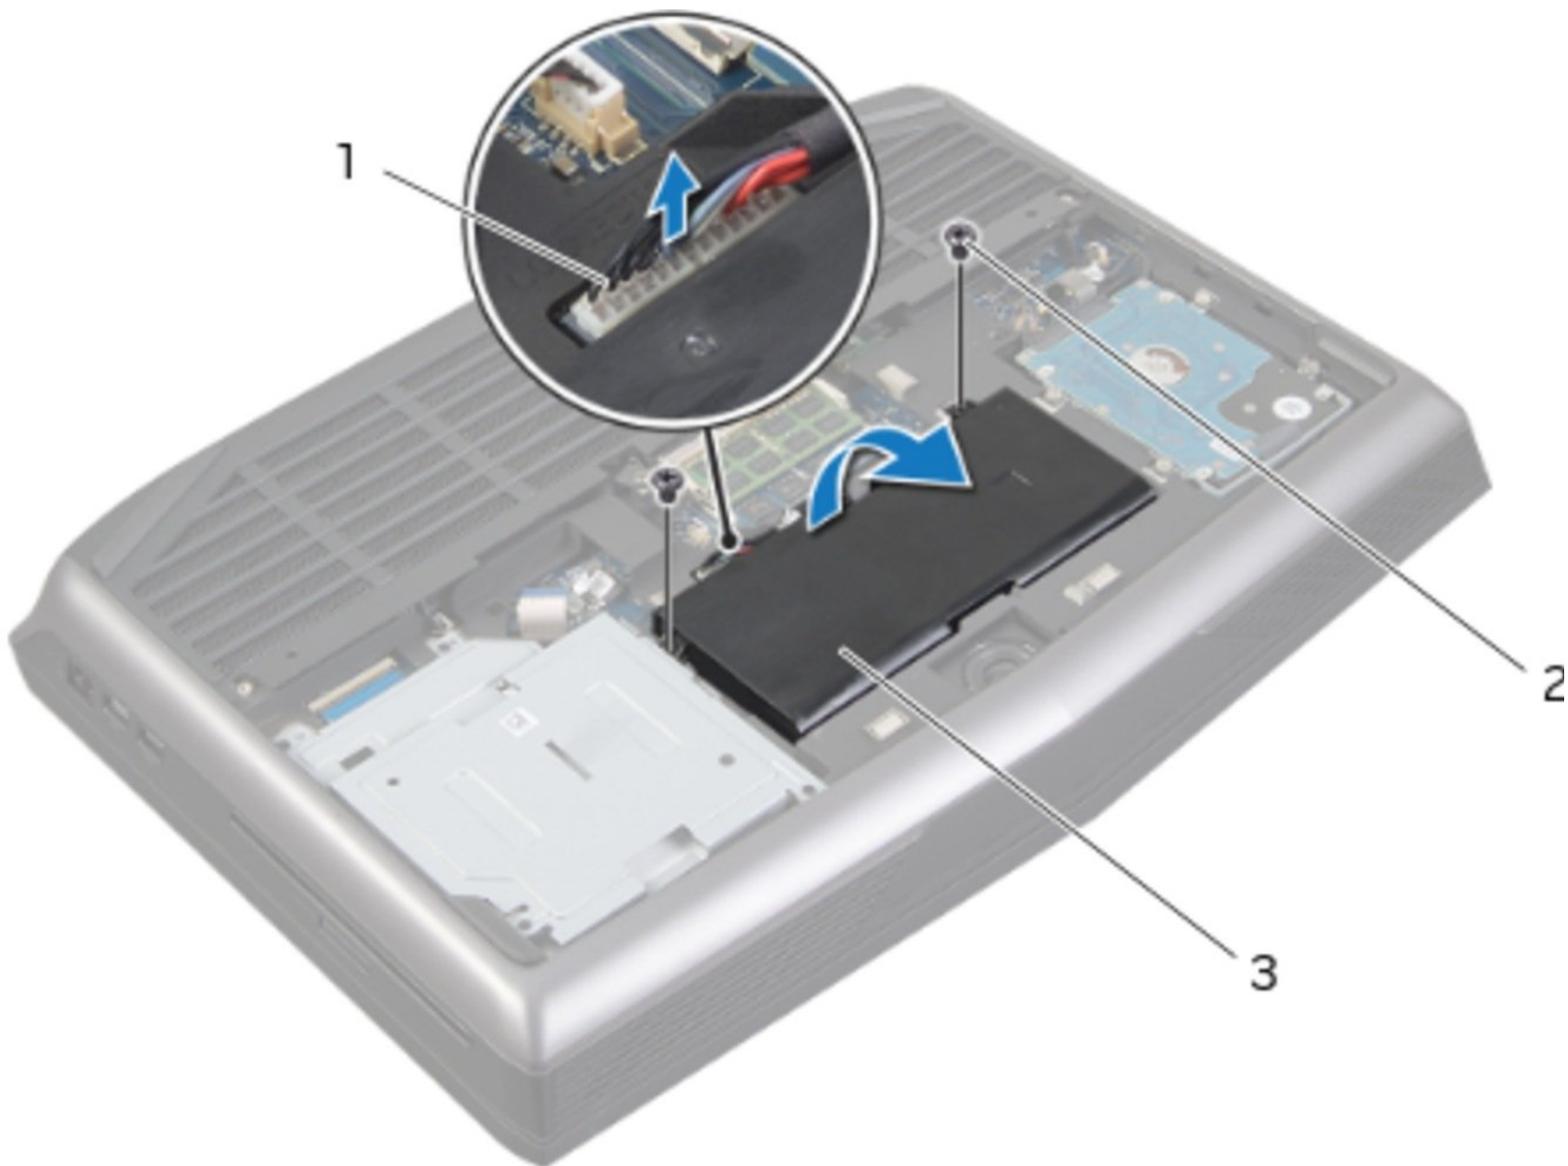

INTRODUCTION

This guide shows how to remove and replace the battery pack for the Dell Alien 18 laptop.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Alienware 17 and 18 Replacement Battery](#) (1)

Step 1 — Before You Begin



⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).

Step 2 — Remove the base cover screws



- Use a Phillips screwdriver to remove the three screws securing the base cover.

Step 3 — Slide the Cover



- Slide the base cover towards the rear of the computer and lift it off the computer base.

Step 4 — Prelude



- ⚠ **WARNING:** Before working inside your computer, read the safety information that shipped with your

computer and follow the steps in [Before You Begin](#).

Step 5 — Remove the battery screws



- Use a Phillips screwdriver to remove the two screws securing the battery to the computer base.

Step 6 — Disconnect the battery cable



- Disconnect the battery cable from its connector by pulling it straight up from its socket.

Step 7 — Remove the battery



- Remove the battery from its recess.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.