



Cuisinart DCC-1100 Hot Plate Replacement

This guide will help you replace a broken or cracked hot plate on a Cuisinart DCC-1100 coffee maker.

Written By: Josh Harvey



INTRODUCTION

This guide will help you replace the hot plate of the Cuisinart DCC-1100. Please have a replacement hot plate ready for the installation and unplug the machine before beginning work.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Hot Plate



- Unplug the coffee maker.

Step 2

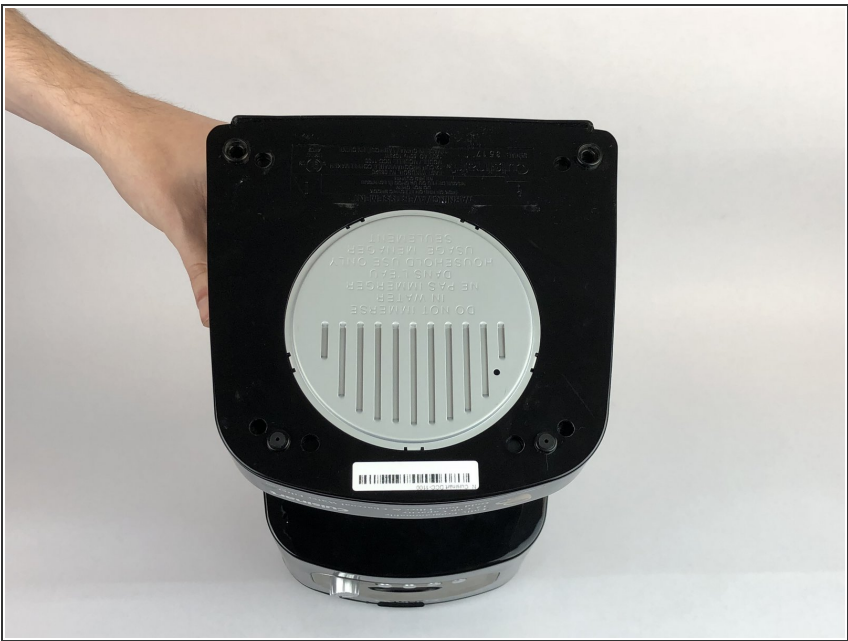

- Remove the coffee pot and place the coffee maker upside down.

Step 3



- Remove the five 1.6mm Phillips #1 screws from the bottom panel.

Step 4



- Remove the bottom panel.

Step 5




- Remove the two 1.6mm Phillips #0 screws from the retaining bracket on the heating element.

Step 6



- Remove the retaining bracket and allow it to hang off of the heating element.

Step 7

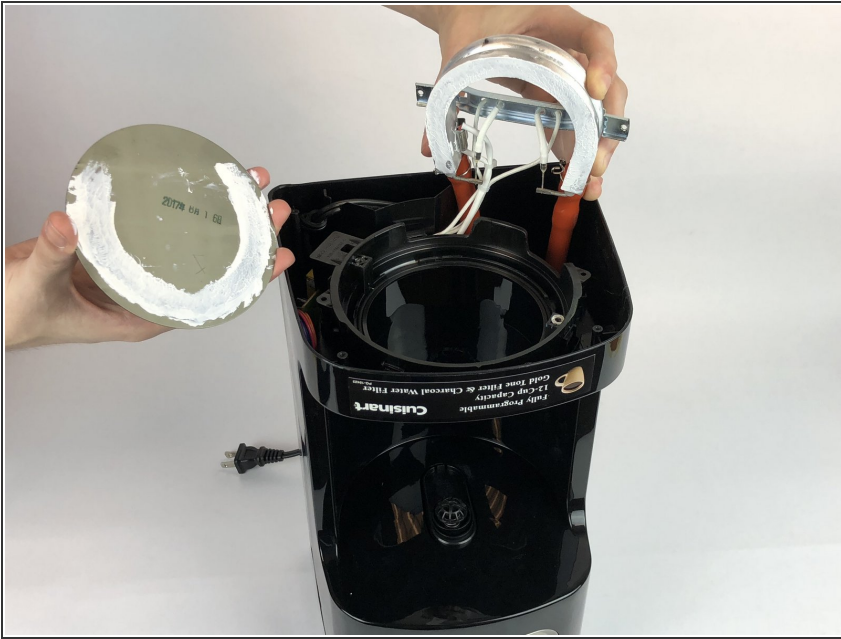

- Remove the hot plate from the heating element.
- ⓘ New thermal paste should be applied at time of installation.

To reassemble your device, follow these instructions in reverse order.