



Memorex CD Alarm Clock Radio Battery Replacement

This guide will show you how to replace a battery in the Memorex CD Alarm Clock Radio.

Written By: Aubrey Frank



**TOOLS:**

- [Fingers](#) (1)

**PARTS:**

- [2 AA Battery](#) (1)

Step 1 — Battery



- Pull the tab and lift the battery cover off using a finger.
- Replace old batteries with new batteries.

To reassemble your device, follow these instructions in reverse order.