


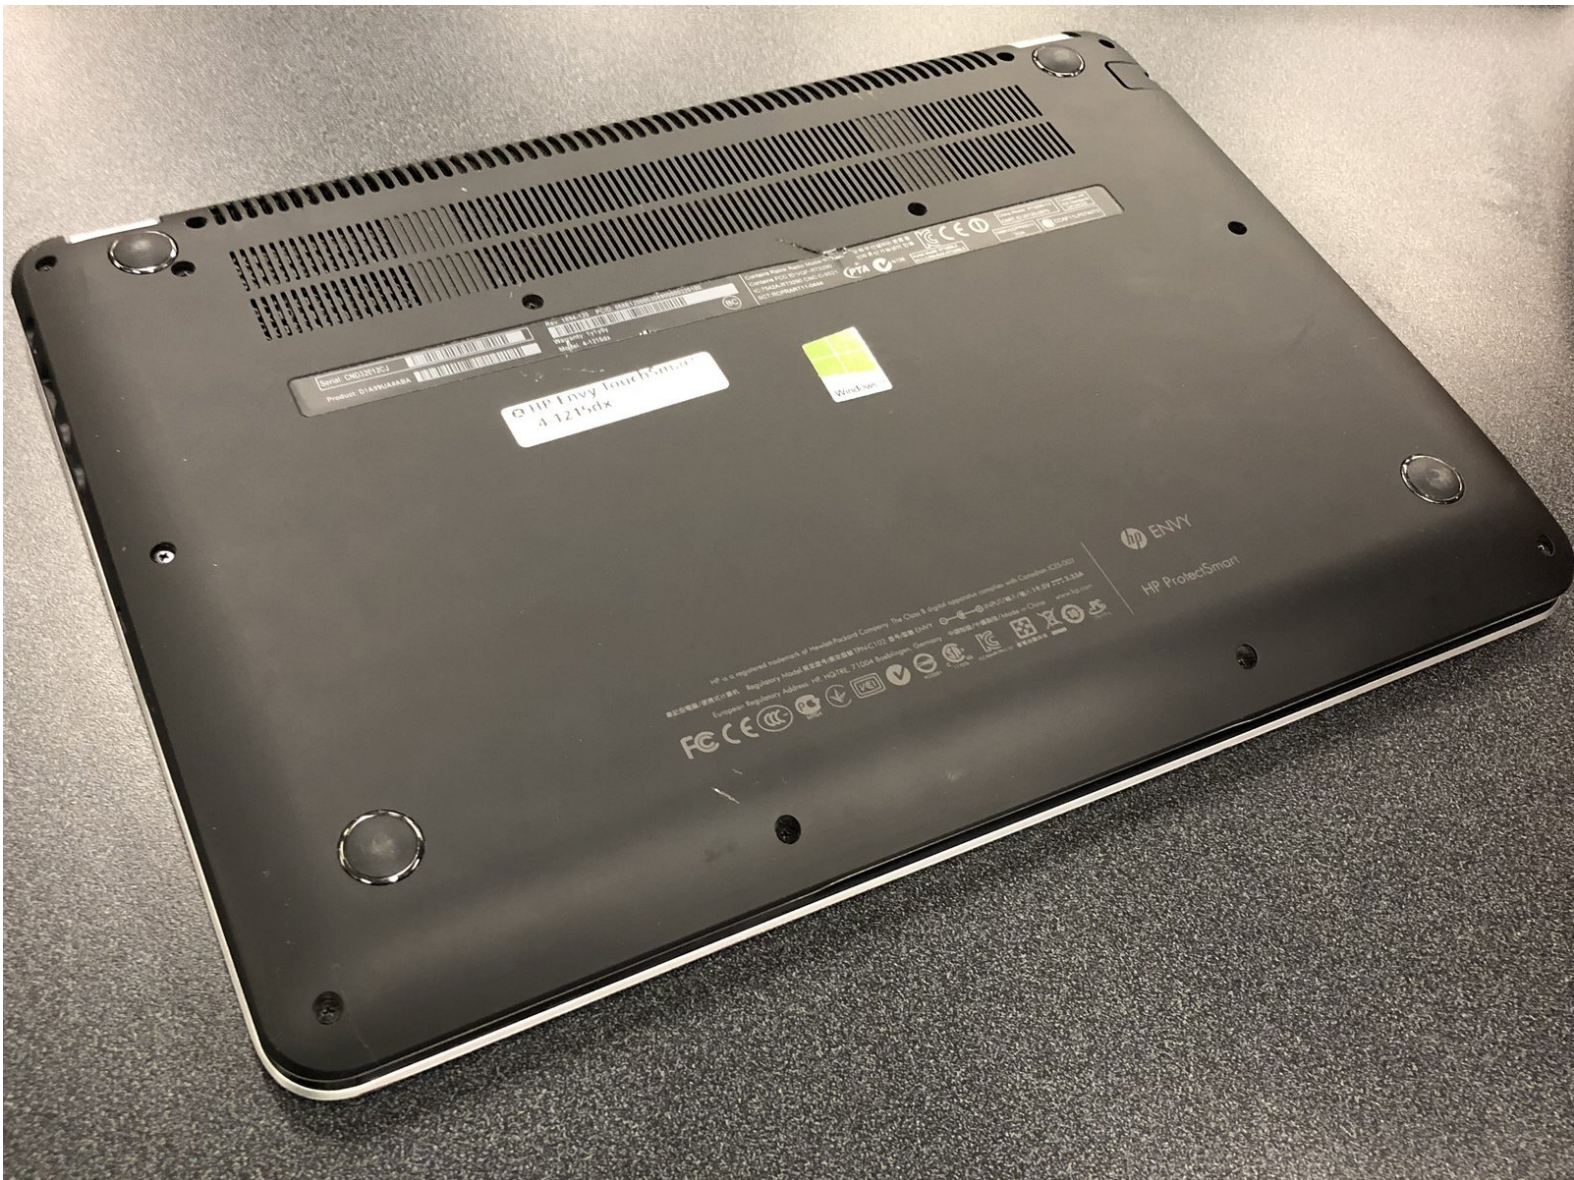

HP Envy TouchSmart 4-1215dx Back Panel Assembly Replacement

A guide on how to properly remove and replace the back panel on the HP Envy TouchSmart 4-1215dx.

Written By: Jaewonhong





INTRODUCTION

A guide on how to properly remove and replace the back panel on the HP Envy TouchSmart 4-1215dx.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel Assembly

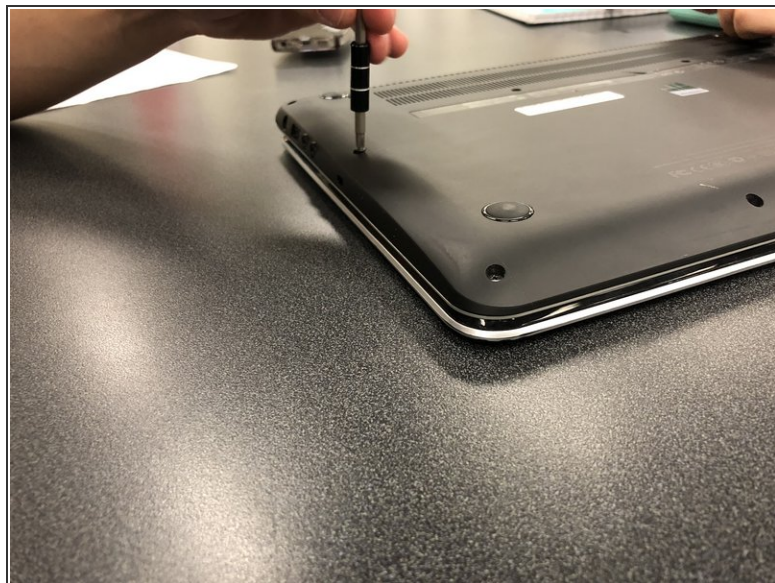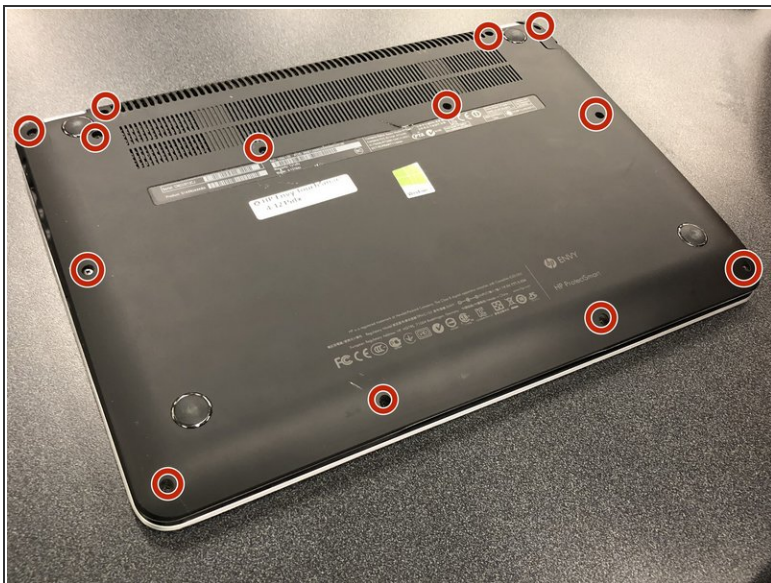

- Remove the thirteen Phillips #0 screws.

Step 2

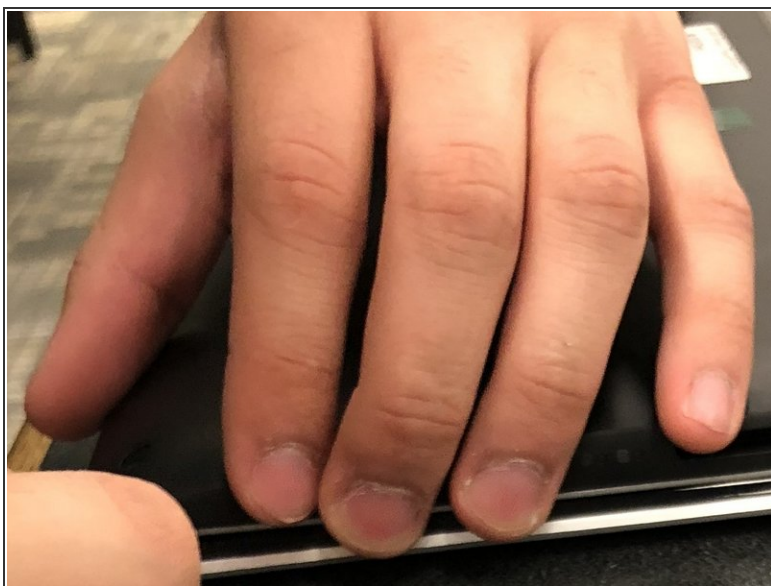

- Pull the panel up and off to remove from the laptop.

To reassemble your device, follow these instructions in reverse order.