



HP Envy Sleekbook m6-k010dx LCD Replacement

Replace your broken LCD to bring use back your HP Envy.

Written By: codi whittaker



INTRODUCTION

If your computer turns on but nothing is displayed on the LCD, it might be time to replace it. This guide will walk you through each step.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Battery




- Remove the twelve 9 mm Phillips #00 screws.

Step 2

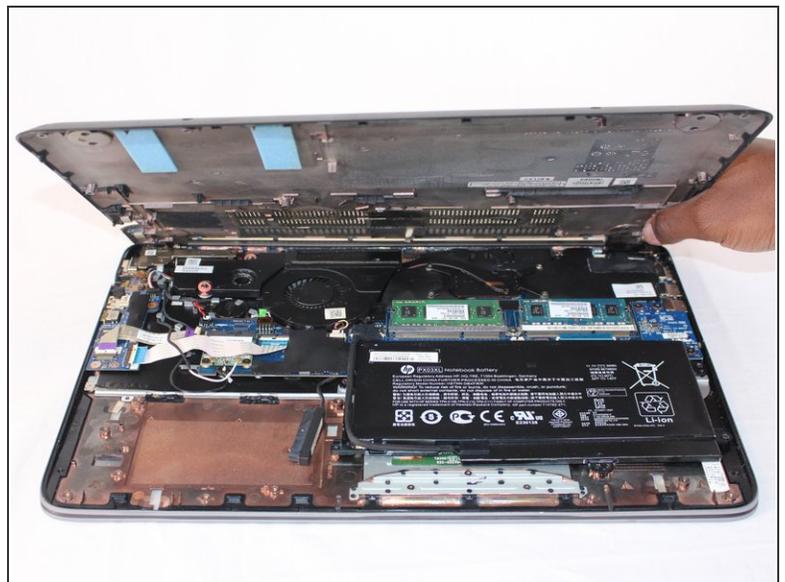


- Use the plastic opening tool and your hands to remove the bottom cover.

Step 3

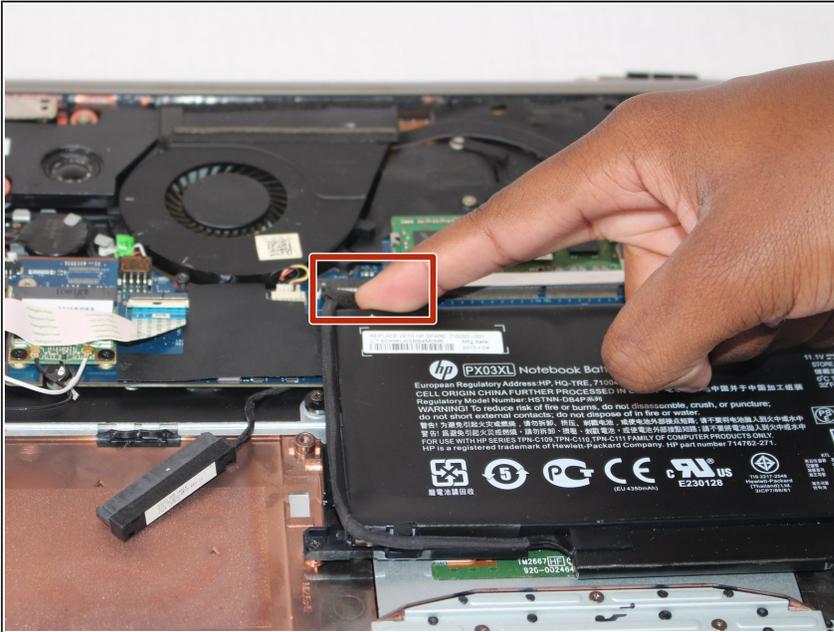

- Disconnect the battery power cable from the motherboard.

Step 4

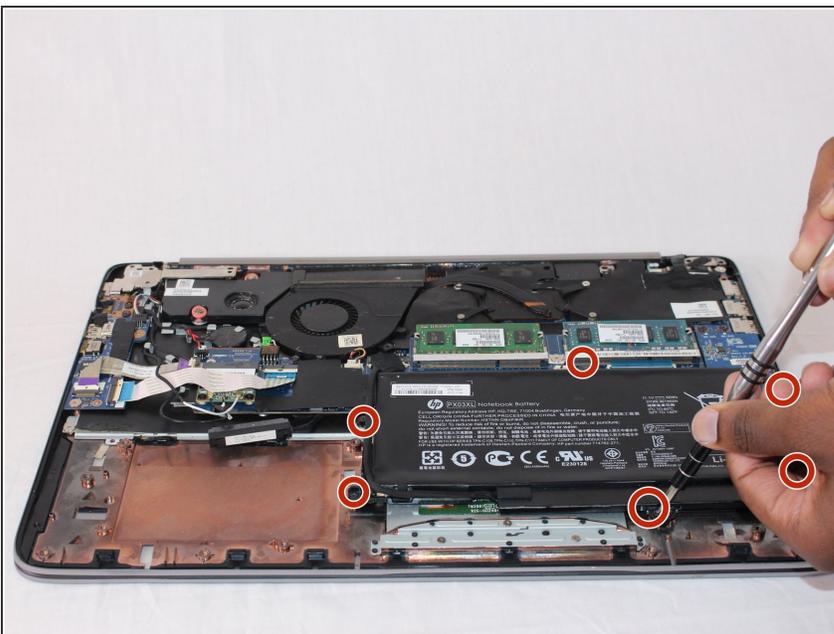


- Remove the six 6 mm Phillips #00 screws from the battery.

Step 5



- Lift the battery out of the laptop.

Step 6 — LCD

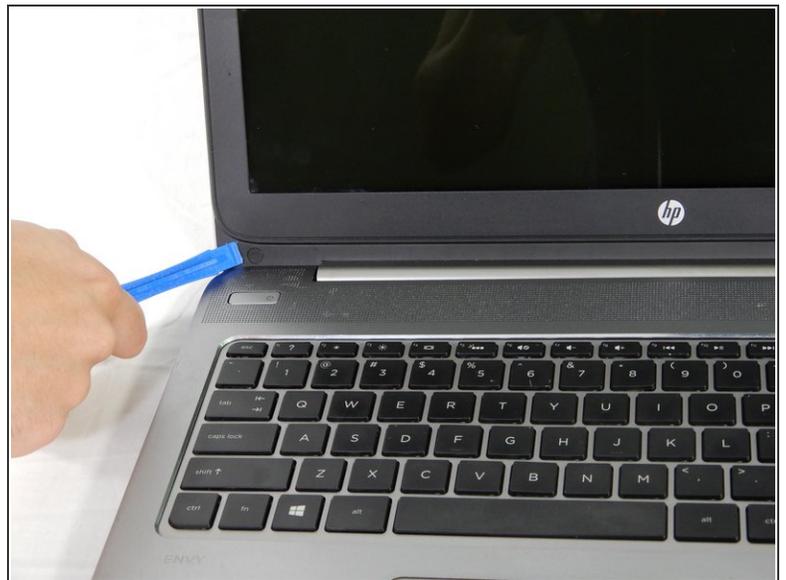

- Remove the stickers from the bottom left and right corner of the device with a plastic opening tool.

Step 7




- Remove the two 2.5mm Phillips #00 screws found underneath the previously removed stickers.

Step 8



- Use the plastic opening tool to pry the bezel free from the LCD housing.

Step 9

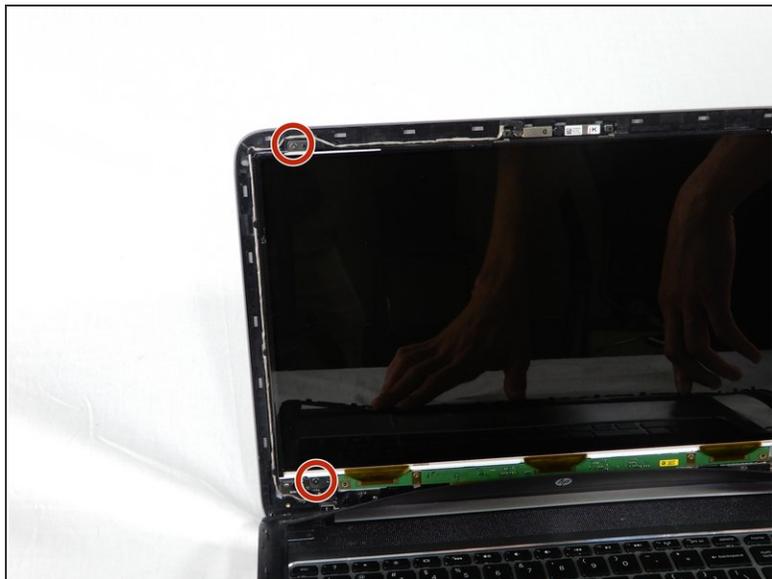

- Remove the four 2.5mm Phillips #00 screws located in each corner of the LCD screen.

Step 10



- Use the plastic opening tool to remove the LCD screen from its housing.
- Lay the LCD screen flat on the keyboard.

Step 11



- Disconnect the cable which connects the LCD to the motherboard.
- Pul the LCD screen out.

To reassemble your device, follow these instructions in reverse order.