



# Dell Vostro 14 3468 Base Cover Replacement

Written By: Johnathan Hammond






## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery

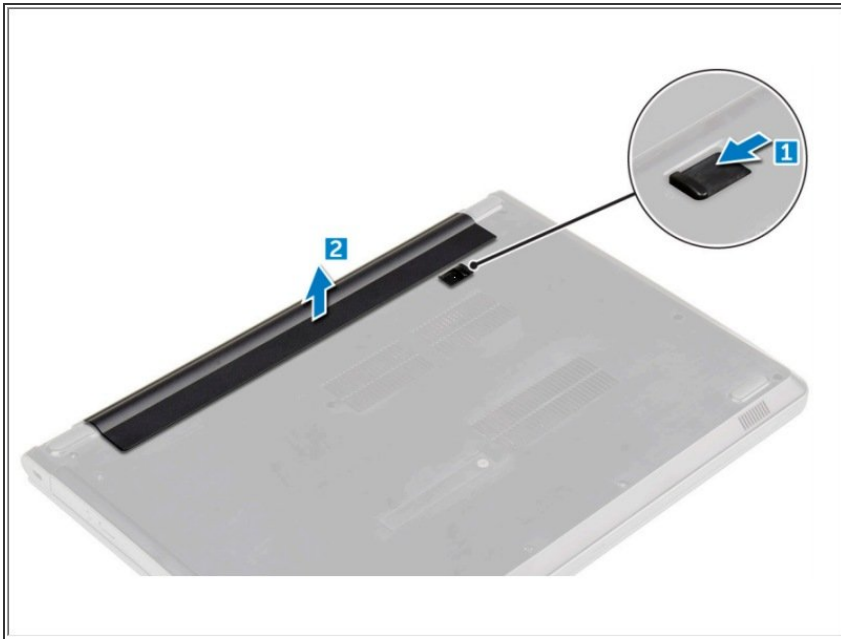

- Slide the release latch to unlock the battery [1].
- Remove the battery from the computer [2].

## Step 2 — Optical-Disk Drive

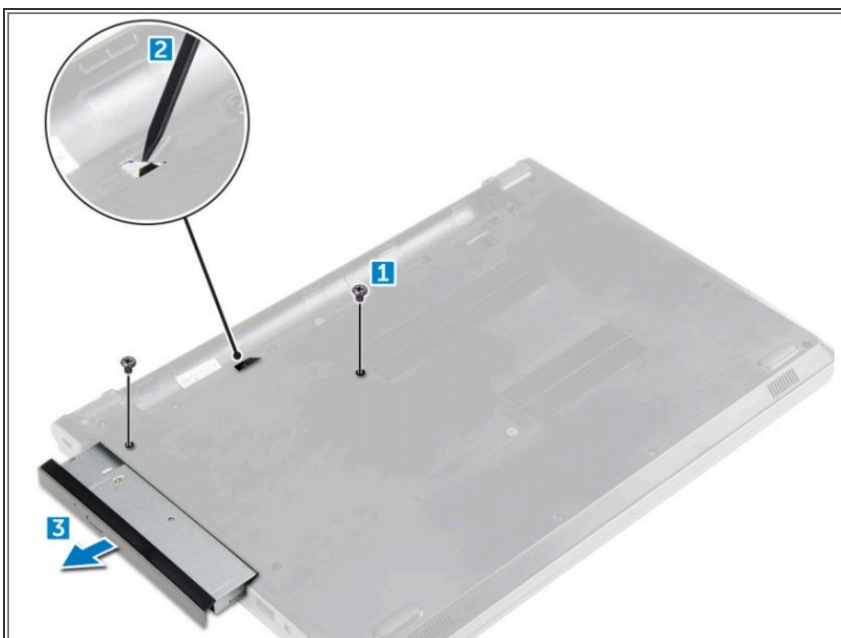

- Remove the screw that secures the optical drive to the computer [1].
- Using a plastic scribe, push the tab to release the optical drive [2].
- Slide the optical drive out of the computer [3].

## Step 3 — KeyBoard



- Release the keyboard by prying on the keyboard release tabs using a plastic scribe [1].
- Slide and lift the keyboard to access the keyboard connector cable under the keyboard [2].

## Step 4




- Disconnect the keyboard cable from the system board.
- Lift the keyboard cable to remove it from the computer.

## Step 5 — Base Cover




- Disconnect the optical drive connector and lift it to remove it from the system board [1].
- Remove the screws inside the palmrest [2].

## Step 6

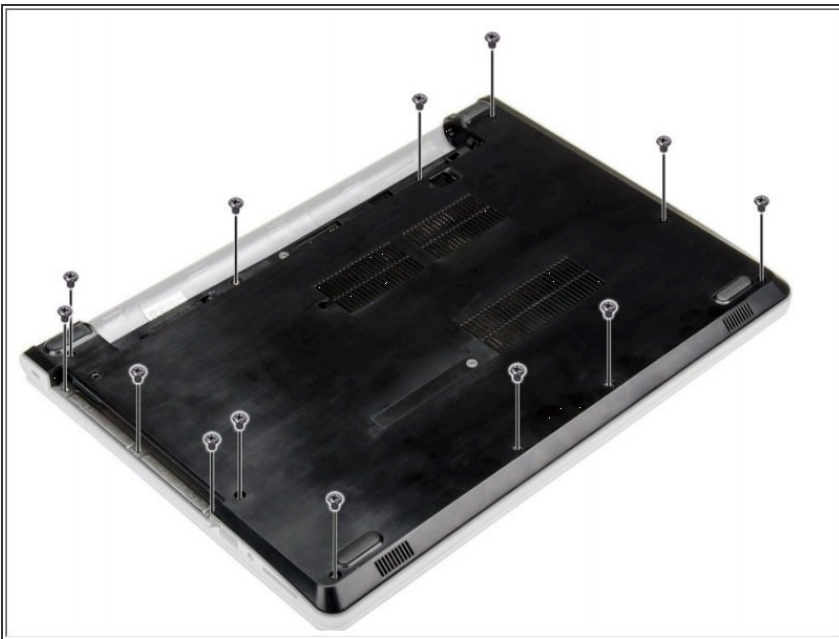

- Remove the screws that secure the base cover to the computer

## Step 7

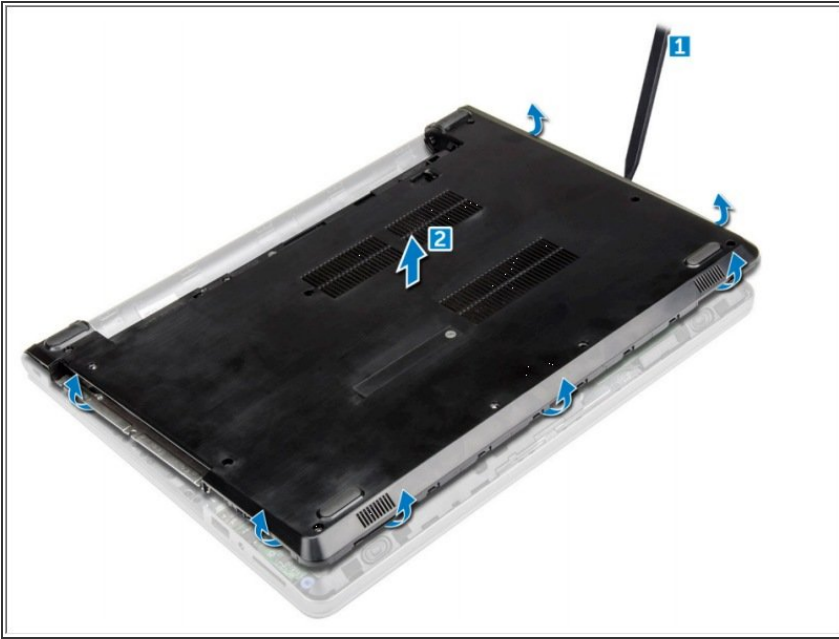

- Pry the edges of the base cover [1].
- Lift the base cover and remove it from the computer [2].

To reassemble your device, follow these instructions in reverse order.