


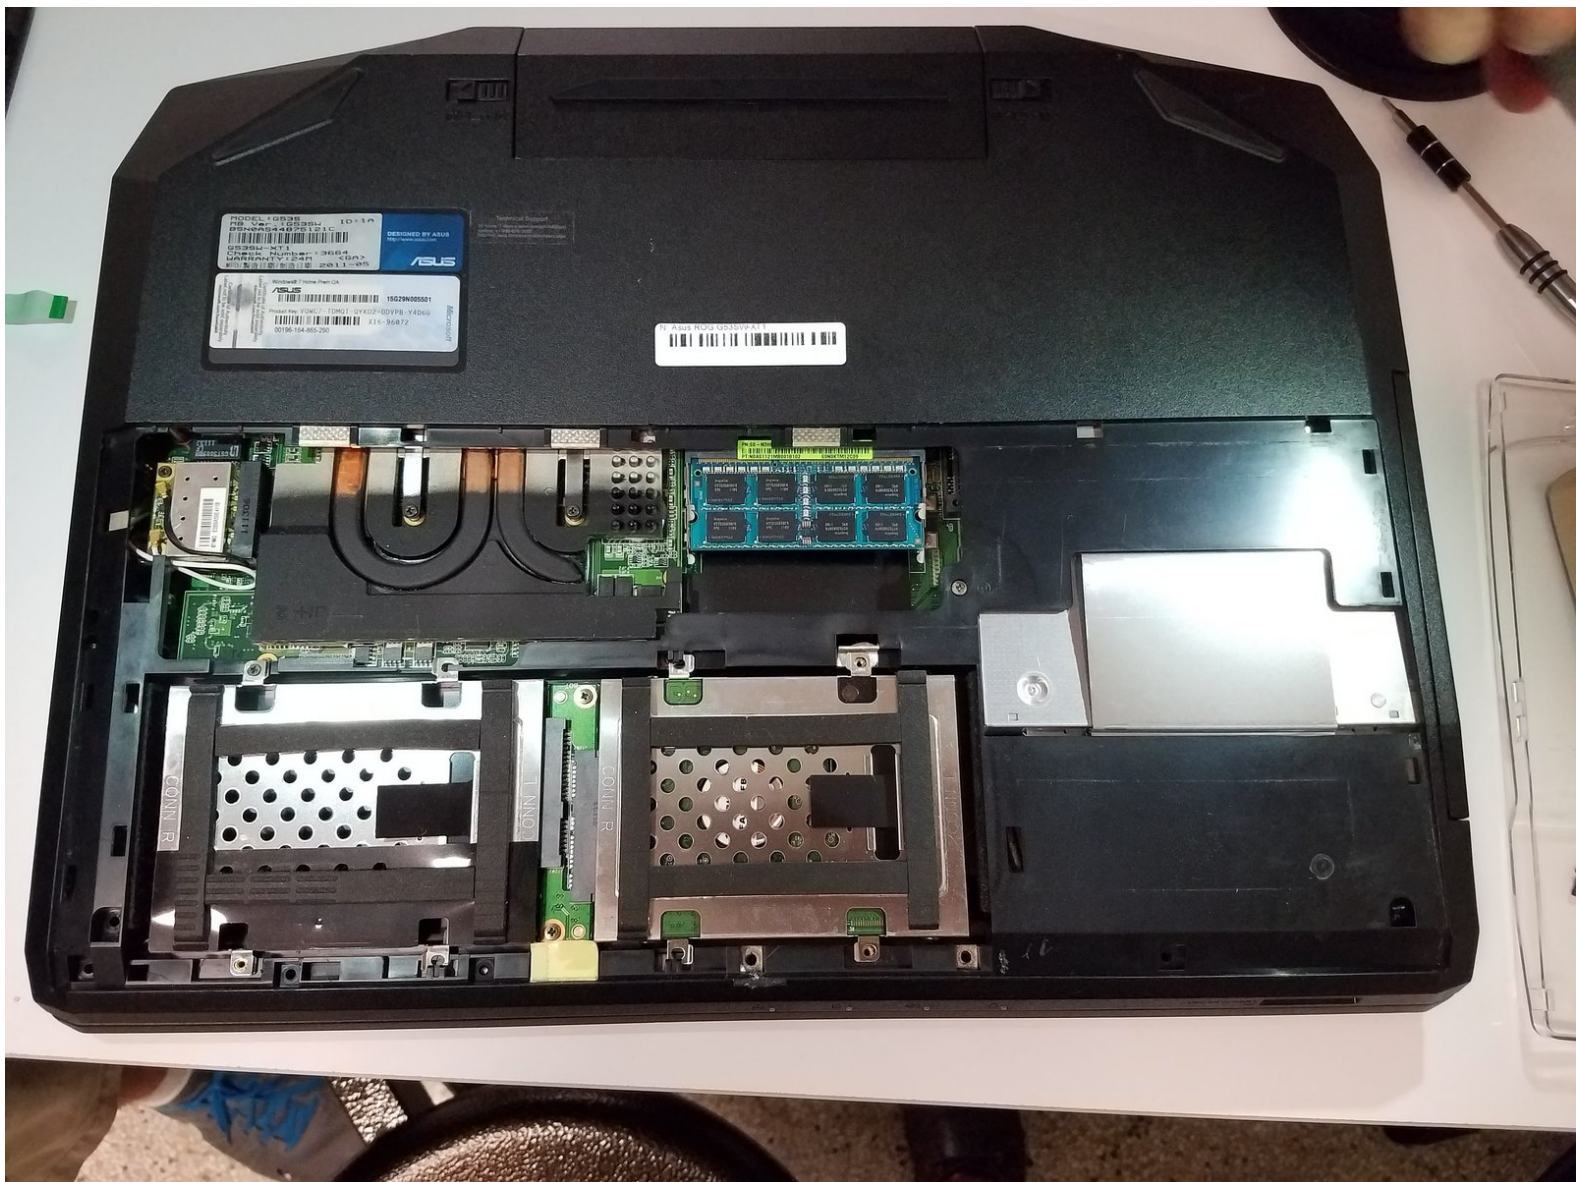

Asus ROG G53SW-XT1 RAM Replacement

This is a guide on how to access, uninstall, and install a RAM card.

Written By: sia





TOOLS:

- [Spudger](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)

Step 1 — Battery




- Unplug the power cable and flip the computer over.

Step 2





- Unlock the battery by pushing the switch to the right.

Step 3

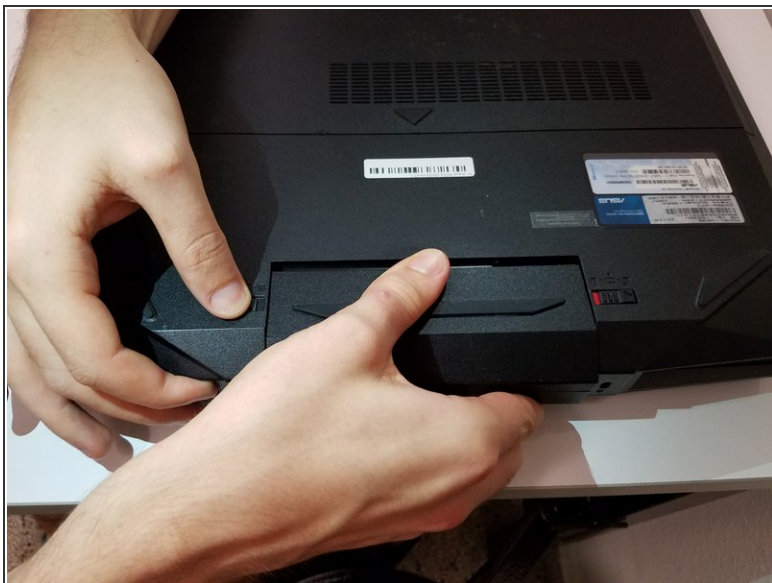


- Push and hold the left switch, then pull the battery out.

Step 4 — Back Panel

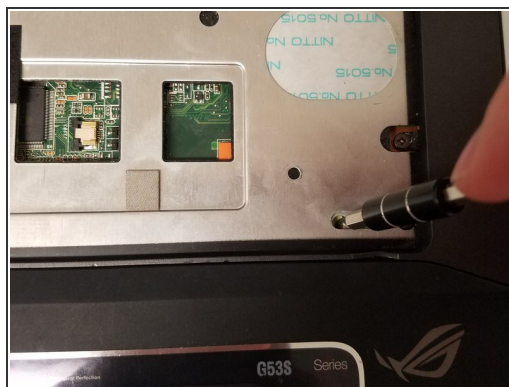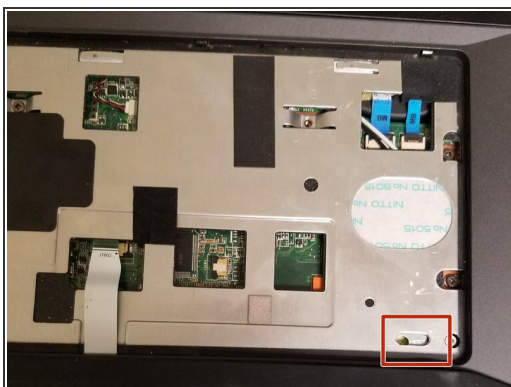


- Insert your screwdriver into the locking mechanism and slide it to the left. This will unlock the hand rest and allow you to pull it free.

Step 5

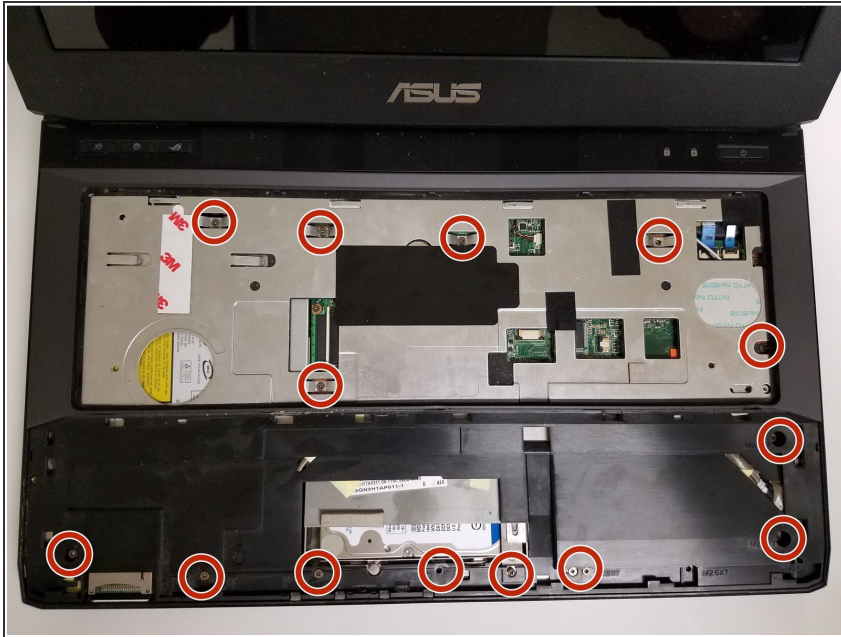


- Remove the fourteen Phillips #0 screws.

Step 6

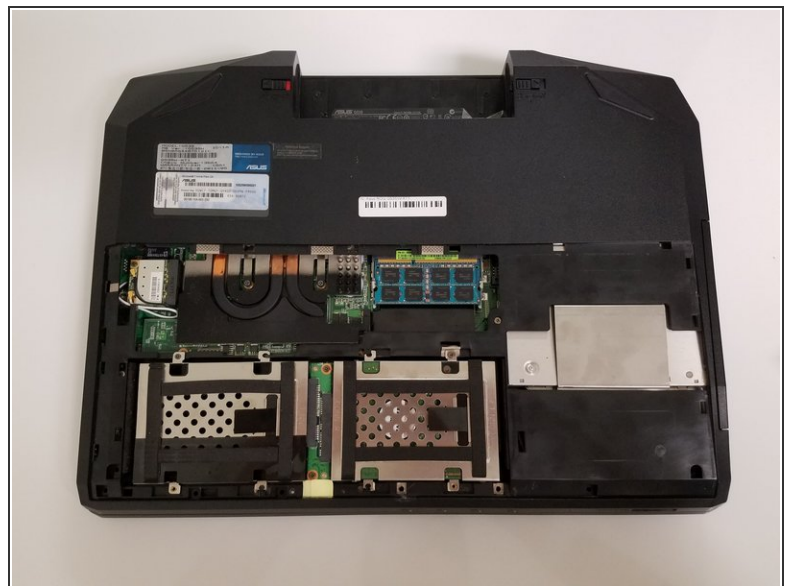

- Flip the laptop over and pull off the bottom cover.

Step 7 — RAM

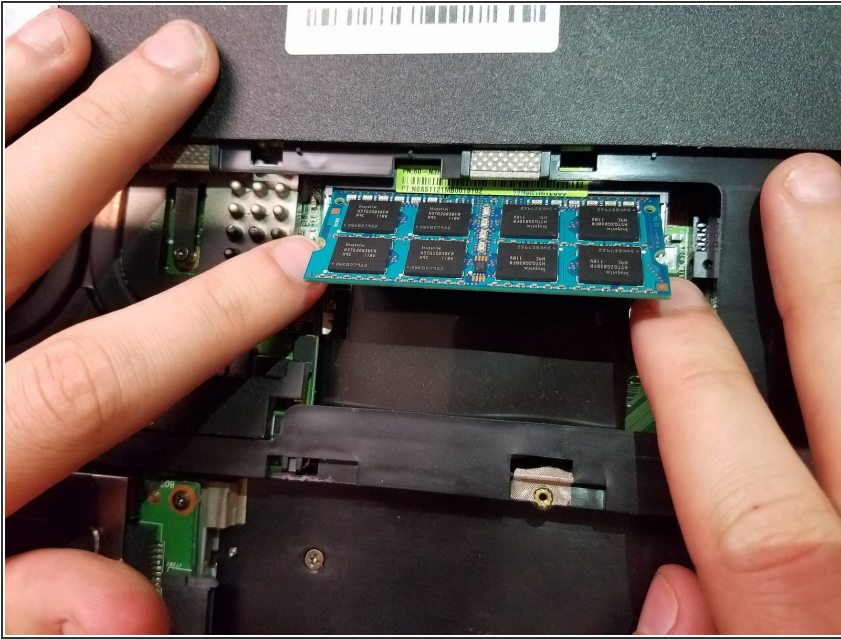

- Push the metal tabs at the side of the RAM away from one another.
 - ⓘ The RAM should pop up.
- Pull the RAM out.

To reassemble your device, follow these instructions in reverse order.