


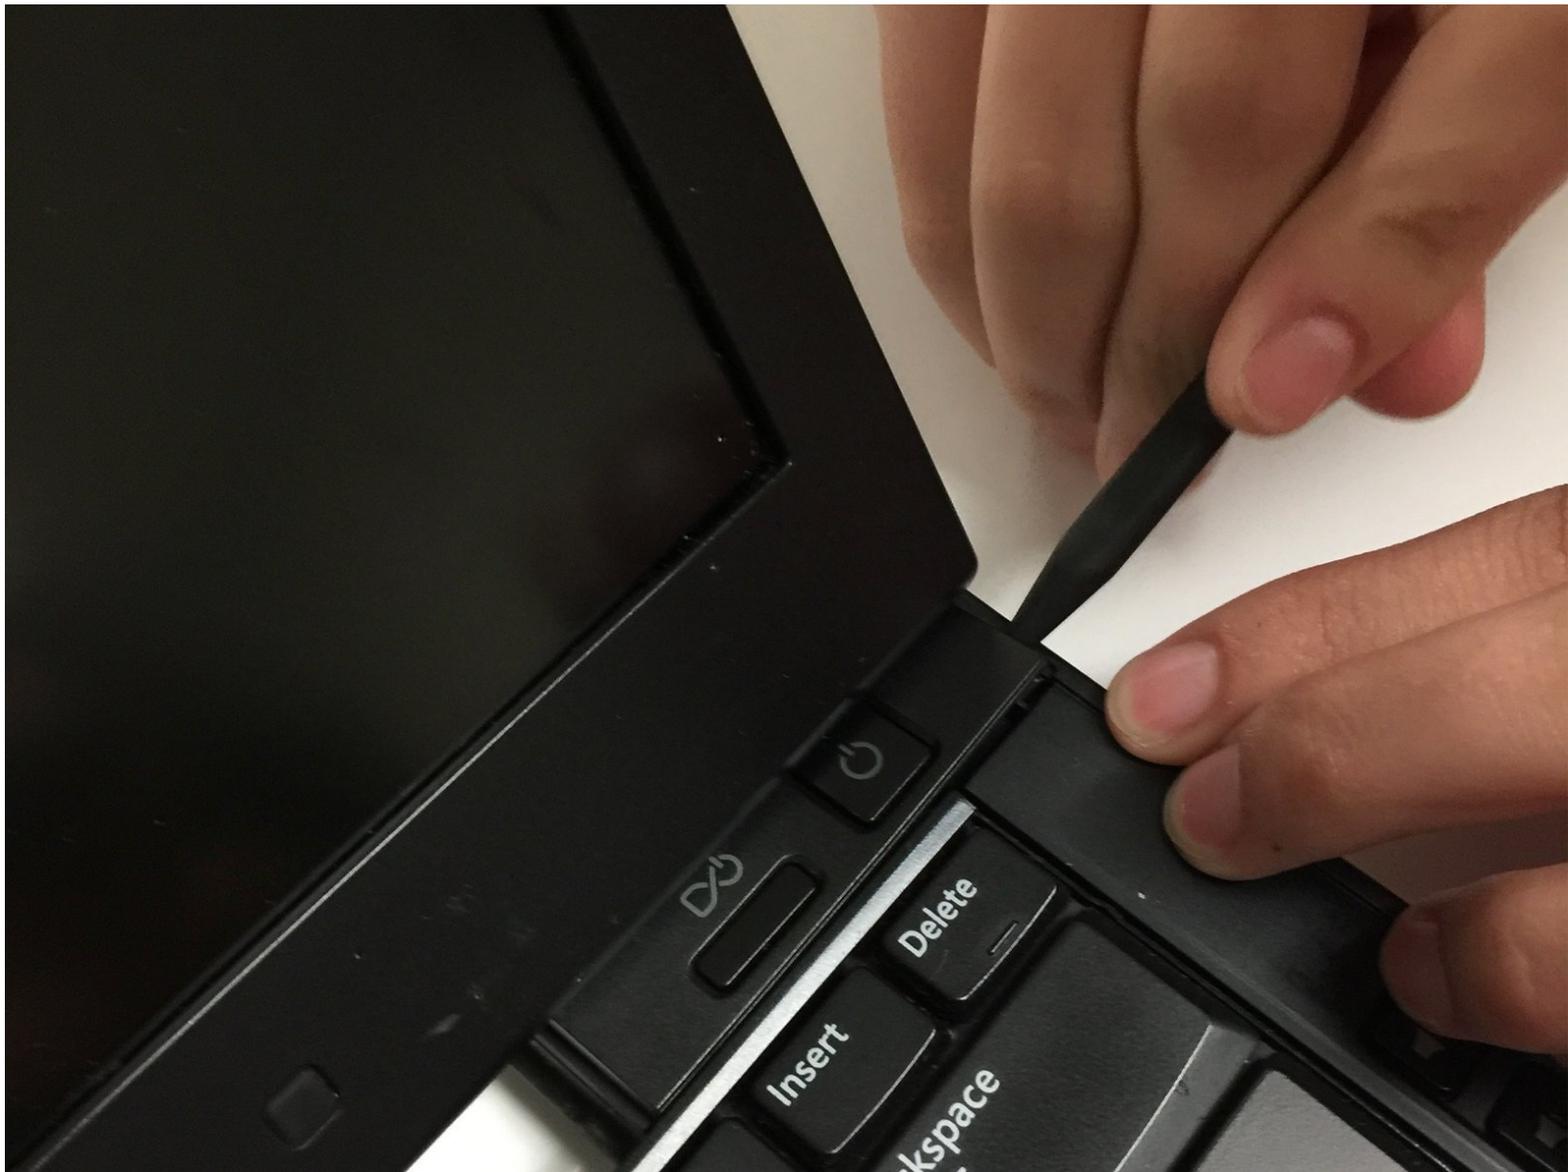

# Dell Latitude E4310 Keyboard Replacement

This guide will help replace the keyboard.

Written By: Laura Lujan



---

## INTRODUCTION

Use this guide to replace an unresponsive or sticky keyboard on your Dell Latitude E4310.

---

### TOOLS:



- [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery




- Power down the laptop and remove all power cords.

## Step 2

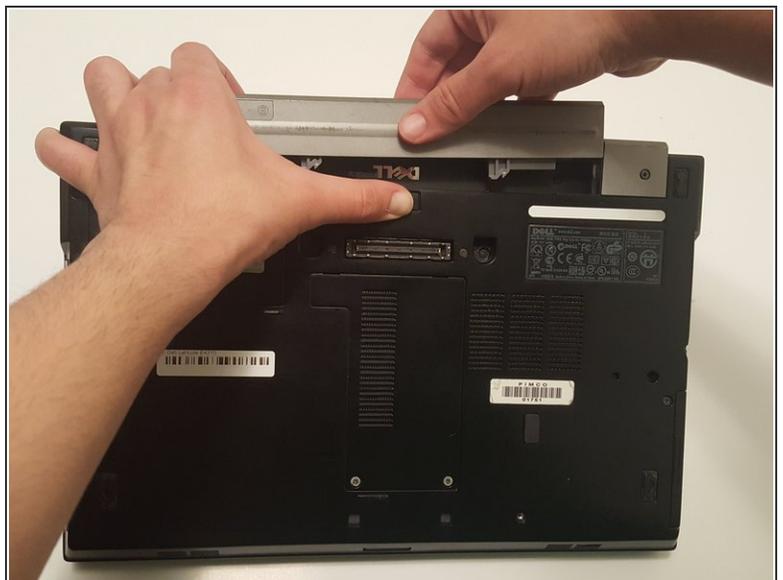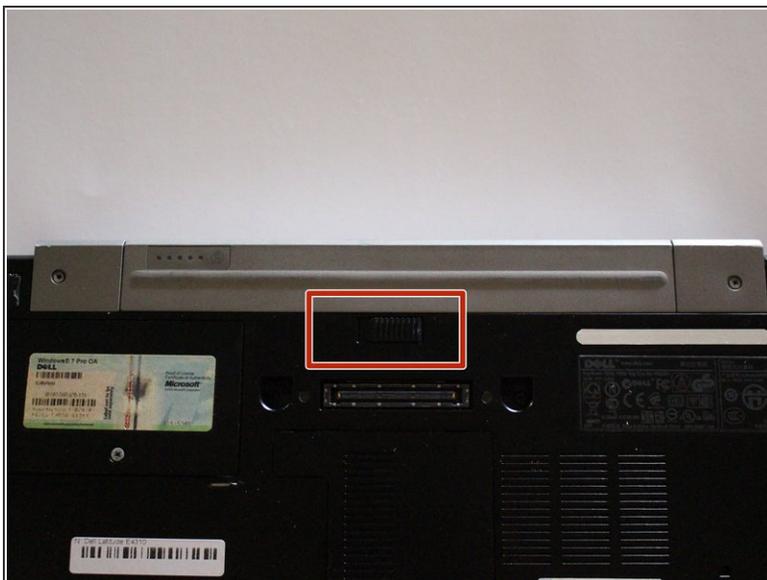


- Push in the battery release button with your thumb.
- Pull up on the battery to remove.

### Step 3 — Keyboard

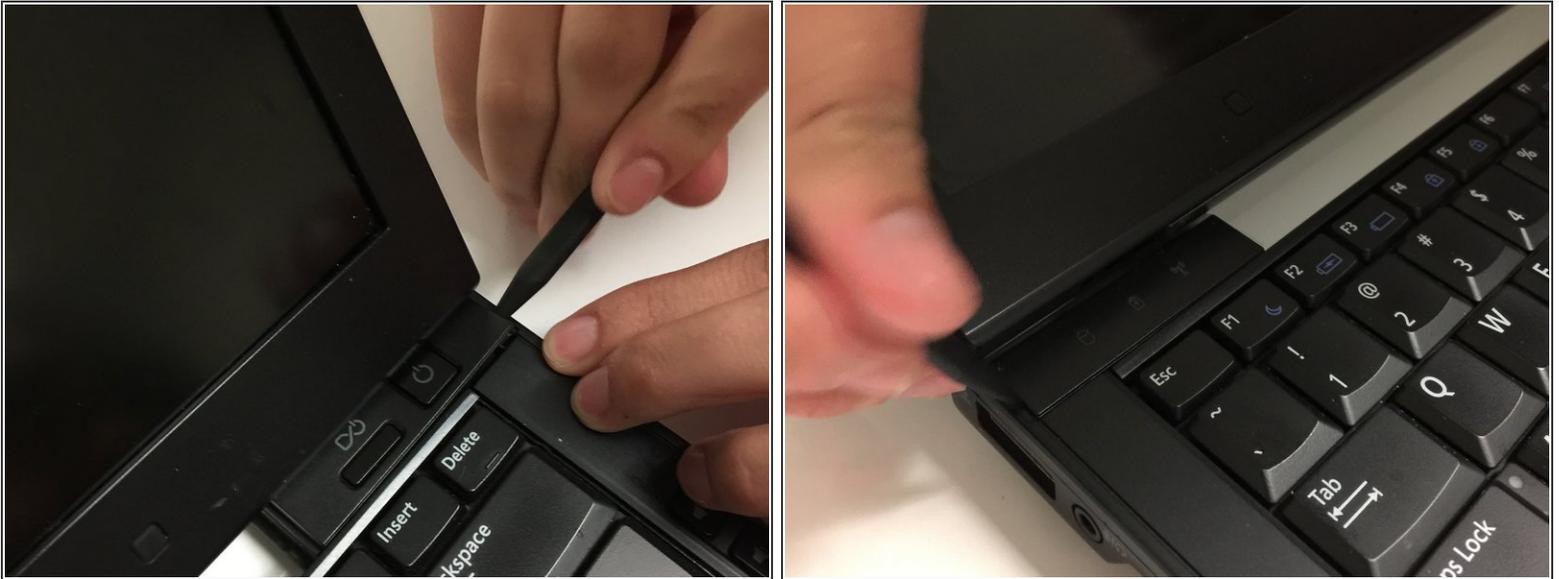


- Insert the pointy end of the spudger underneath the power button panel and pry upwards to pop off.
- Do the same steps for the other side.

### Step 4

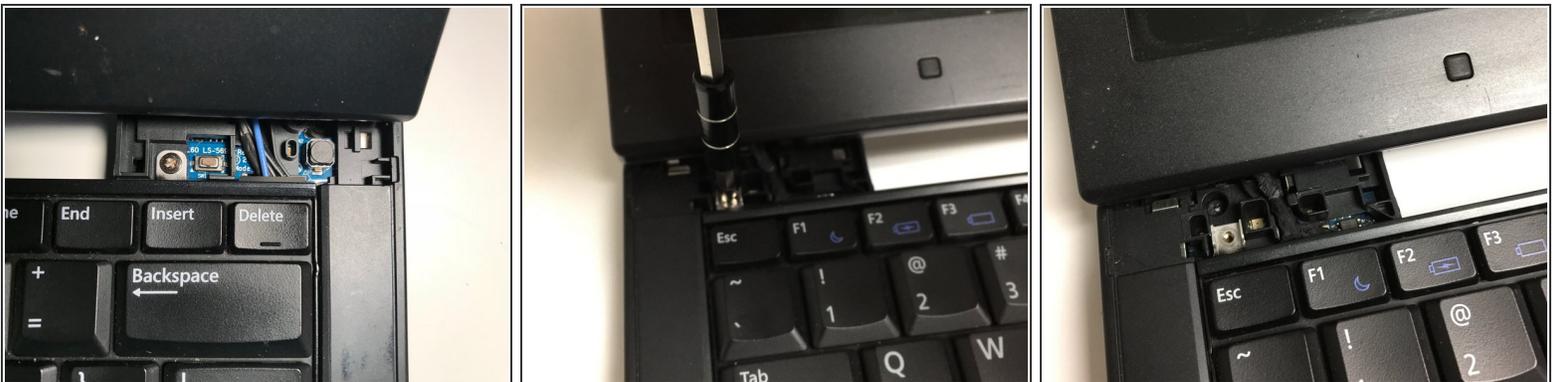



- Remove the two Phillips #0 screws.

## Step 5

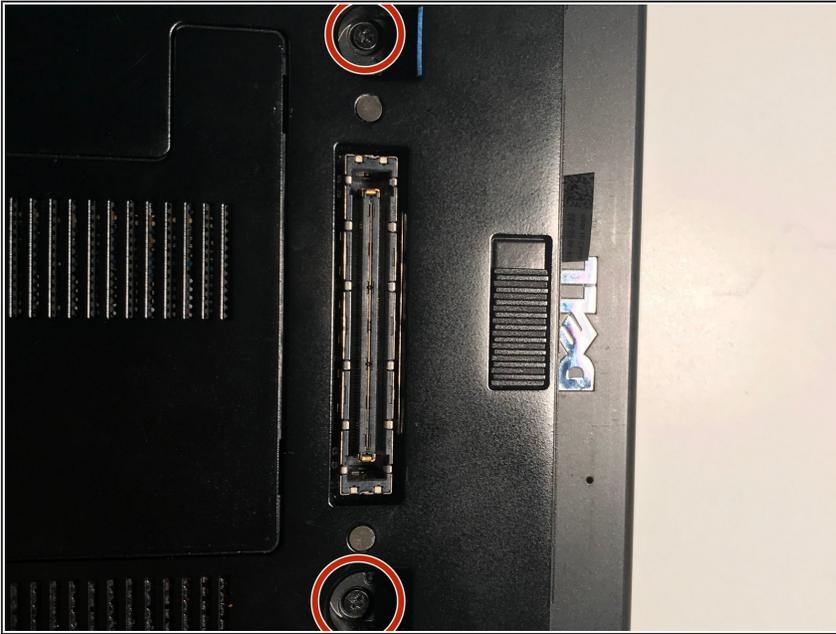

- Flip the laptop over and remove the two Phillips #0 screws.

## Step 6

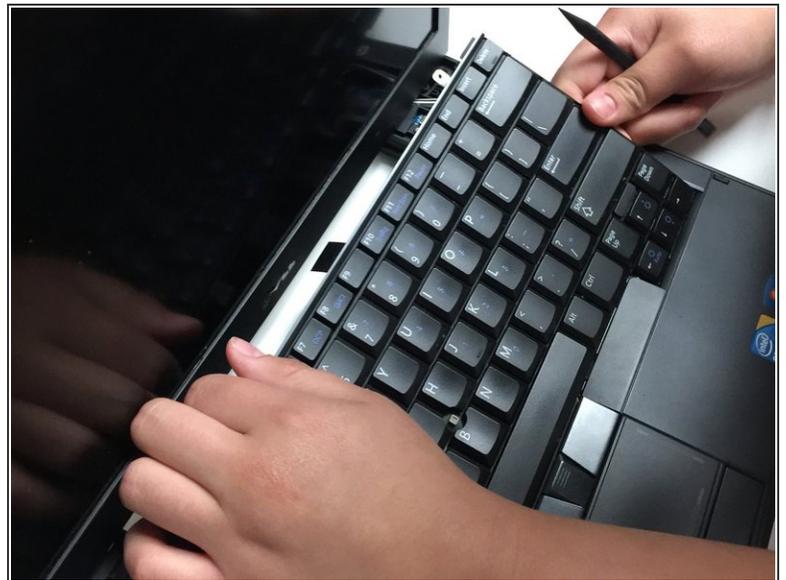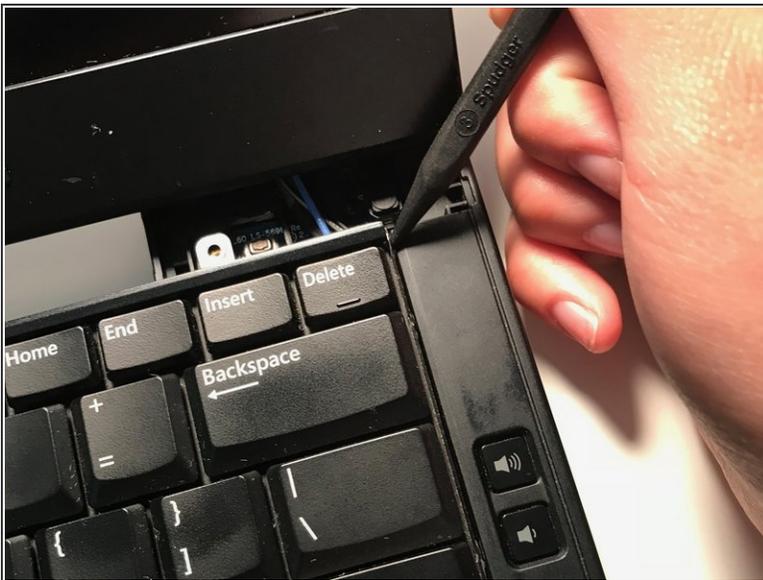

- Insert the pointy end of the spudger underneath the edge of the keyboard and pry upwards to lift up.
- Once lifted, grab the keyboard and pull out to remove.

To reassemble your device, follow these instructions in reverse order.