



HP Envy TouchSmart 4-1215dx Hard Drive Replacement

A guide about how to replace the hard drive properly

Written By: Jaewonhong



INTRODUCTION

A guide on how to replace the hard drive on a HP Envy TouchSmart 4-1215dx laptop.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [250 GB SSD](#) (1)
- [500 GB SSD](#) (1)
- [1 TB SSD](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Back Panel Assembly

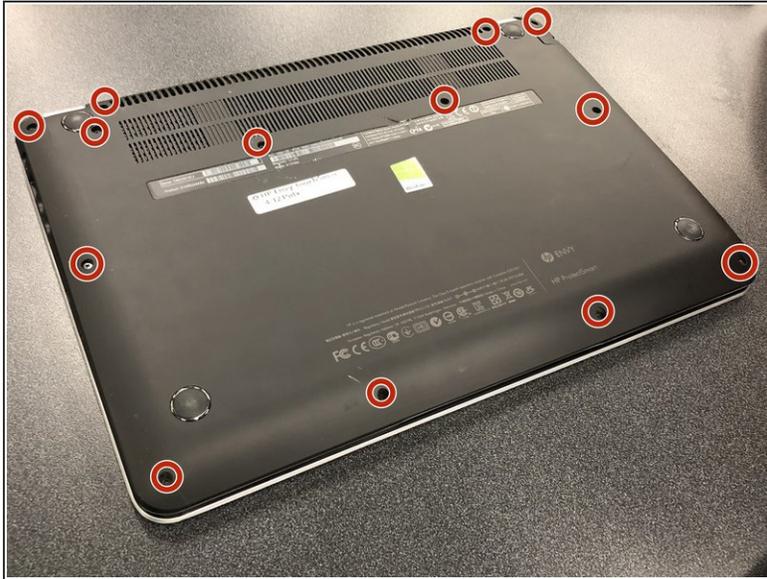

- Remove the thirteen Phillips #0 screws.

Step 2

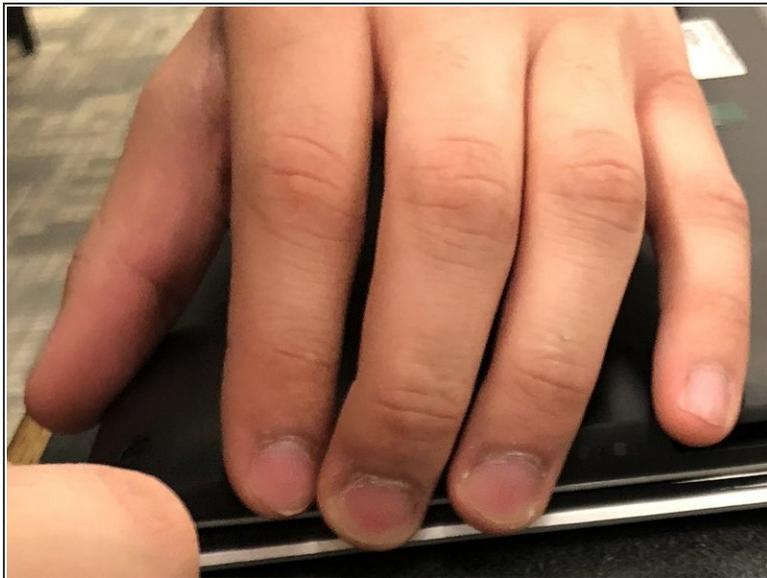


- Pull the panel up and off to remove from the laptop.

Step 3 — Hard Drive



- Remove the three Phillips #0 screws that secure the hard drive to the laptop.

Step 4

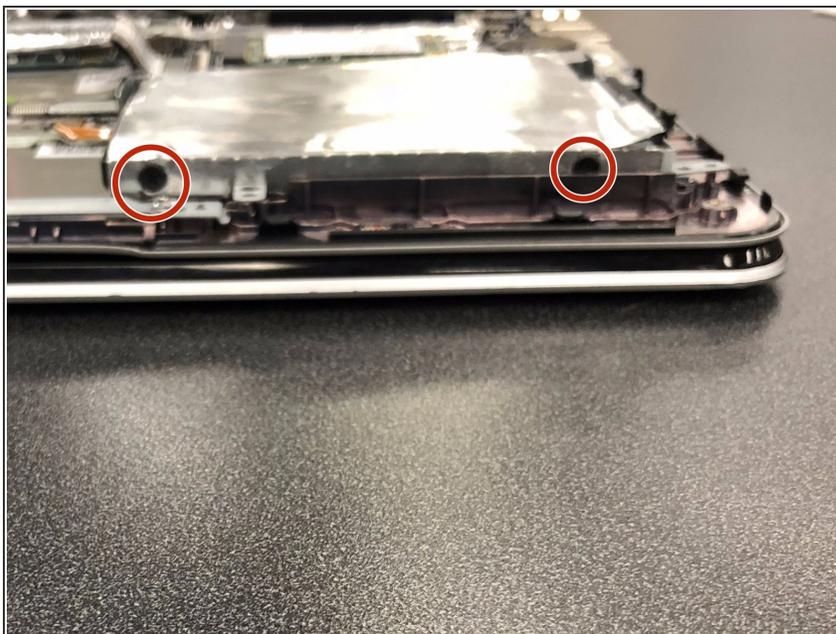


- Lift up the hard drive and remove the two Phillips #0 screws that hold the hard drive to the case.

Step 5



- Remove the single Phillips #0 screw.

Step 6

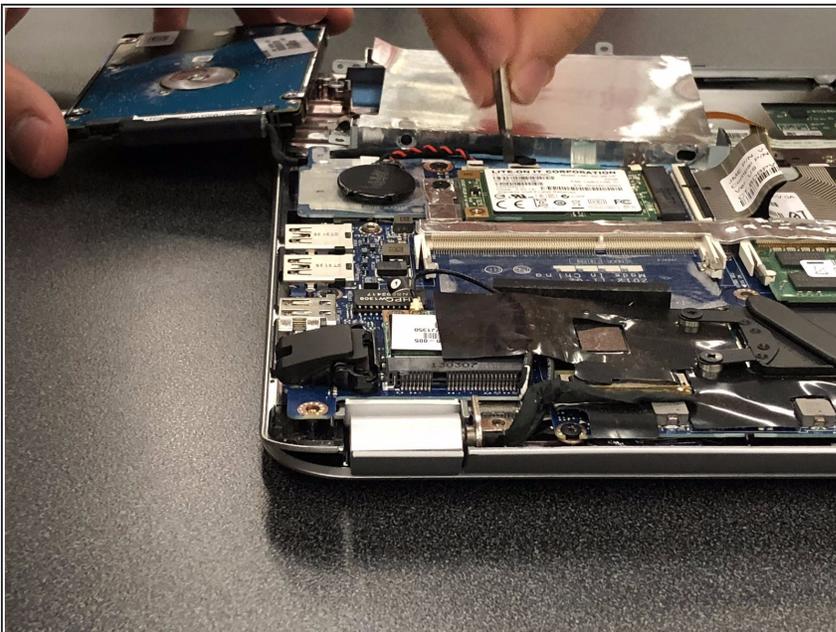

- Lift up the hard drive to remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.