


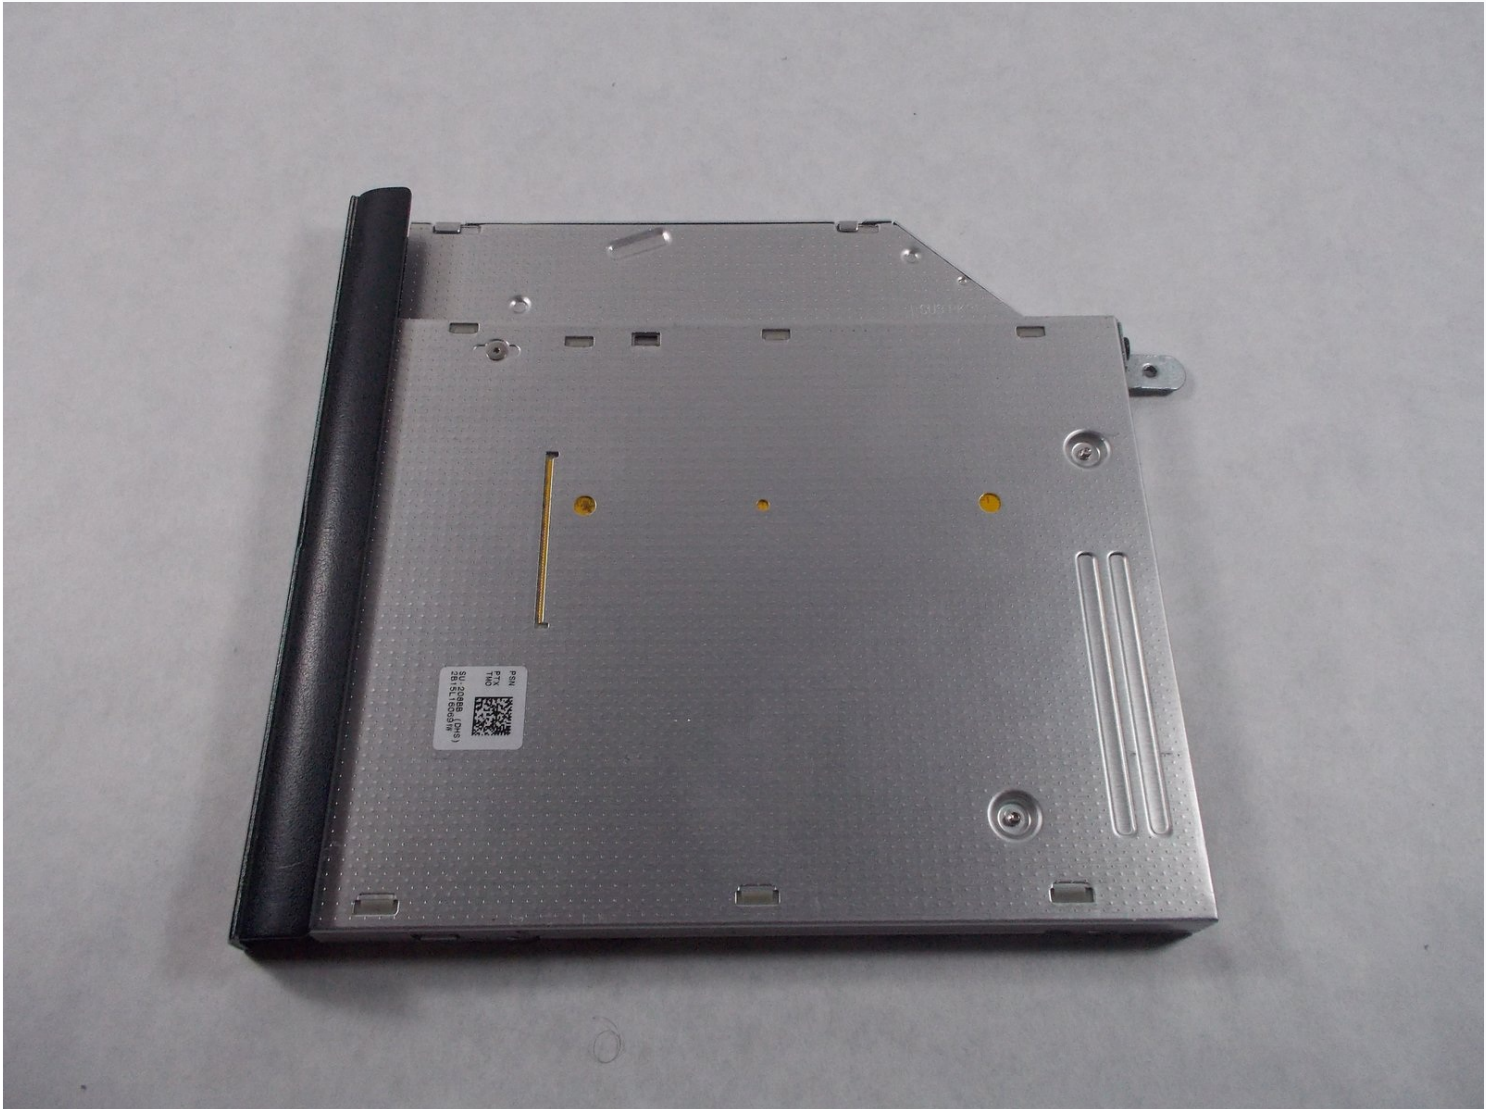

# Dell Inspiron 14R-5421 CD Drive Replacement

this guide will show you how to replace the cd...

Written By: Jared paiva



# INTRODUCTION

this guide will show you how to replace the cd drive

---

## TOOLS:

Phillips #00 Screwdriver (1)



---

### Step 1 — Battery



- Push the two sliders away from the battery towards the outer edges.

## Step 2

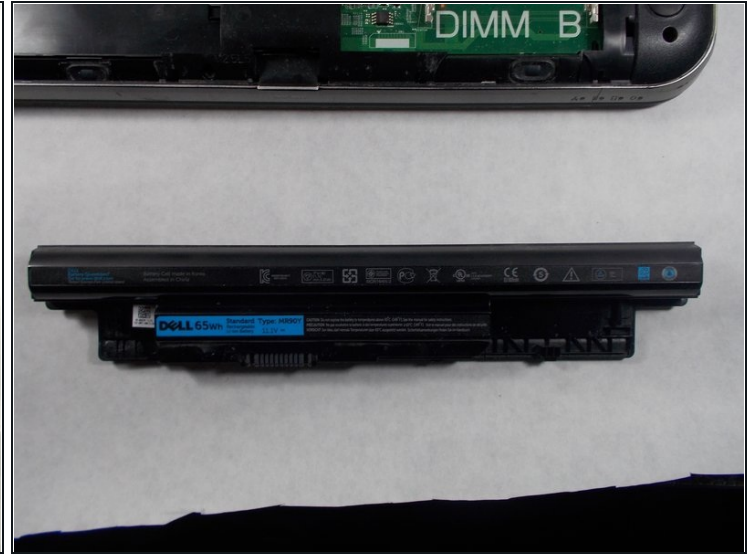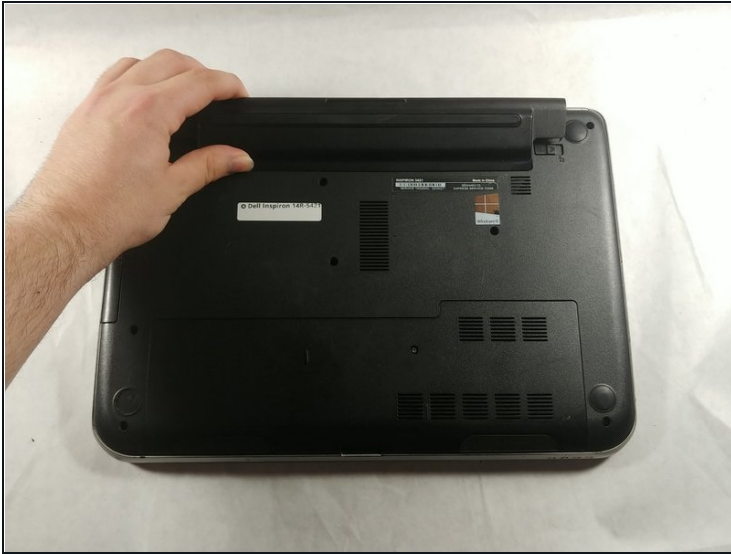



- Remove the battery when it pops up.

## Step 3 — CD Drive



- Remove the single screw that secures the cd drive to the laptop noted by the red circle

## Step 4

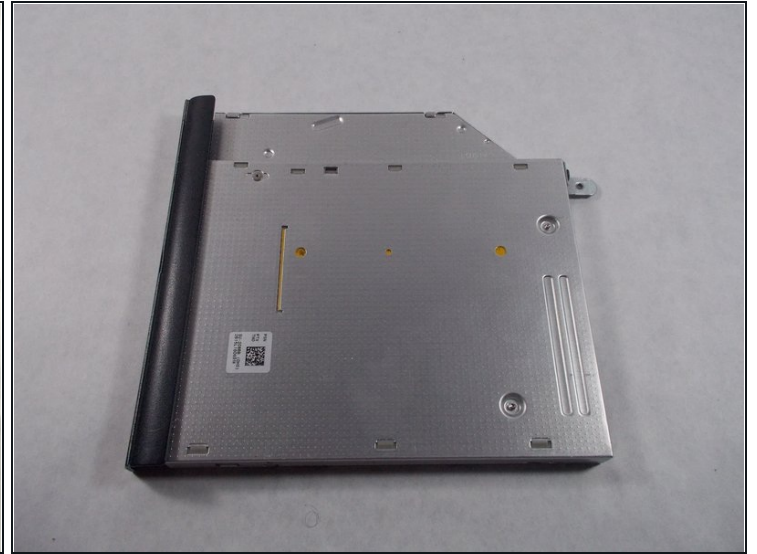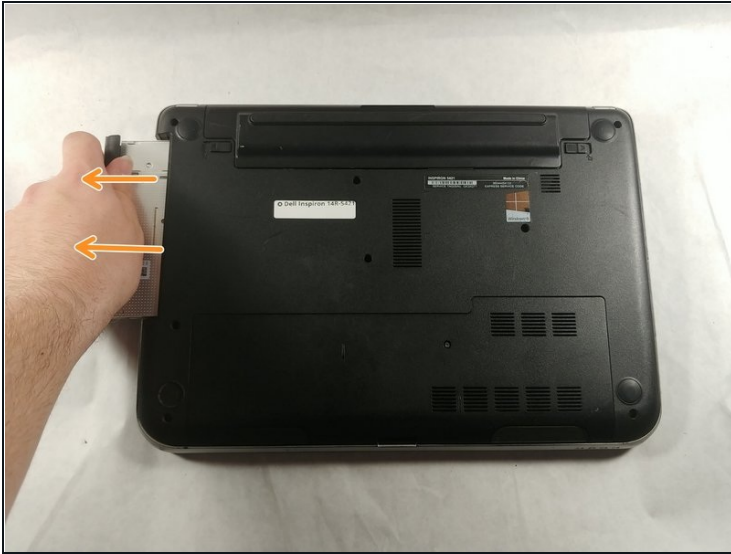

- Now just pull the cd drive until it disconnects from the computer

---

To reassemble your device, follow these instructions in reverse order.