



HP Officejet Pro 8600 Plus Front Panel Replacement

How to replace the HP Officejet Pro 8600 Plus front panel door or ink cartridge door.

Written By: Maegan Betz



INTRODUCTION

The front panel door may not close properly after repeated use. This guide will show how to remove the front panel door.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Front Panel



- Open the front panel door by pulling forward on the slot located on the front-left side of the printer.

Step 2



- Insert the plastic opening tool into the right socket connecting the front panel door to the hinge guide.
- Pry the socket open, lifting the door hinge guide out of place.

Step 3



- Pull the door-hinge guide to the right to detach its left socket.
- Lift the door-hinge guide upward and away from the front panel door.

Step 4



- Grab the front panel door close to its hinge on the right side.
- Pull the front panel door away from the printer toward you.
- ⓘ Extra force may be required to pull the door from its hinge.

Step 5



- Grab the front panel door close to its two hinges on the left side.
- Pull the front panel door away from the printer toward you.
- ⓘ Extra force may be required to pull the door from its hinges.

To reassemble your device, follow these instructions in reverse order.