




Teac DC-D2831 Drive Belt replacement

This guide will help you replace or adjust the drive belt.

Written By: Charles Lockner

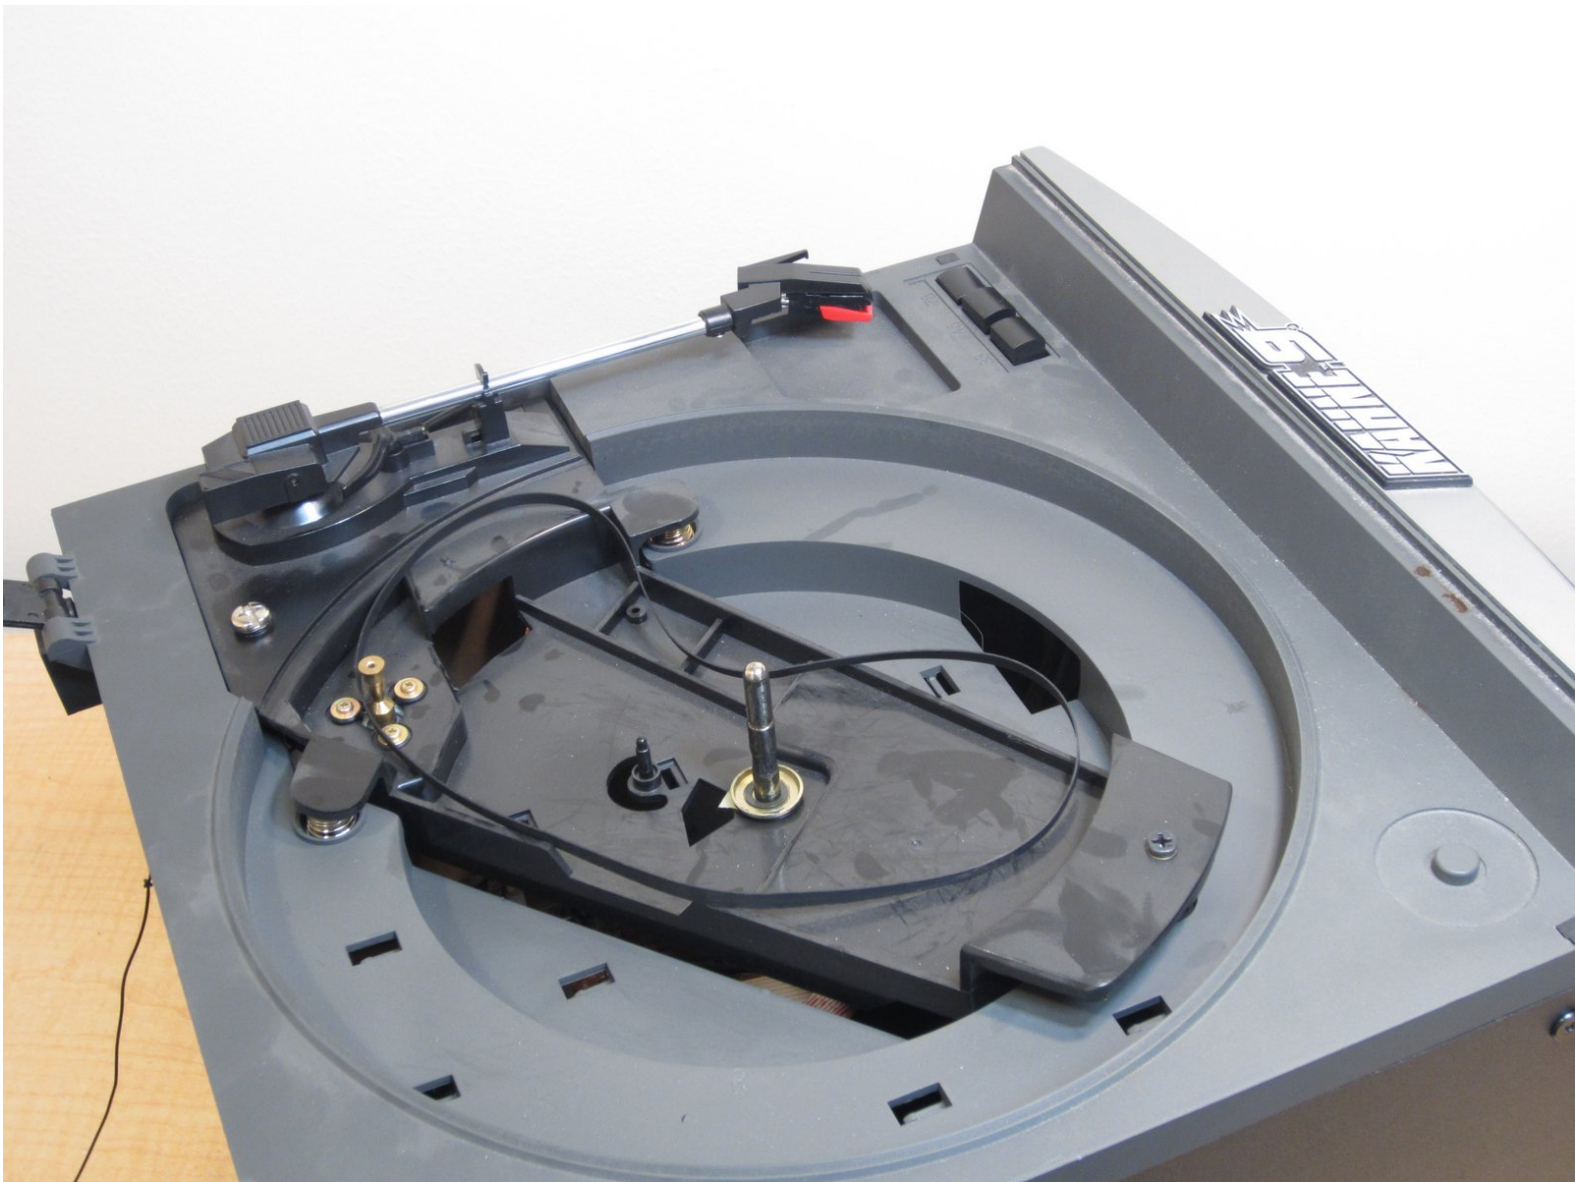

INTRODUCTION

The turntable is operated by a motor that spins a belt and the table. The belt may stretch or become misaligned over time, and may need replacement or adjustment. Note that it is first important to complete the [Disassembly Guide](#).



TOOLS:


- [Large Needle Nose Pliers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Large Needle Nose Pliers](#) (1)
-

Step 1 — Drive Belt




- Separate the turntable from the top of the record player by lifting straight up.


Step 2

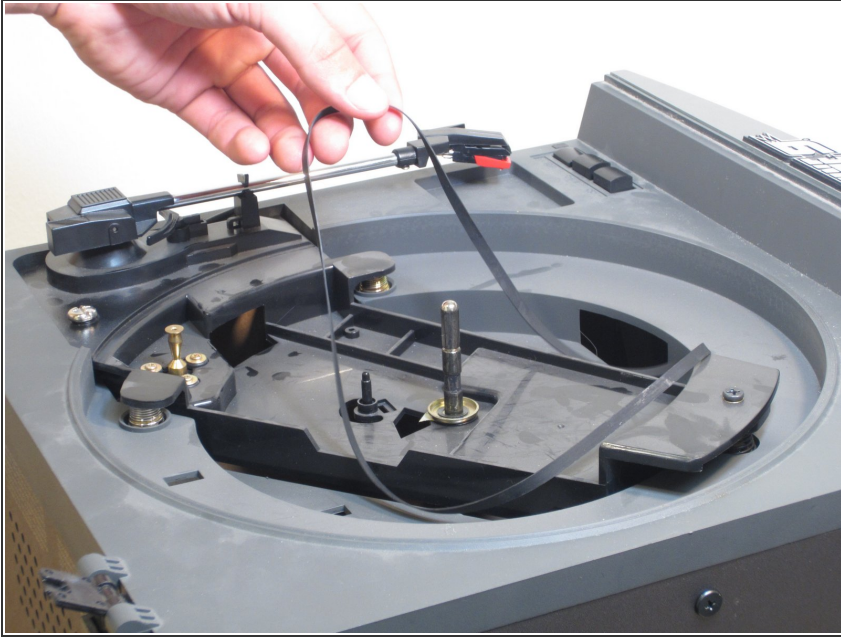


- Check the belt to see if it is off the motor or turntable. If the belt is damaged (tearing or lack of smoothness) replace the belt with a new one. If it is off track, realign accordingly.

 Do not stretch the belt too far as it may break.

Step 3

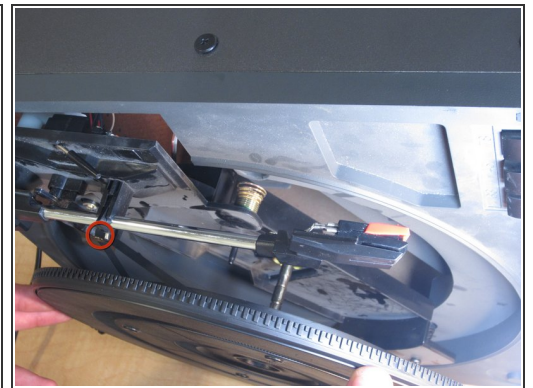

- Once the belt is ready to go, re-wrap the belt around the turntable wheel and, keeping it around the wheel, wrap it around the motor (indicated by the red circle).
-  It may be helpful to lay the record player on its side to keep the belt wrapped around both the motor and the turntable wheel.

Step 4



- Once the belt has been re-applied and the turntable re-attached, stand the record player back up.

To reassemble your device, follow these instructions in reverse order and complete the disassembly guide in reverse order.