




Alternator Replacement

Remove and replace alternator on a Briggs and Stratton 5.5 horsepower lawnmower engine.

Written By: Jacob Micallef

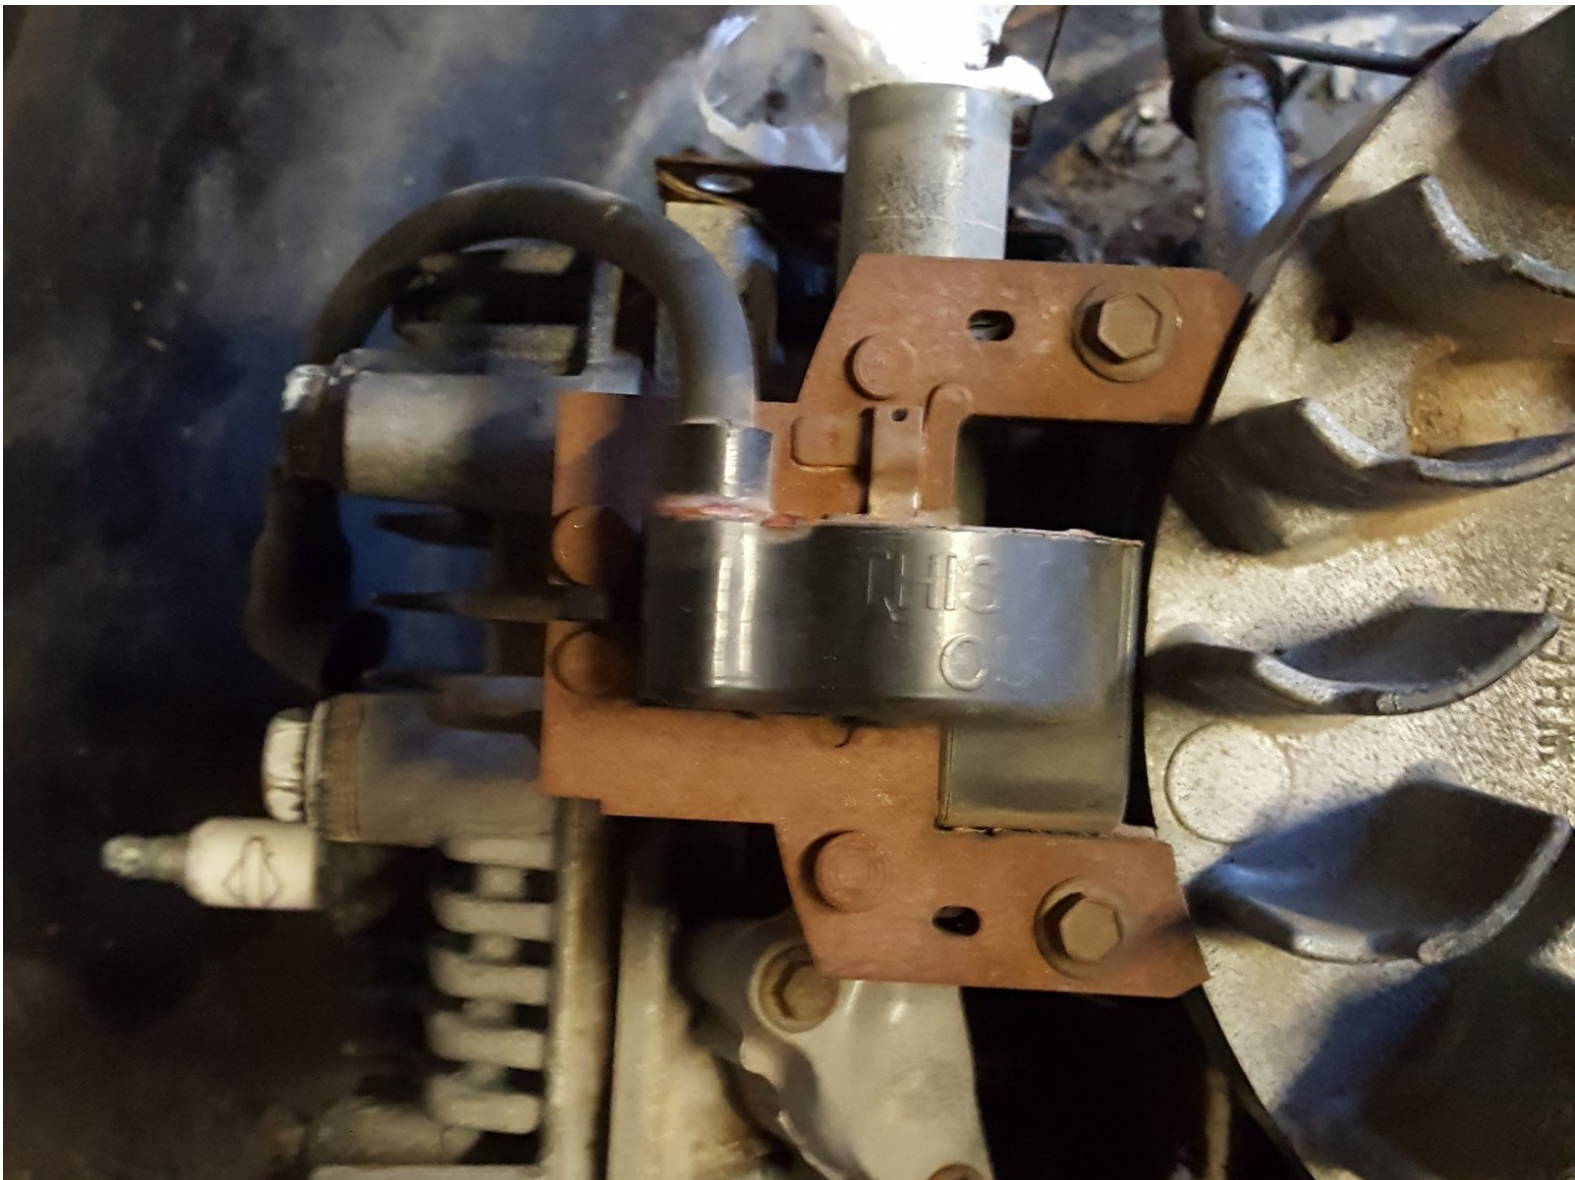

INTRODUCTION


Remove and replace alternator on a Briggs and Stratton 5.5 horsepower lawnmower engine.



TOOLS:

- [1/4" Socket](#) (1)
 - [Slip Joint Pliers](#) (1)
-

Step 1 — Remove bolts and wire

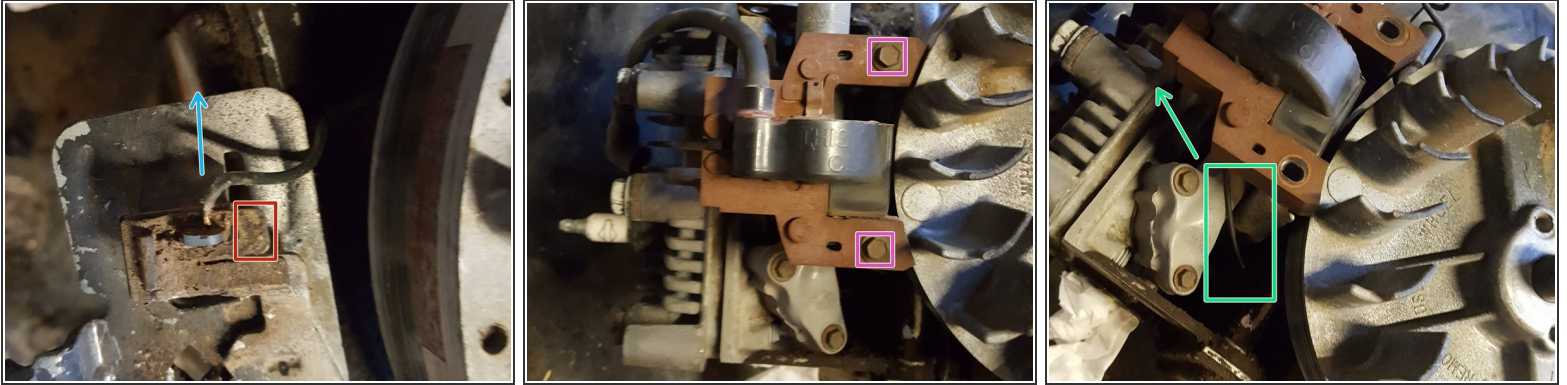

- Push the metal tab closest to the black wire down. While pushing the tab down, pull the black wire out of the clip.
- Using a 1/4 socket, remove the two bolts holding the alternator to the engine.
- From the alternator side, gently pull the black wire out past the cylinder it is routed under on the engine.

To reassemble your device, follow these instructions in reverse order.