



# Dell Inspiron 15-7547 RAM Replacement

Replacing or upgrading the size of your computer's RAM can increase it's life span and speed.

Written By: Claro



---

# INTRODUCTION

The guide shows the process of removing the RAM from the Dell Inspiron 15-7547.

---



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Bottom Cover



- ❗ Before you begin, be sure to turn off your laptop and unplug it from the outlet.
- Close the display and flip the laptop on its back.
- Loosen the ten 5.0 mm-long Phillips #0 screws.
  - The four screws marked with orange will remain captive to the cover.




## Step 2



- Use a spudger to pry up and loosen the back cover.
- Remove the back cover.



## Step 3 — RAM

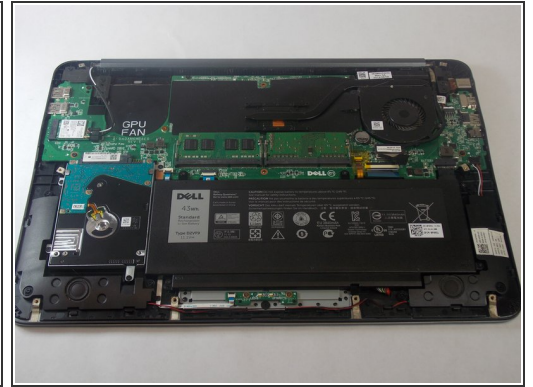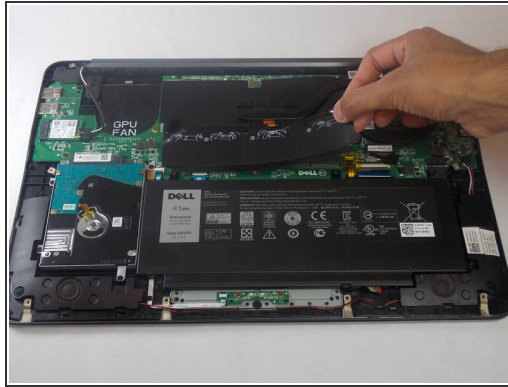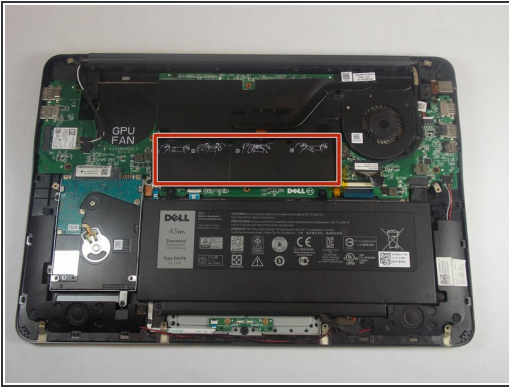


- Remove the plastic heat spreader that covers the RAM sticks.

## Step 4



- Release the clamps on each side of the RAM sticks by pushing away from the center.
- ① When done properly the RAM stick should pop up.

## Step 5

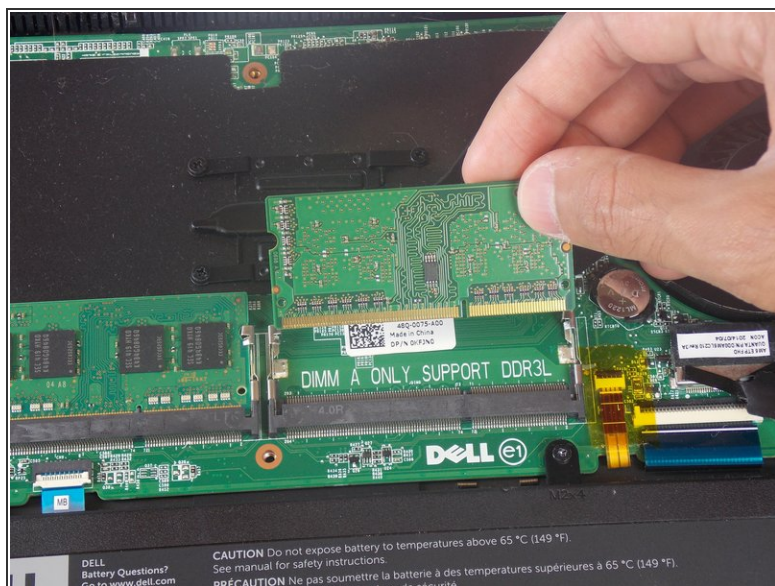

- Pull the RAM stick in a straight line out of the socket.

To reassemble your device, follow these instructions in reverse order.