



# ZTE ZFive G LTE Battery Replacement

Use this guide to replace the battery on a ZTE...

Written By: Julian Mendoza



# INTRODUCTION

Use this guide to replace the battery on a ZTE ZFive LTE Android cellphone. Cellphones require the use of a battery to help the cellphone charge and function. When the cellphone starts to overheat or not charge properly it is time to replace it with a new one.

Note that you have to find and purchase the correct battery before starting. With this guide, you will walk through the necessary techniques to accurately replace the battery while helping to prevent potential damage to interior cellphone.

## 🔧 TOOLS:

[iFixit Opening Tool](#) (1)

### Step 1 — Battery



- Using the opening tool, pry open the rear cover from the crease at the bottom left corner.

### Step 2



- Remove the battery from the bottom with an opening tool or fingernail.

### Step 3



- ① When installing the new battery, make sure the negative and positive ports are aligned.
- Push the battery into the slot.

To reassemble your device, follow these instructions in reverse order.