



# Asus A53E-ES92 Battery Replacement

This guide will show you how to remove a...

Written By: Robyn Lam



# INTRODUCTION

This guide will show you how to remove a battery on an Asus A53E-ES92.

## Step 1 — Battery



- Place the device face down.

## Step 2



- Shift both of the unlocking keys outward.
- You should be able to see the red line on the left key after shifting it outwards.

### Step 3



- Pull battery away while simultaneously pushing the right key outwards. Remove the battery from the device.
- ① You do not need to keep pushing the left button outwards if you see the red line, as it is locked.

---

To reassemble your device, follow these instructions in reverse order.