



Samsung NP350E5C-A02US Optical Drive Replacement

This guide will help you replace a faulty optical drive.

Written By: James Kingrey



INTRODUCTION

If the optical drive isn't working correctly, this guide will help you replace the drive.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Lay the laptop down so that the bottom is facing up.
- ⓘ There is no battery in the picture.

Step 2




- Slide the two plastic tabs to the opposing sides.
- ⓘ There is no battery in the picture.

Step 3



- While both are in the unlocked position, slide the battery out.
- ⓘ There is no battery in the picture.

Step 4 — Hard drive and memory stick cover

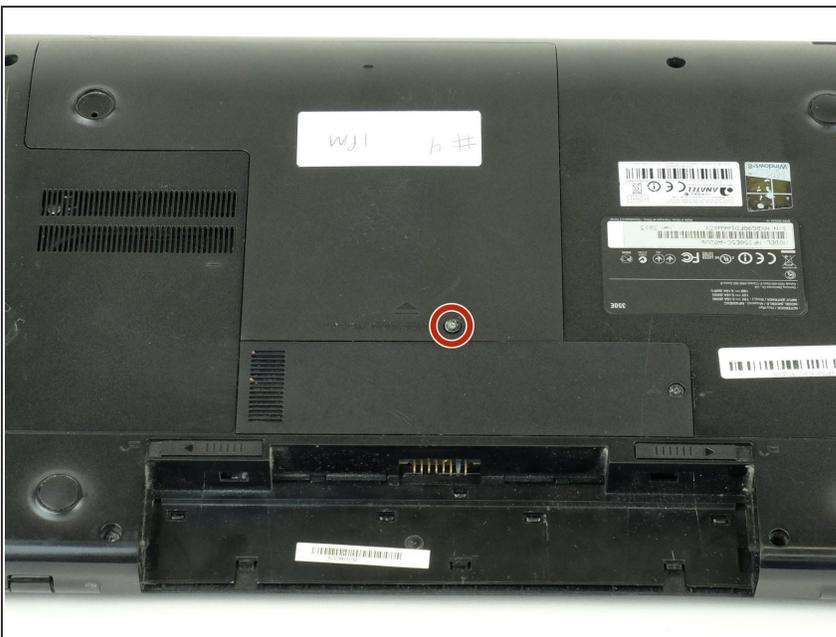

- Remove the M2.5x5 mm screw with a Phillips #0 screwdriver.

Step 5



- Slide the cover 1/4" towards the front of the laptop.

Step 6



- Then, lift the cover off.

Step 7 — Optical Drive



- Find the screw between the hard drive and the model label. Then remove the M2.5X5 screw with a Phillips #0 screwdriver.

Step 8



- Pull the optical drive straight out.

To reassemble your device, follow these instructions in reverse order.