



Lenovo IdeaPad Y410p Battery Replacement

This guide will help you replace your battery...

Written By: Nick Torres



INTRODUCTION

This guide will help you replace your battery. Replacing the battery will fix any battery life issues caused by a faulty or corrupted battery. You can do it regardless of your technical knowledge or skill.

PARTS:

[121500126 - Lenovo IdeaPad Y410P Battery](#) (1)

[121500127 - Lenovo IdeaPad Y410P Battery](#) (1)

[121500148 - Lenovo IdeaPad Y410P Battery](#) (1)

[121500149 - Lenovo IdeaPad Y410P Battery](#) (1)

[121500070 - Lenovo IdeaPad Y410P Battery](#) (1)


Step 1 — Battery



 Turn off your laptop before starting.

- Flip the laptop over so the model stickers are facing up.

Step 2

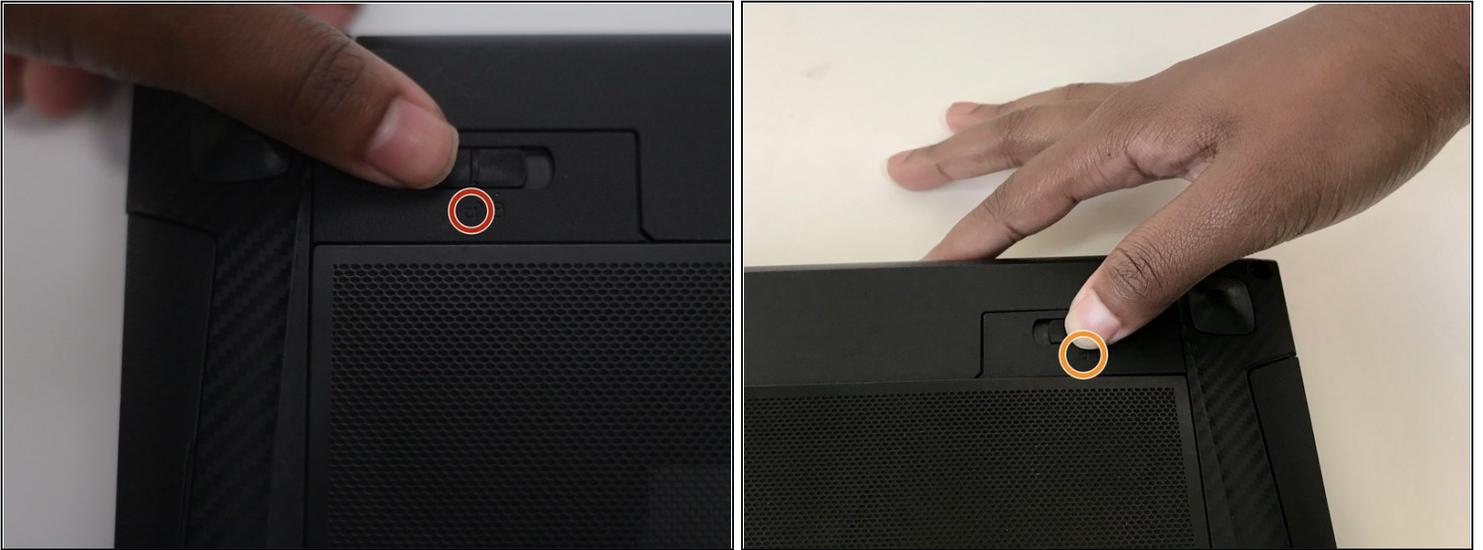

- Slide the left battery lock to the unlock position and release.
- Slide the right battery lock to the unlock position and hold it in place.

Step 3



- While holding the right battery lock in the unlock position, slide the battery carefully out of the laptop and set it aside.

To reassemble your device, follow these instructions in reverse order.

