



MSI GT62VR 6RD Dominator Battery Replacement

This guide will show you how to remove the battery inside the MSI GT62VR 6RD Dominator.

Written By: Rebekah Johnson



 **TOOLS:**



- [iFixit Opening Tool](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- i** Be sure to power off and unplug your device before you begin your repair.
- Remove the 6 screws on the bottom plate of the laptop using a Phillips driver.

Step 2

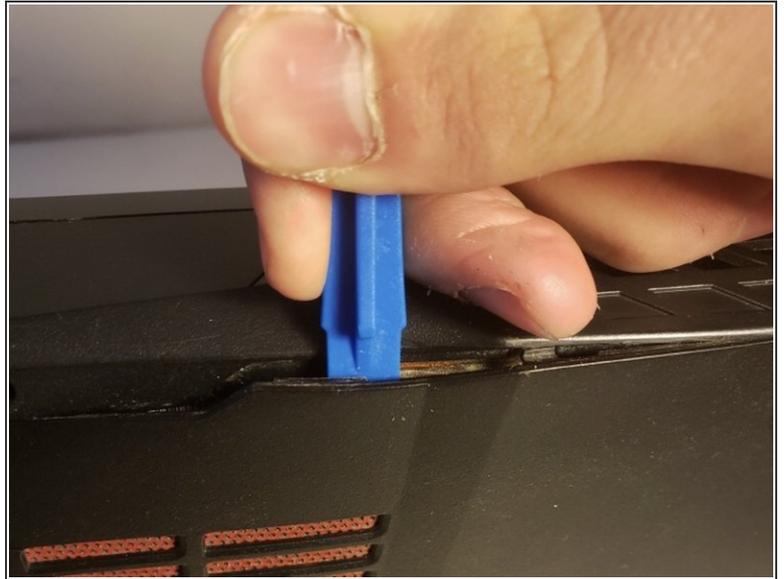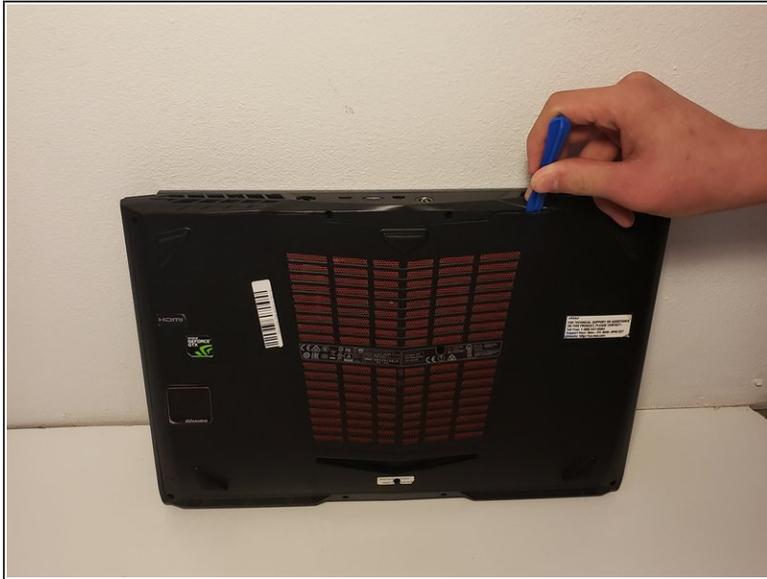

- Insert the plastic opening tool into the back plate of the laptop and lightly pry it up.

⚠ The laptop cover will break if it is being handled roughly.

- Slide the plastic opening tool around the laptop's edge gently, slowly popping off the clips securing it into the laptop.
- Remove the back plate.

Step 3



- Locate the battery.
- ⓘ The wires are located at the back end of the battery and covered in tape.
- Remove the tape covering the battery connector.
- Place your hands at the corners of the wires.
- Pull upward from the back end of the battery where the wires are located.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.