



HP 14-ac151nr Backplate Removal

Remove the backplate on your HP 14-ac151nr.

Written By: Antonio Leonti




INTRODUCTION

To access the internal components of your computer, you need to remove the backplate, which is the matte black portion on the bottom.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Backplate

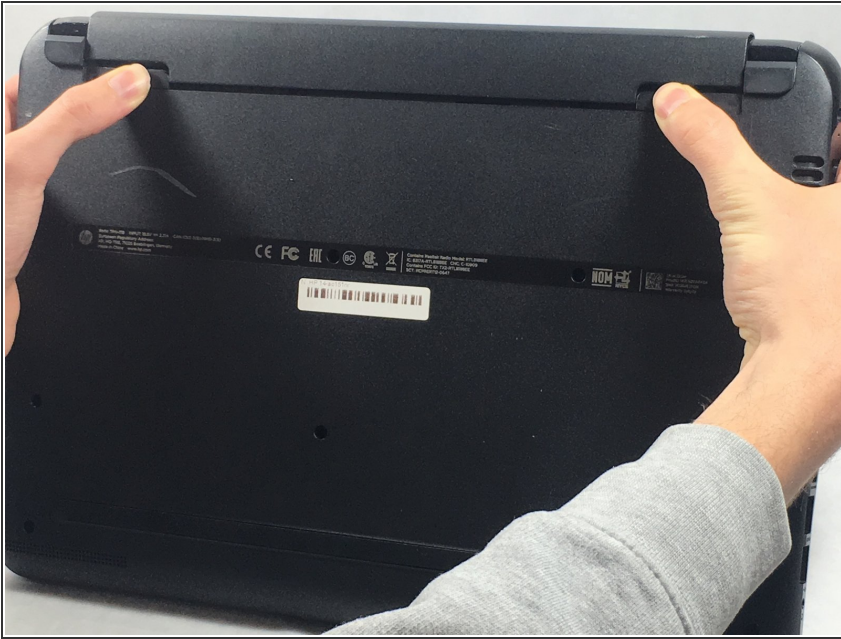


- Remove battery by pushing the two buttons inward.

Step 2

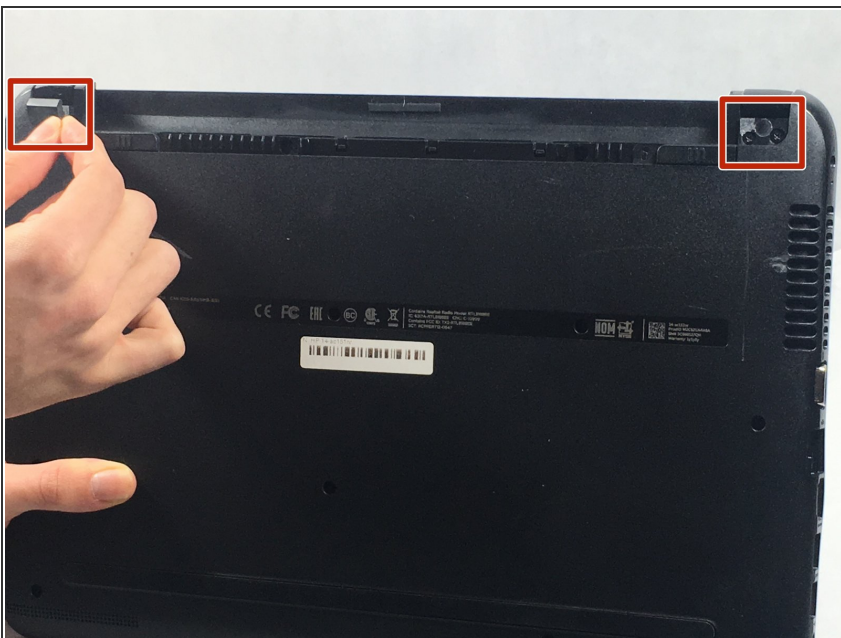

- Remove the two rubber feet next to the battery.

Step 3

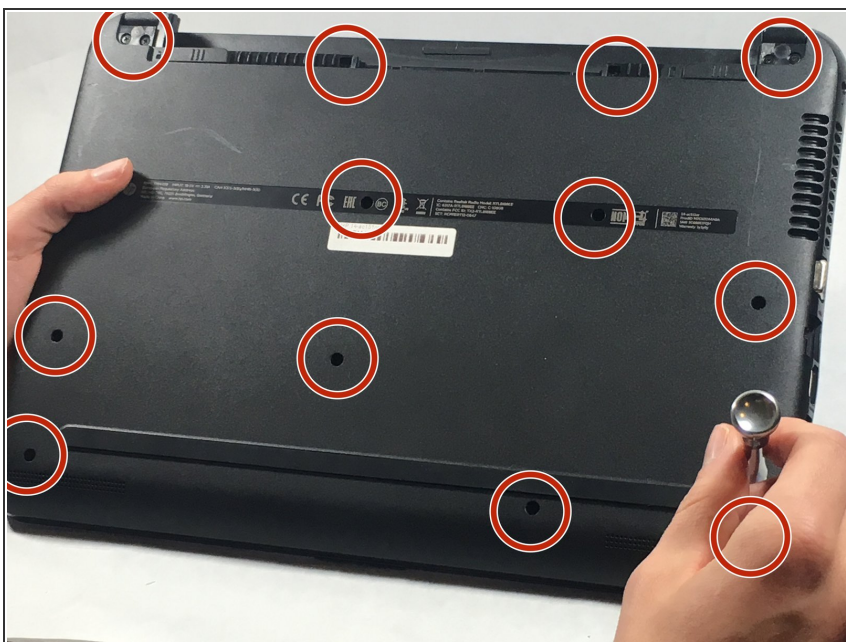

- Remove all 14 Phillips head #0 screws.

Step 4



- Use a plastic opener tool to pry off the black backplate.

To reassemble your device, follow these instructions in reverse order.