



Plum Optimax 10 Back Cover Replacement

The guide displays how to remove and replace the back cover of the Plum Optimax 10.

Written By: Logan David Wagner



INTRODUCTION


You will be using a metal spudger for this guide to remove the back cover. This is a prerequisite step for all further guides and will be important for all replacement steps. It is advised to be cautious when using the tools to avoid further damage to the equipment.



TOOLS:



- [Spudger](#) (1)
-

Step 1 — Back Cover

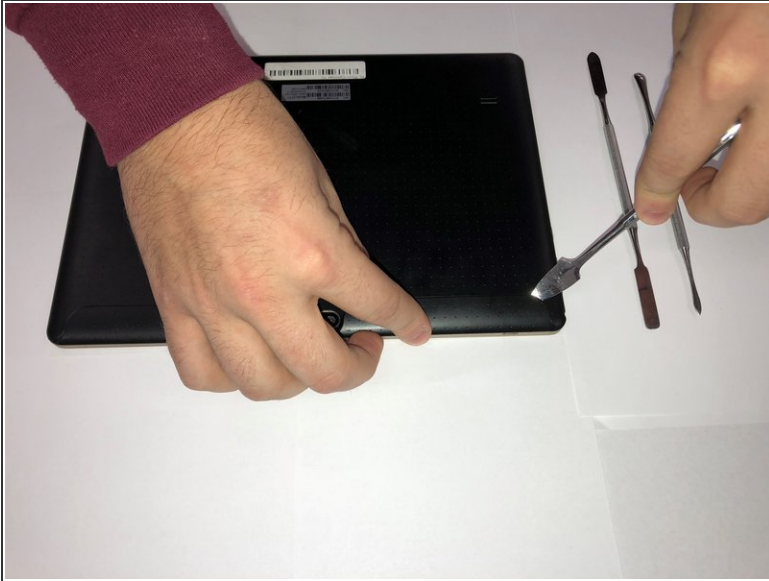

- Use a metal spudger to remove the small panels to the immediate left and right side of the camera.

Step 2

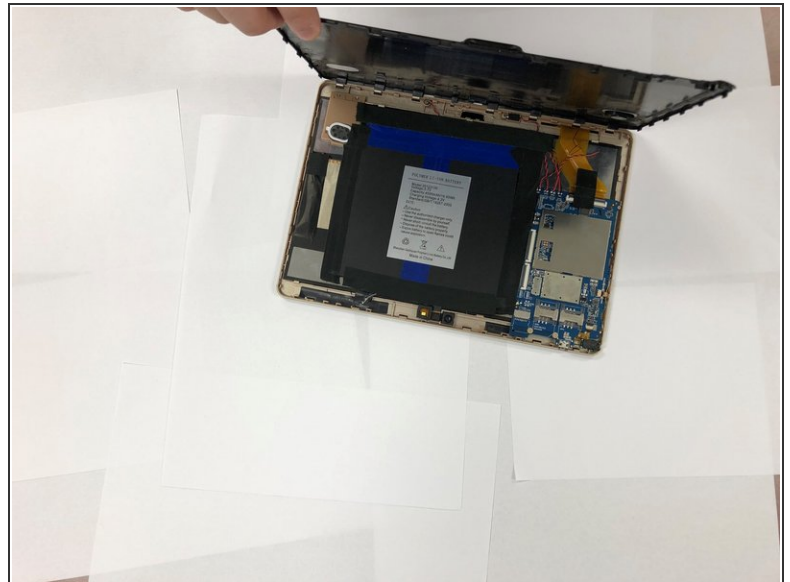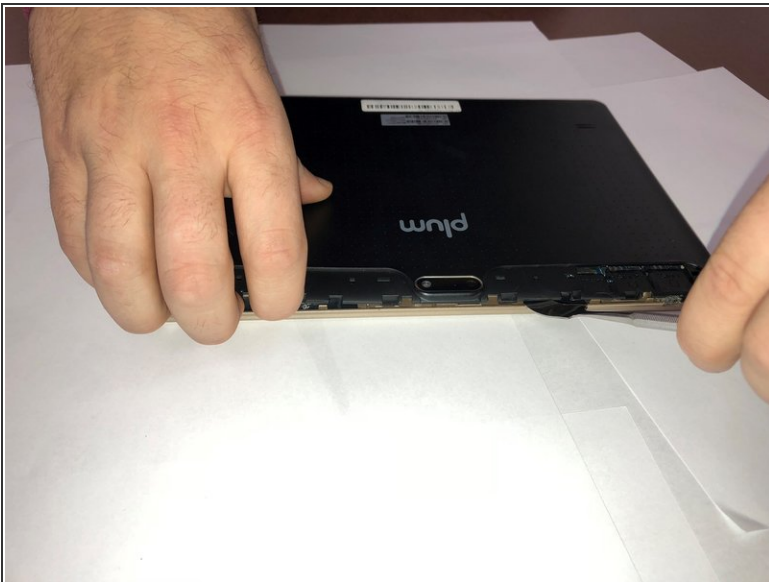

- Use a metal spudger to begin lifting the back cover.
- Then, create leverage and gently remove the entire cover.

To reassemble your device, follow these instructions in reverse order.