




Sony VAIO SVE14AJ16L RAM Replacement

RAM replacement steps for a Sony VAIO SVE14AJ16L laptop.

Written By: Dustin Smith

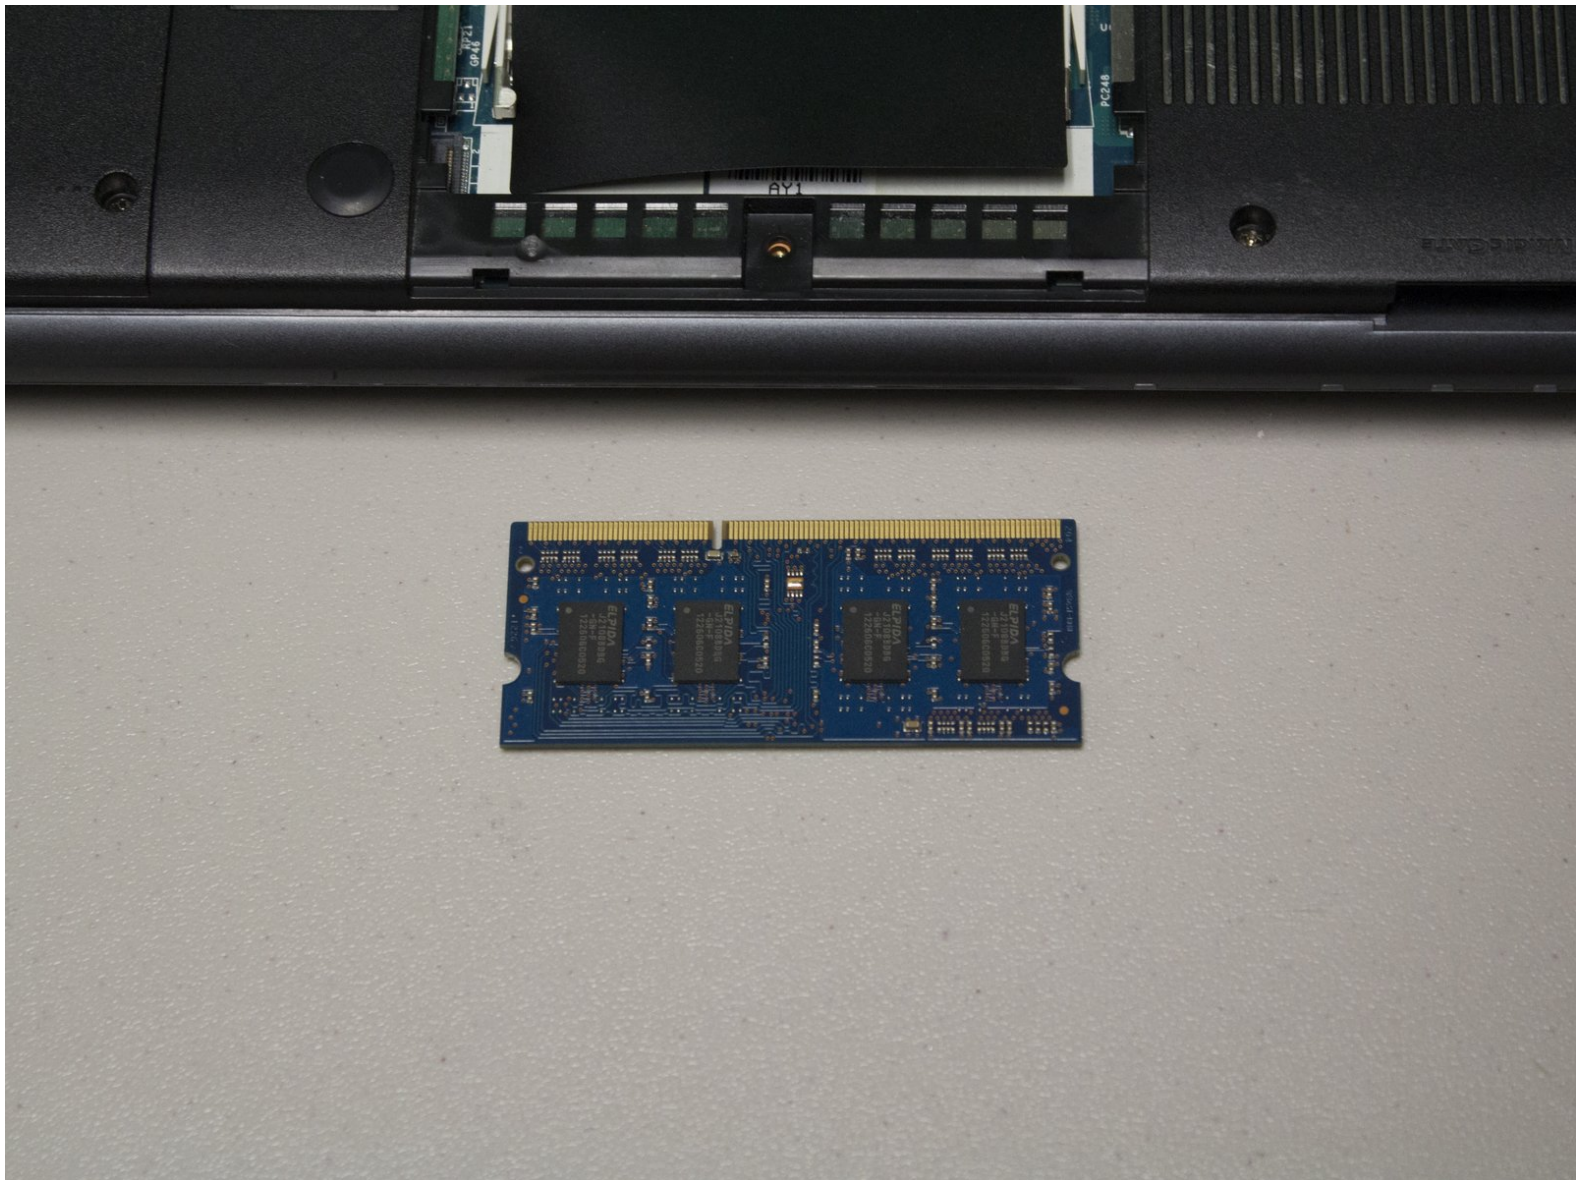

INTRODUCTION

RAM replacement steps for a Sony VAIO SVE14AJ16L laptop.




TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — RAM




 Turn your laptop off before starting.


- Turn the laptop upside down onto the closed lid so that the bottom is facing you.

Step 2

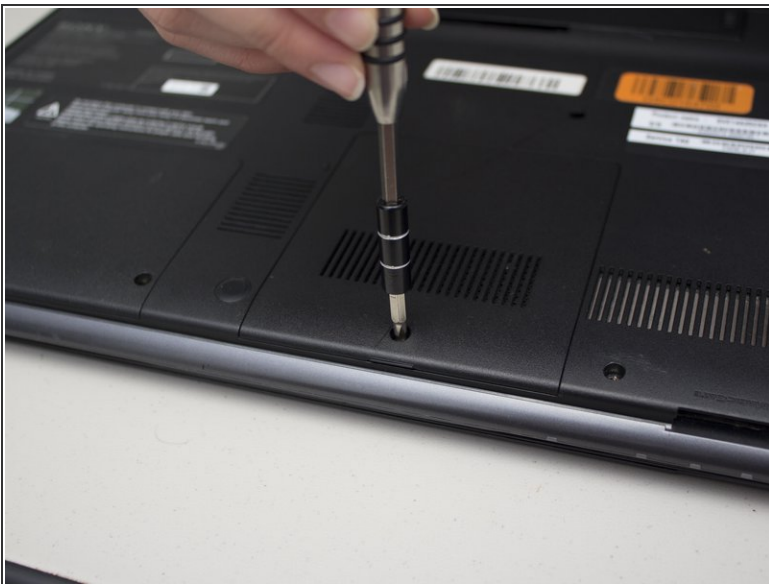


- Locate and remove the lone screw on the RAM cover with a Phillips #0 head screw driver.
- Carefully pry the RAM cover up.
 -  There will be some resistance, so use strength and not speed to remove the cover.

Step 3

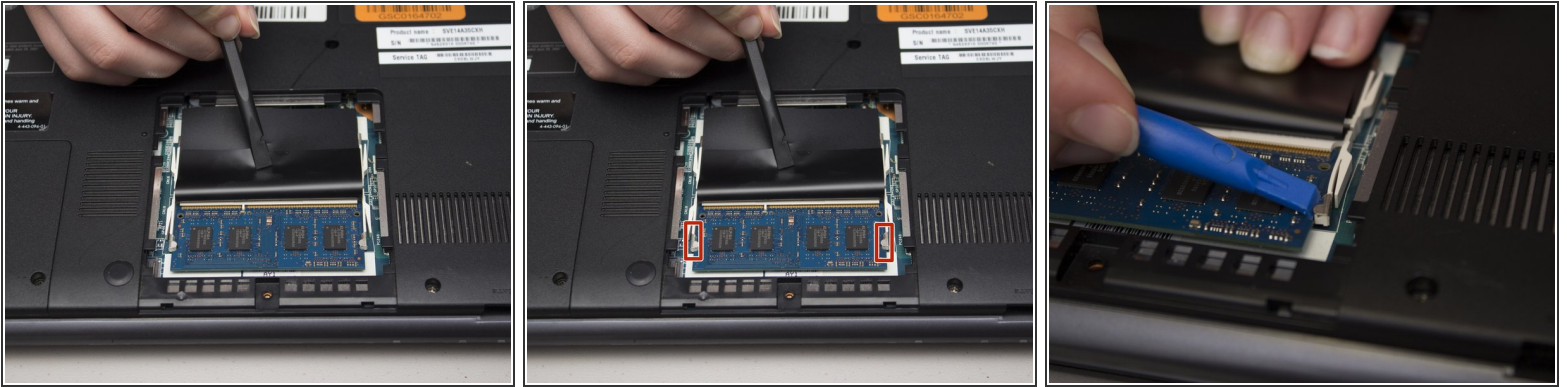

- With the cover removed, peel back the black protective plastic to expose one of the two RAM sticks.
 - ⚠ Make sure not to touch any part of the blue board itself, and only handle the stick from it's edges.
- Gently, but firmly push back the two side anchors that hold in the RAM using either an [iFixit Opening Tool](#) or your fingernails.

Step 4

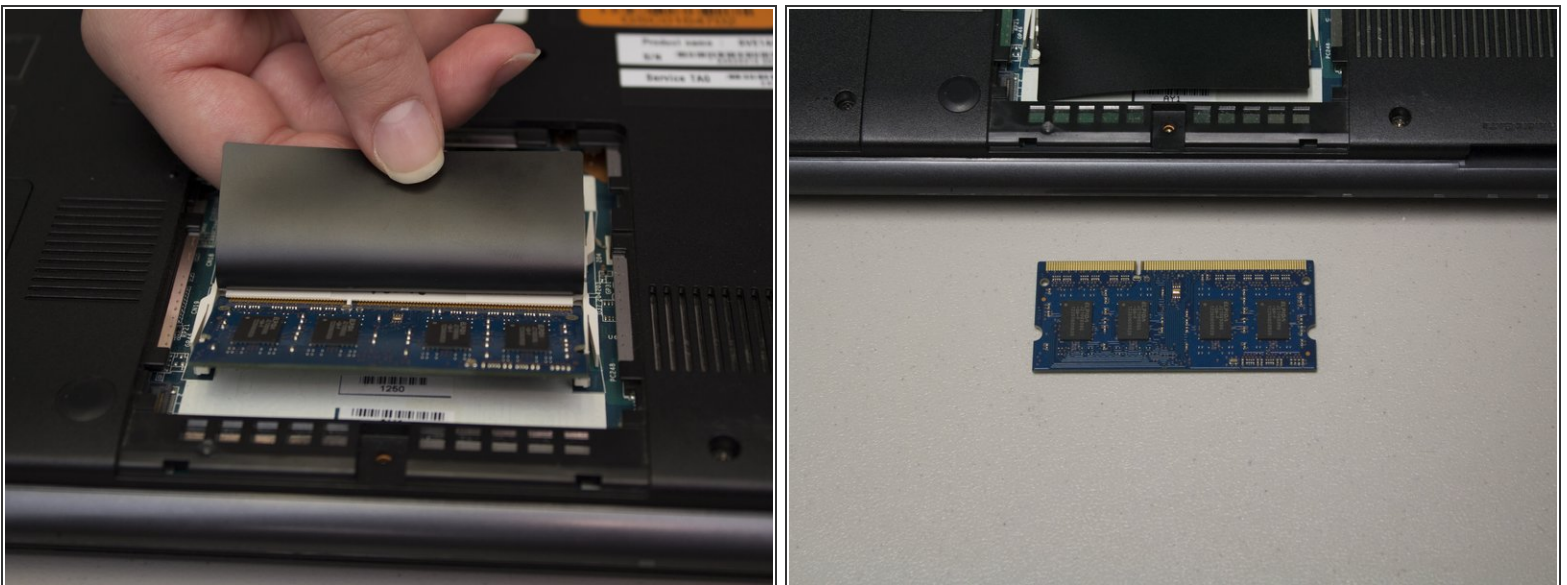

- ⓘ Once both anchors are released from the RAM stick, the stick will spring up at an angle
- Finally, carefully pull the RAM stick away from the laptop at the same angle it is sitting at.

To reassemble your device, follow these instructions in reverse order.