




# Lenovo IdeaPad Y510P Battery Replacement

How to replace a dead battery on a Lenovo IdeaPad Y510P.

Written By: Alyssa Wheeler

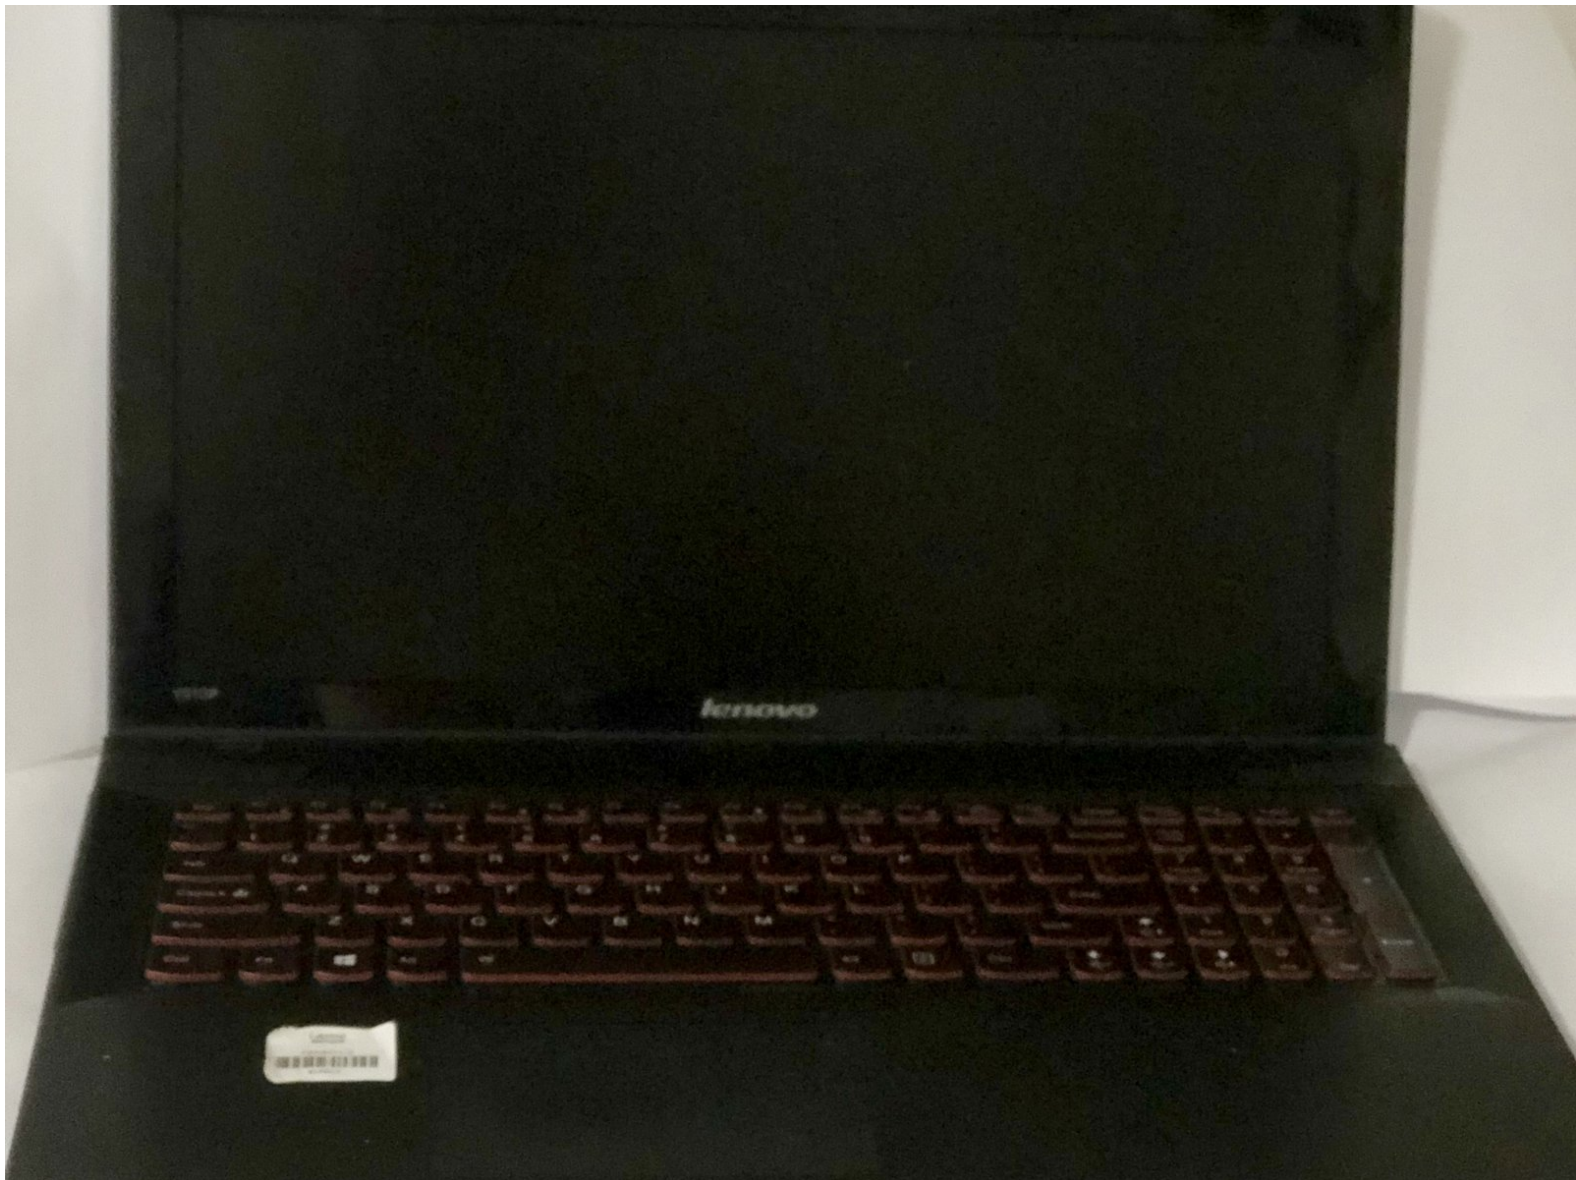



## TOOLS:

- [Fingers](#) (1)
-

## Step 1 — Battery



- Flip laptop over to expose battery.

## Step 2



- Move latches to the unlocked position.

## Step 3



- Slide the battery out.

To reassemble your device, follow these instructions in reverse order.