


Dell Chromebook 13-7310 Motherboard Replacement

A replacement guide for the motherboard on the Dell Chromebook 13-7310.

Written By: Brett Raymond

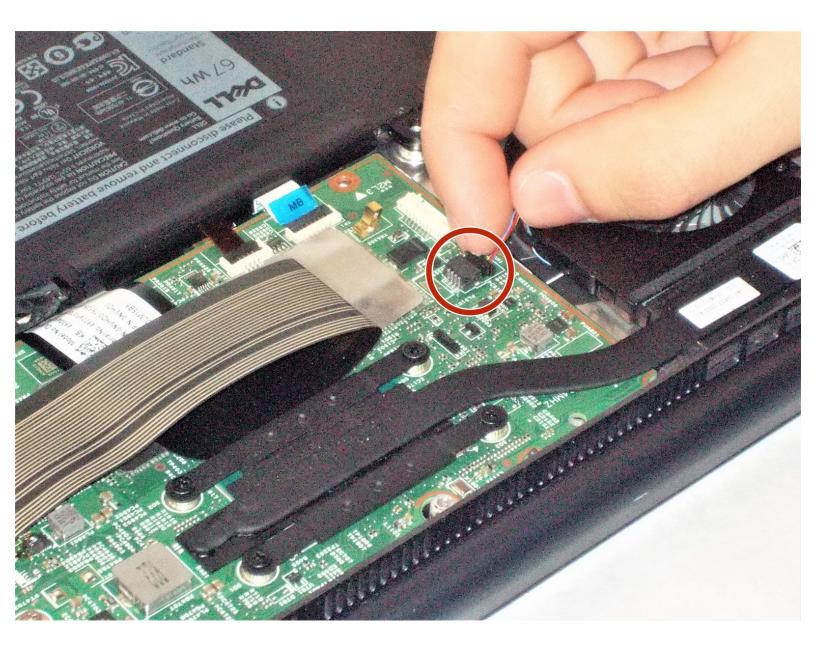

INTRODUCTION

A damaged motherboard is a serious issue and can be a hassle to fix, but it doesn't have to be! By following the quick and easy motherboard replacement guide you can have your Chromebook working again in no time!

TOOLS:


- Phillips #1 Screwdriver (1)
- Spudger (1)
- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)

Step 1 — Back Cover




Remove the eleven 3mm Phillips #1 screws.

Step 2

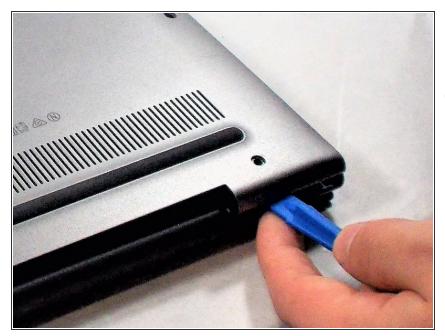

- Use a plastic opening tool to gently remove the back panel.
- *i* It can be easier to pry open near a corner.

Step 3 — Battery

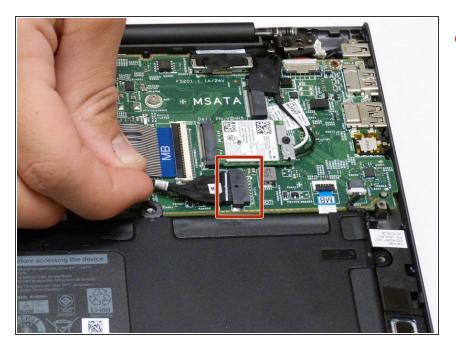

 Use your fingers to remove the connecting cable to the battery unit.
Firmly grab the cord closest to the motherboard connection and pull straight back.

Step 4



• Remove the four 2mm screws on the sides of the battery.



 To remove the battery, lift up on one side to get your fingers underneath and lift away.

Step 6 — Network Card




• Use #1 Phillips screwdriver to remove the 1mm screw in the network card.




• Disconnect the network card from motherboard socket.

Step 8

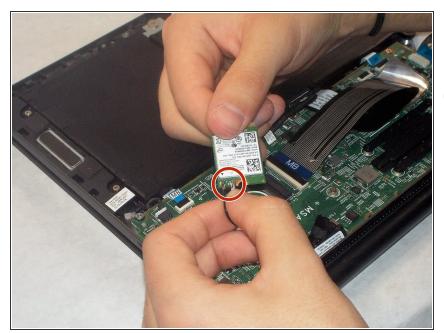


- Disconnect 2 cable connectors from network card.
- (i) If the cables are stuck, continue to gently wiggle them until they disconnect.

Step 9 — Motherboard

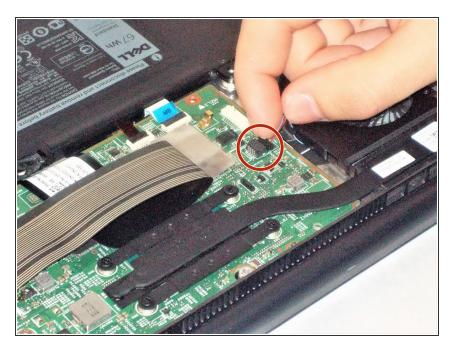


• Gently pull to unplug fan connector.

Step 10

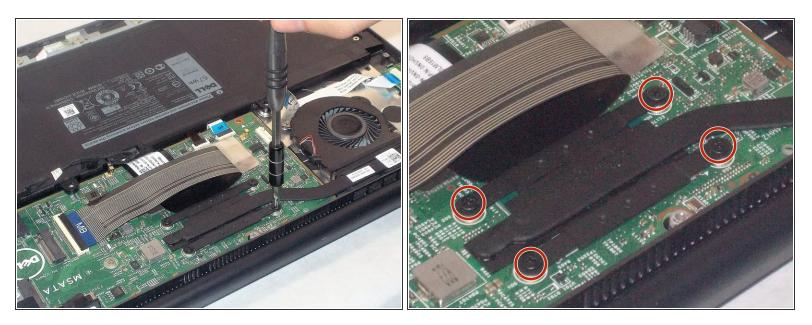


Remove 4 screws securing heat sink.

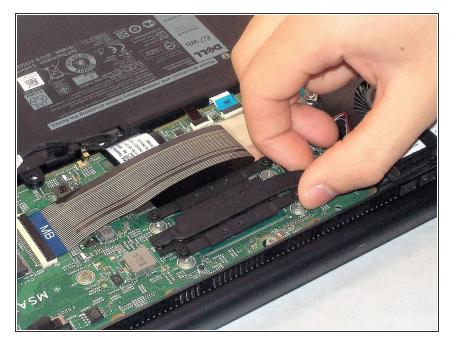

• Lift away heat sink.

Step 12

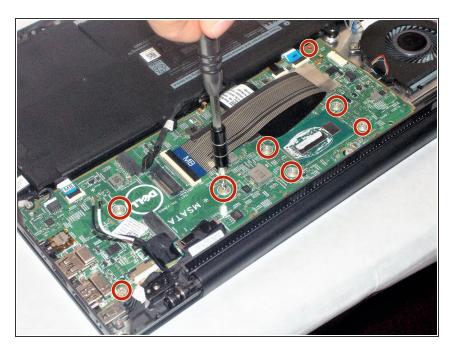


• Remove the eight 2mm screws securing the motherboard in place.




• Release cable for the LED charging indicator by pulling up on connector.

Step 14

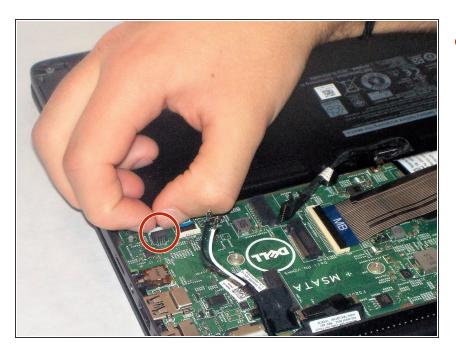


• Gently remove the cable.

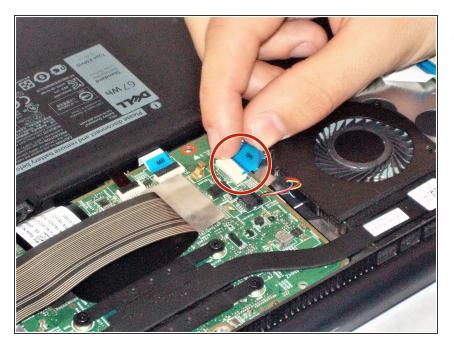


 Pull up on connector tab to release IO board cable.

Step 16

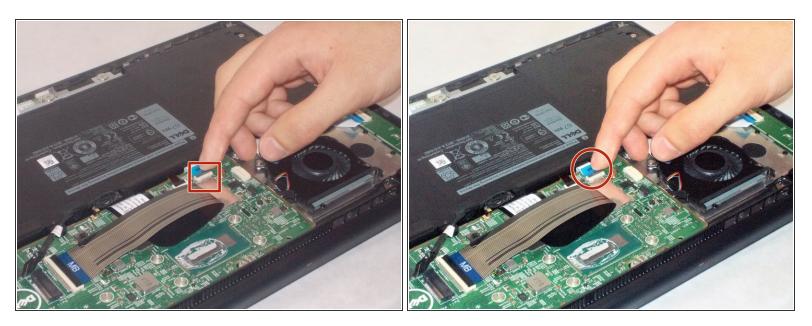


• Pull up on connector tab to release touchpad cable.

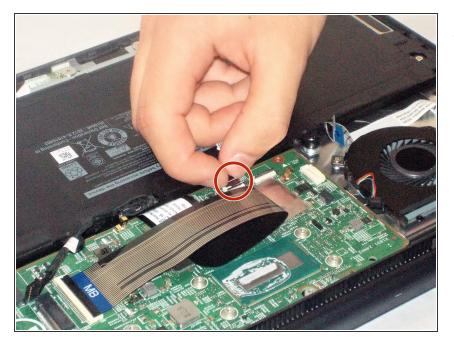

• Release the keyboard backlight cable.

Step 18

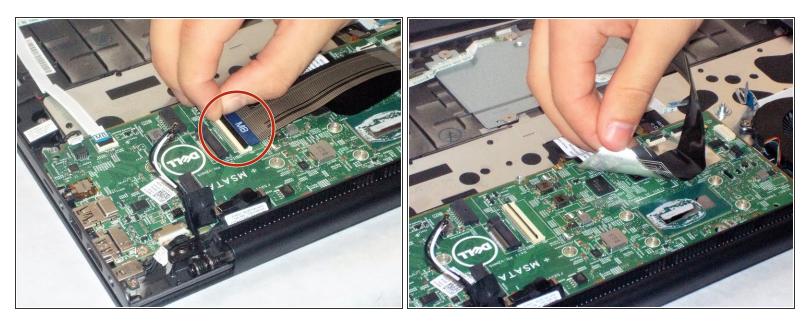


- Release the keyboard cable.
- ▲ If taped to the motherboard, gently peel it off.



Release eDP cable.

Step 20

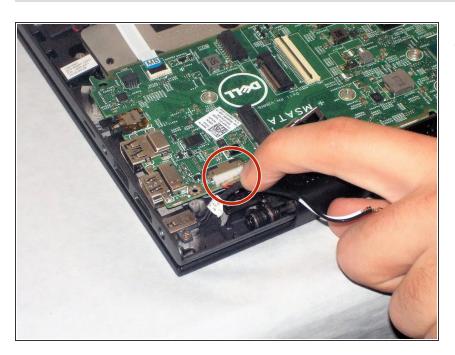

• Release dc-in cable.



• Gently lift up the motherboard to remove it.

To reassemble your device, follow these instructions in reverse order.