




Supersonic SC-777BT Motherboard Replacement

How to replace a Supersonic SC-777BT motherboard.

Written By: Maiya Webster

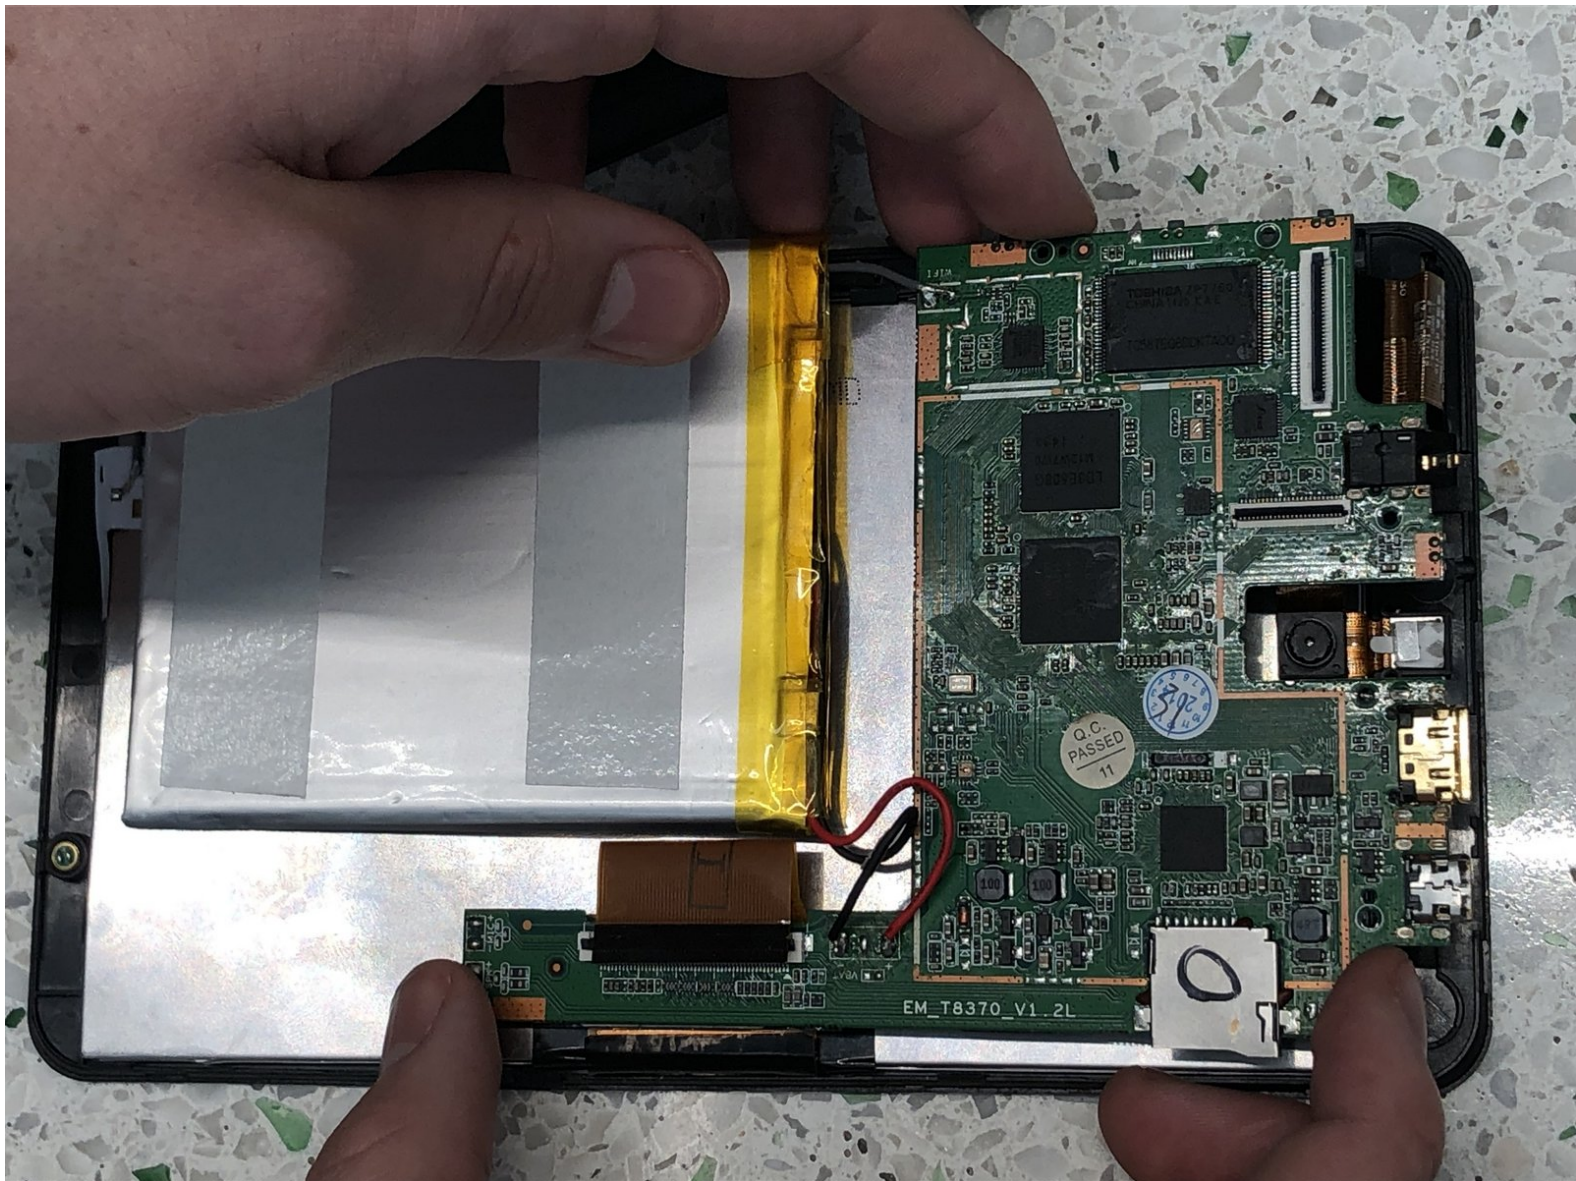

INTRODUCTION

If applications, device accessories or buttons are not responsive, your motherboard needs to be replaced.

TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Motherboard




- Pry open backing of the tablet using an iFixit opening tool.

Step 2

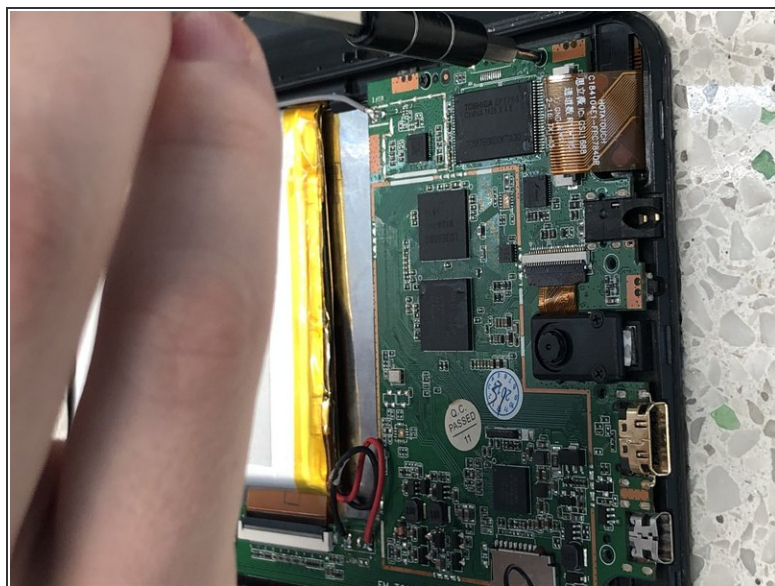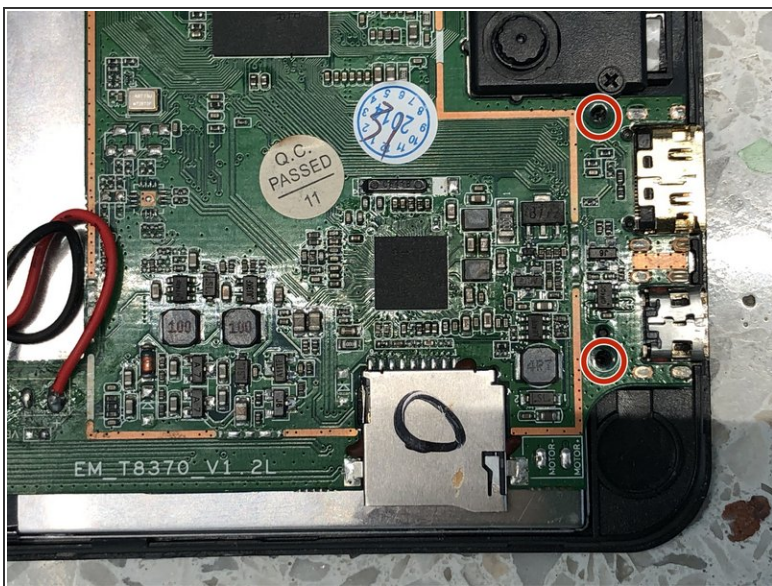


- Use a PH000 screwdriver to unscrew all four motherboard screws.

Step 3

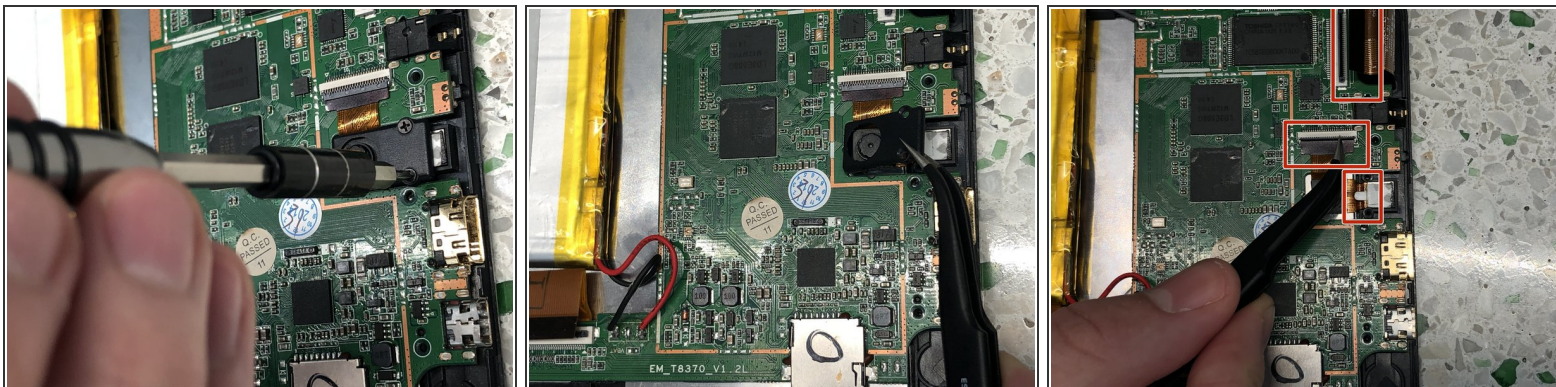

- Unscrew the holder of the camera and gently remove using tweezers.
- Remove the sensors using tweezers.

Step 4

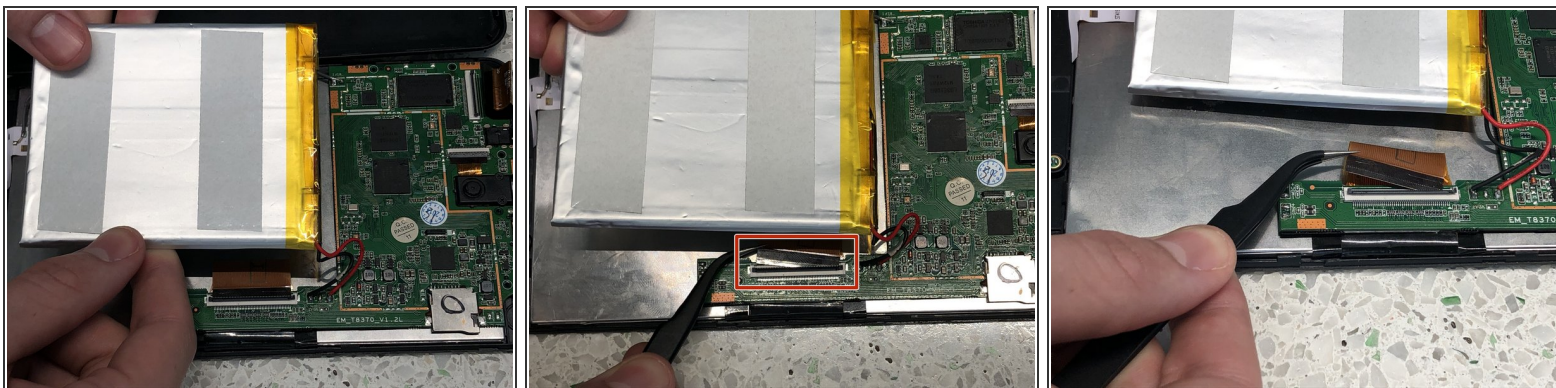

- Detach the battery.
- ⓘ Battery is attached with adhesive; no tools needed to remove.
- Using tweezers, lift and release the ribbon cable that was covered by the battery.

Step 5



- Carefully remove the motherboard with your hands.

To reassemble your device, follow these instructions in reverse order.