 


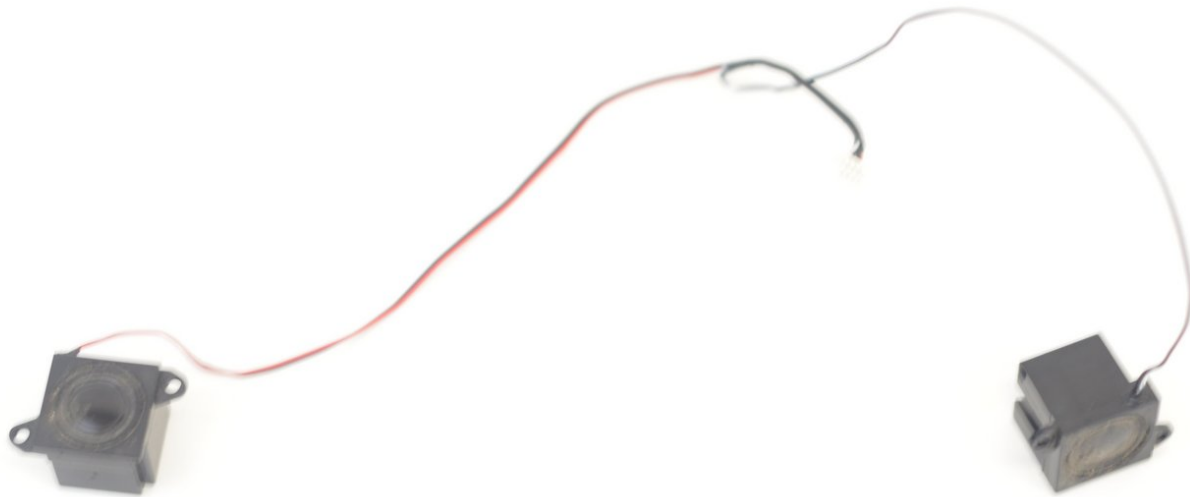

# Sony Vaio SVE151G11L Speaker Replacement

This is a comprehensive guide for replacing the internal speakers of the Sony Vaio SVE151G11L laptop.

Written By: Alex Theg



---

## INTRODUCTION

The speakers allow the laptop to play sounds such as music. This guide shows the steps to remove the speakers for repair or replacement.

---



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn the laptop over so its underside is facing upwards and visible.

## Step 2



- Standing so that the barcode and warning labels are upright and legible, push the **left tab** up and away from yourself.

### Step 3



- Standing so that the barcode and warning labels are upright and legible, push the **right tab** up and away from yourself.

### Step 4



- Locate the small gap where the battery and the laptop shell meet. Lift from the gap and rotate the battery up and away from yourself.

## Step 5



 
- Pull battery away from laptop.

## Step 6 — Hard Disk Drive



- Flip laptop over so the bottom is facing upwards.

## Step 7

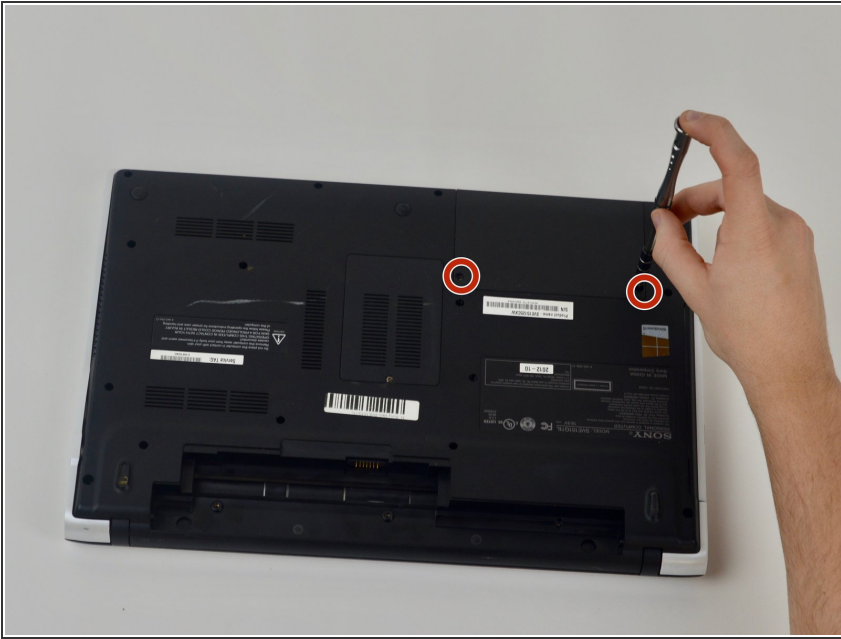


- Remove 2 bottom screws in the top right on the HDD cover, with a size P000 screwdriver.

## Step 8



 - Pop open the cover to the HDD.

## Step 9

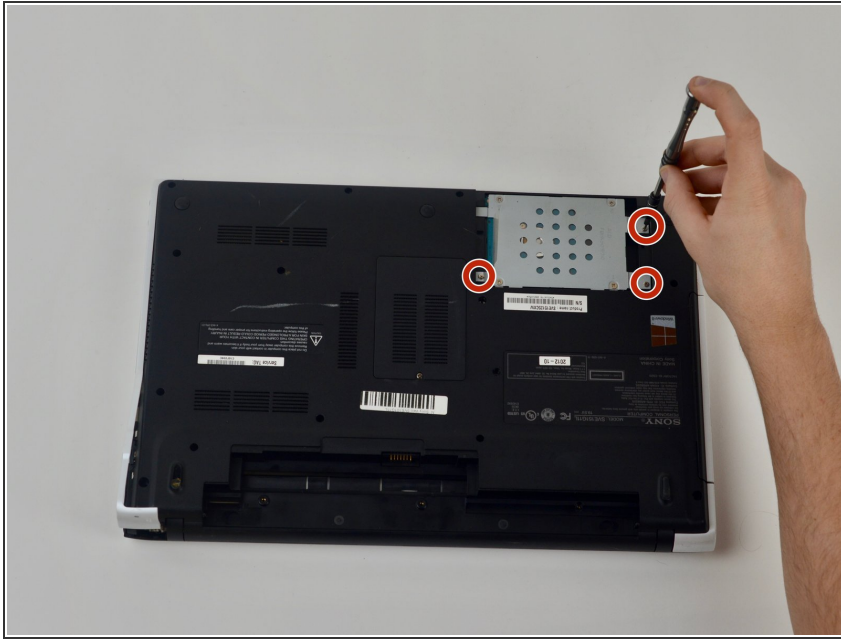

- Remove the screws on the HDD with a Phillips #000 screwdriver.

## Step 10



- Pull plastic tab away from the laptop.
- Lift HDD away from laptop.

 
 


## Step 11 — Speakers



- Remove the back cover.



## Step 12

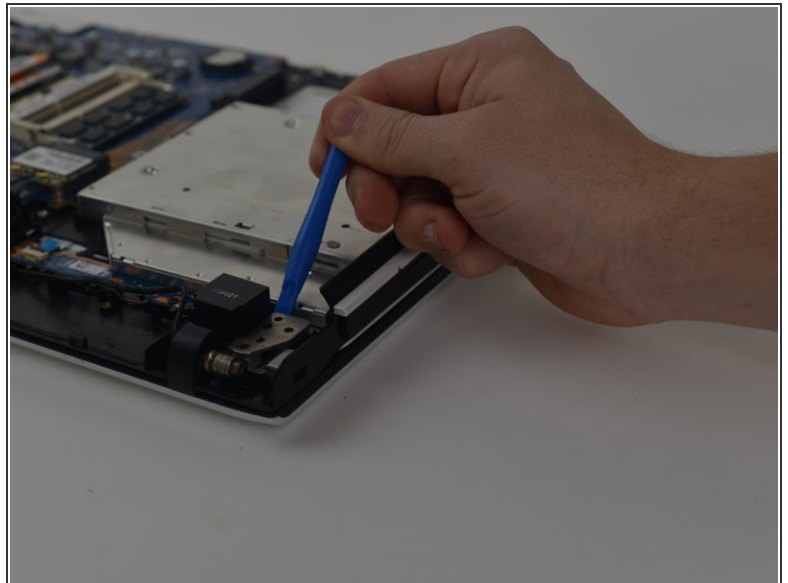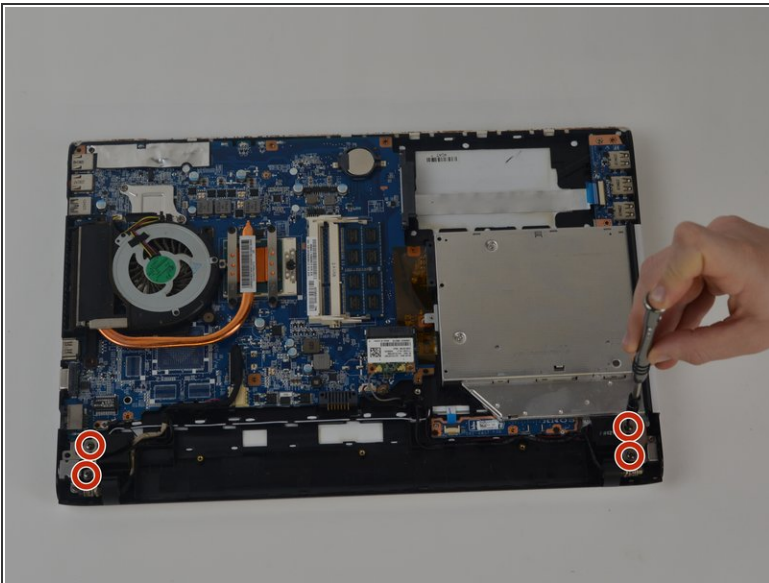

- Remove 4 hinge screws with a Phillips #0 screwdriver.





## Step 13

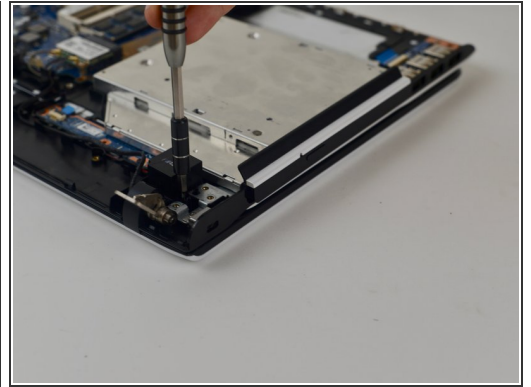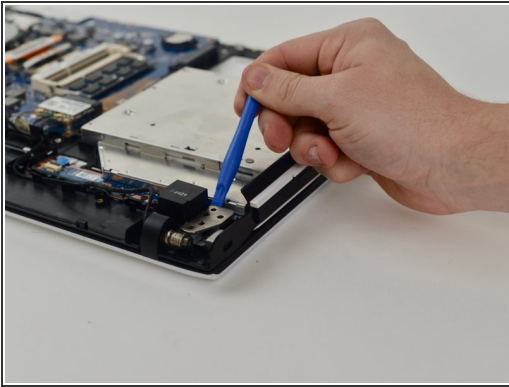  




- Pop open hinge.
- Remove black screw size P000.

## Step 14

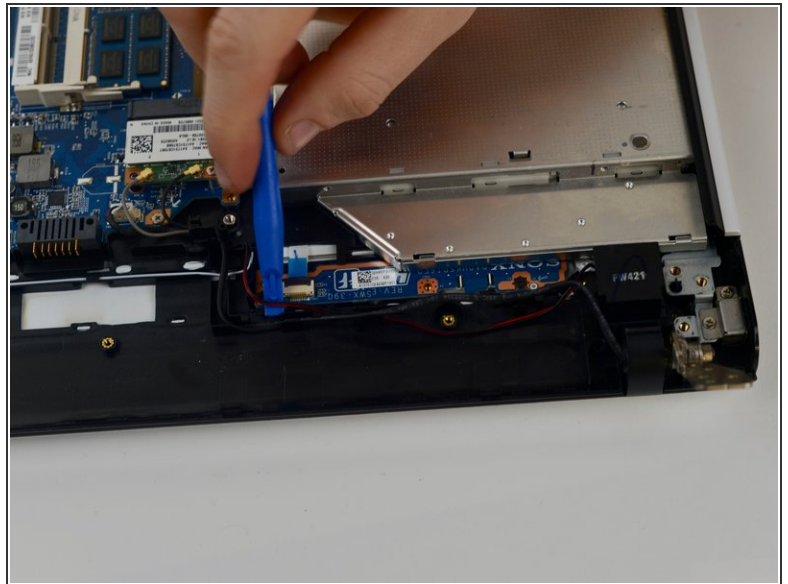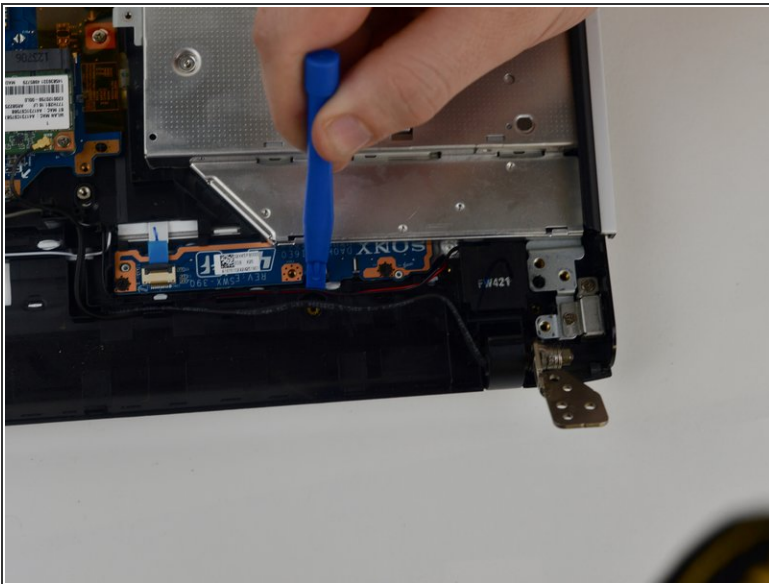  



- Remove wiring along its guide.

## Step 15

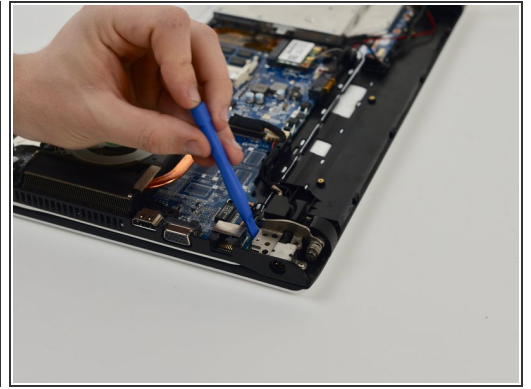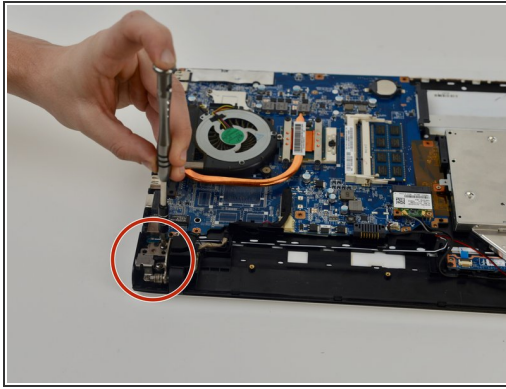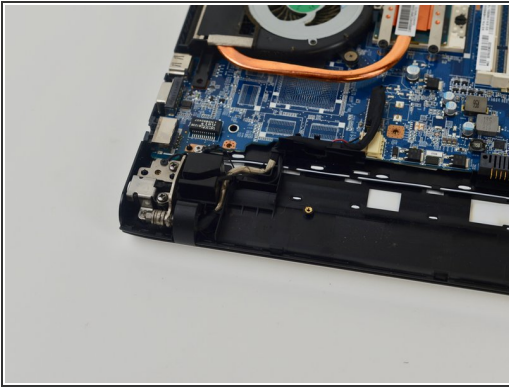   

- Remove two hinge screws size P00.
- Pop open hinge.



## Step 16

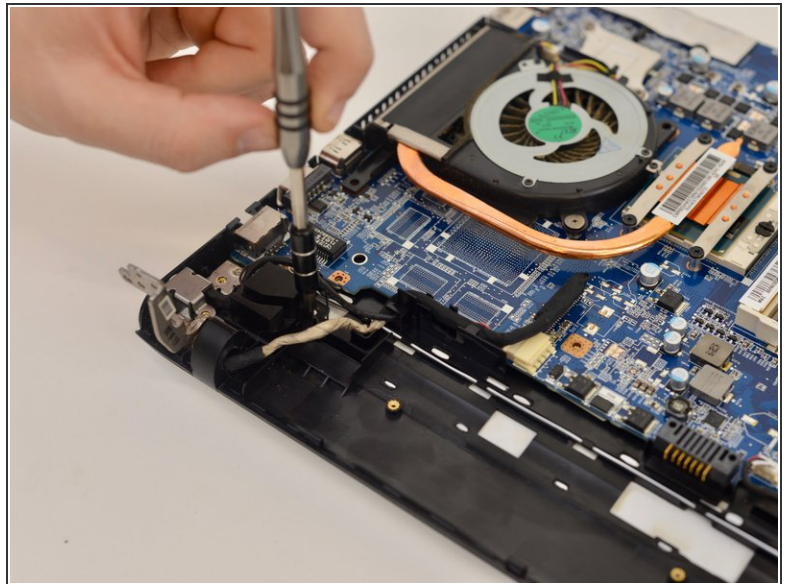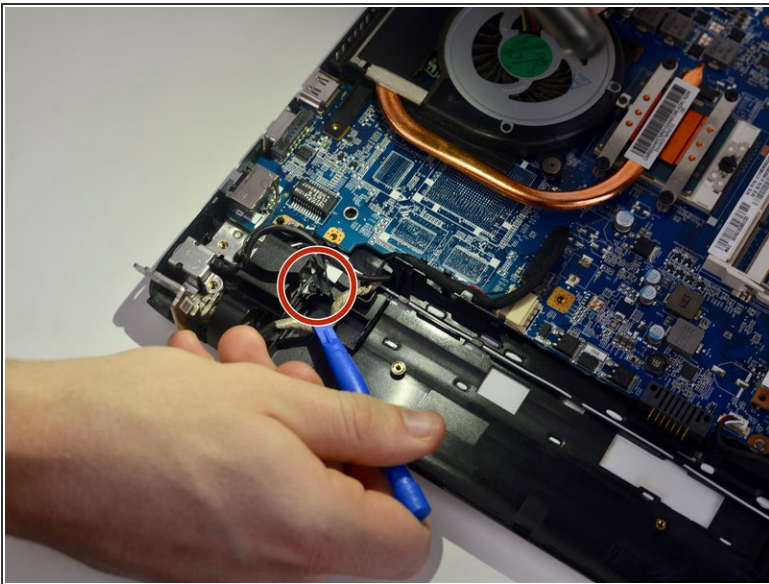  

- Remove black screw.




## Step 17

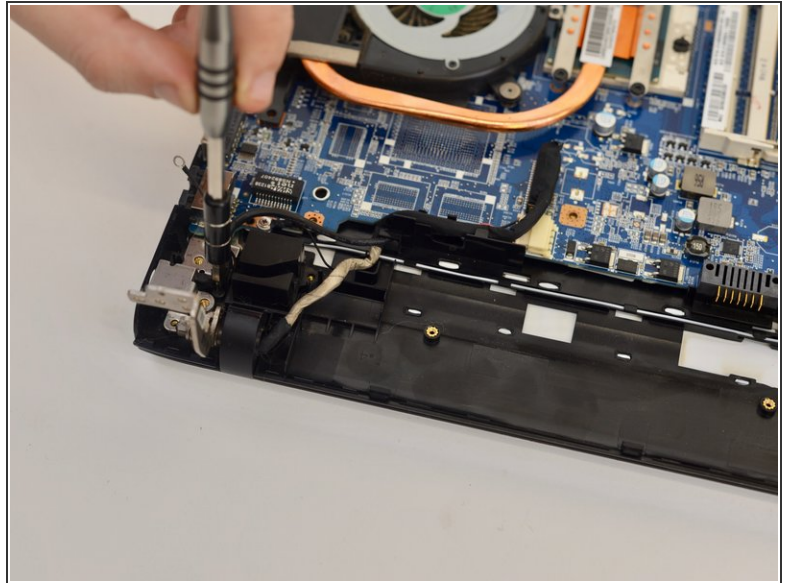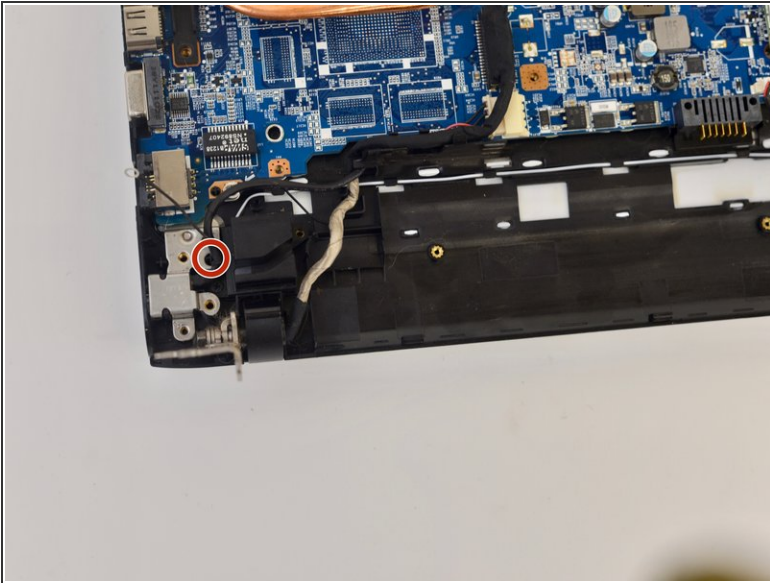  



- Remove secondary black screw.

## Step 18

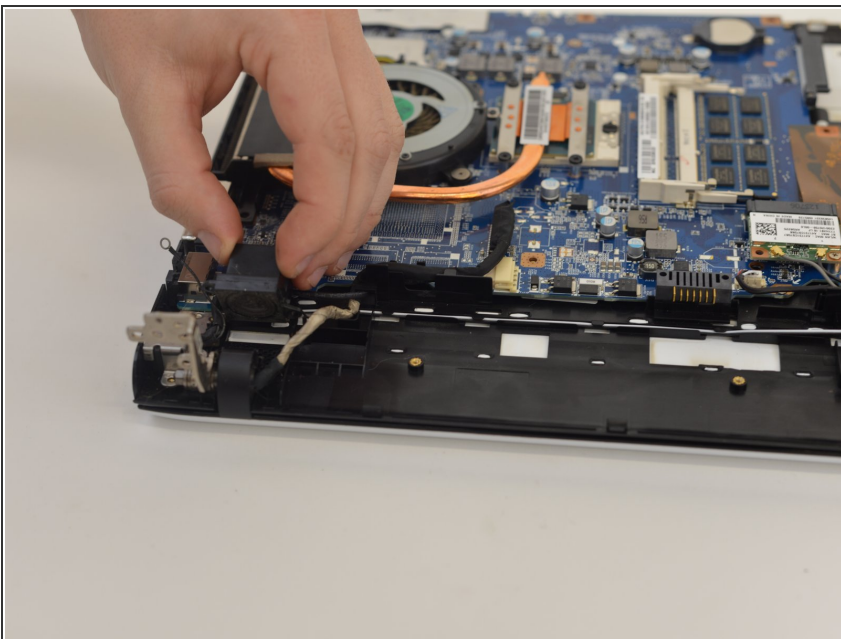 


- Remove speaker.

## Step 19

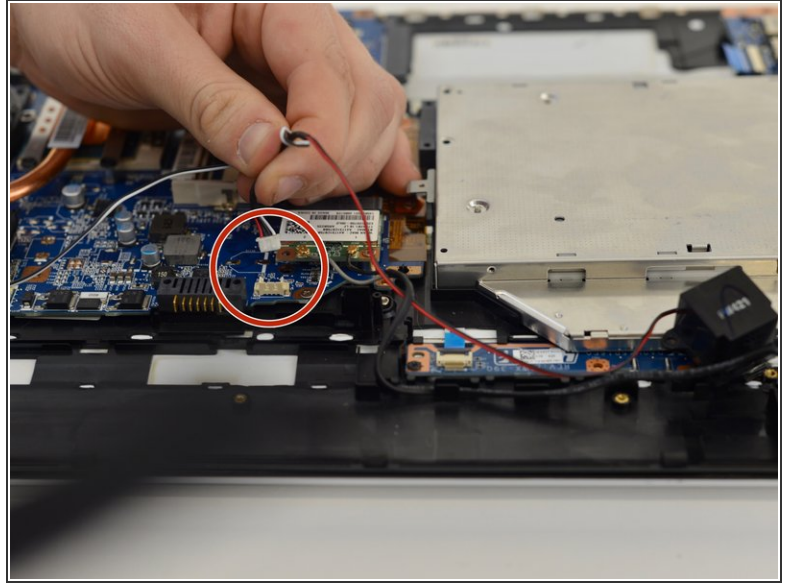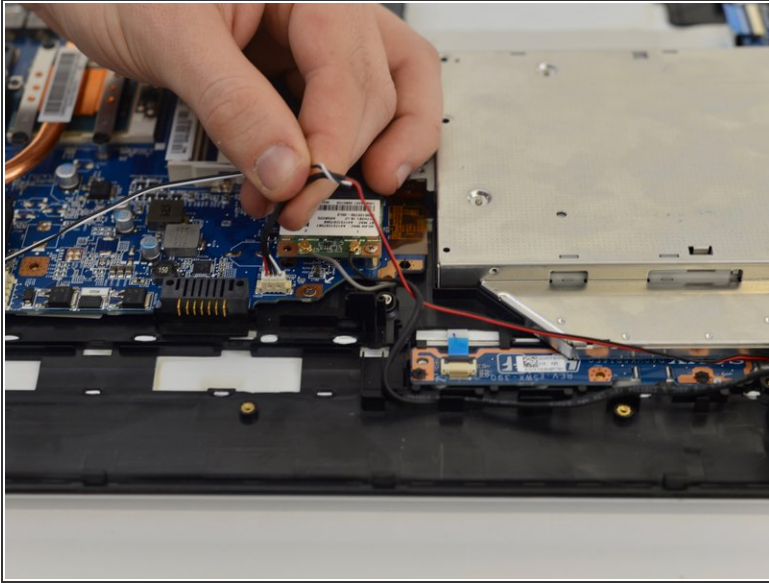  

- Follow wire down its wire channel and remove it from the channel.
- Pull up on the connector to disconnect the speakers to the motherboard.

## Step 20

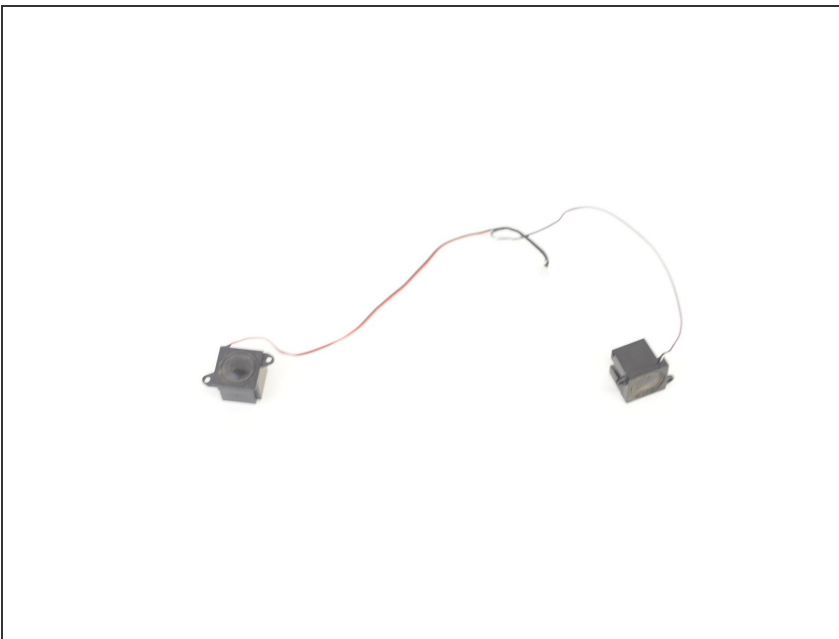 

- Remove speaker and wire from the laptop.

To reassemble your device, follow these instructions in reverse order.