



# HP ProBook 440 G1 Hard Disc Drive (HDD)

## Replacement

How to remove and replace the HDD on an HP...

Written By: Ethan A Courtney



# INTRODUCTION

How to remove and replace the HDD on an HP ProBook 440 G1.



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)



## PARTS:

- [1 TB SSD](#) (1)
- [250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [Crucial MX500 2 TB SSD](#) (1)

## Step 1 — Battery



⚠ Make sure the laptop is turned off before you start.


- Push and hold the release tab on the right and left toward the center.

## Step 2




- Pull the battery out.

## Step 3 — Backplate

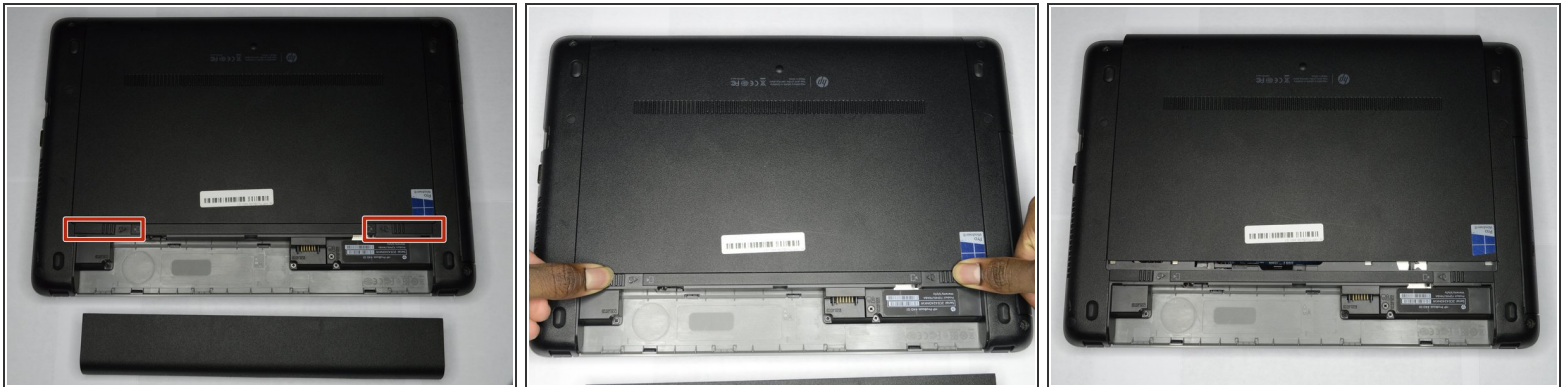


- Push and hold the release tabs on the right and left toward the center again.

## Step 4

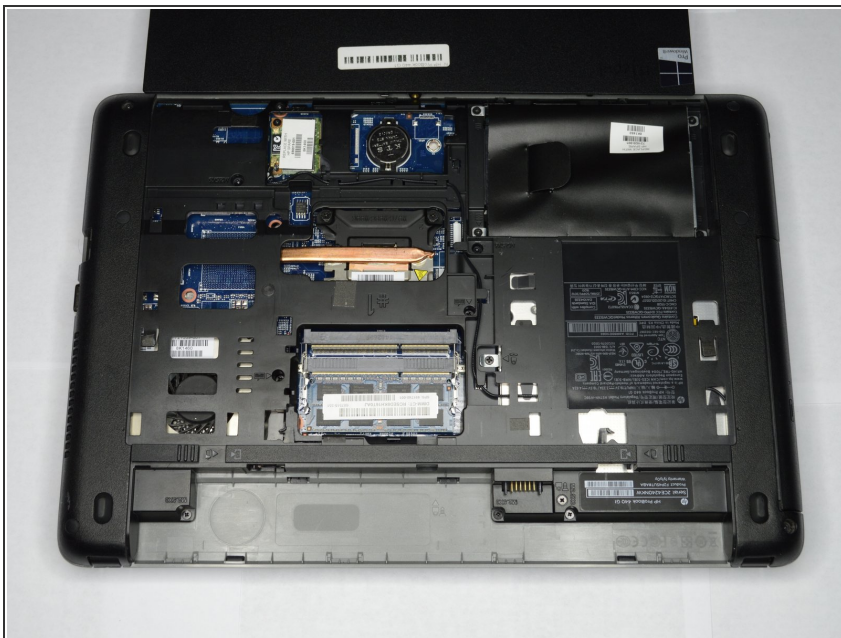

- Slide the backplate off.

## Step 5 — Hard Disc Drive (HDD)

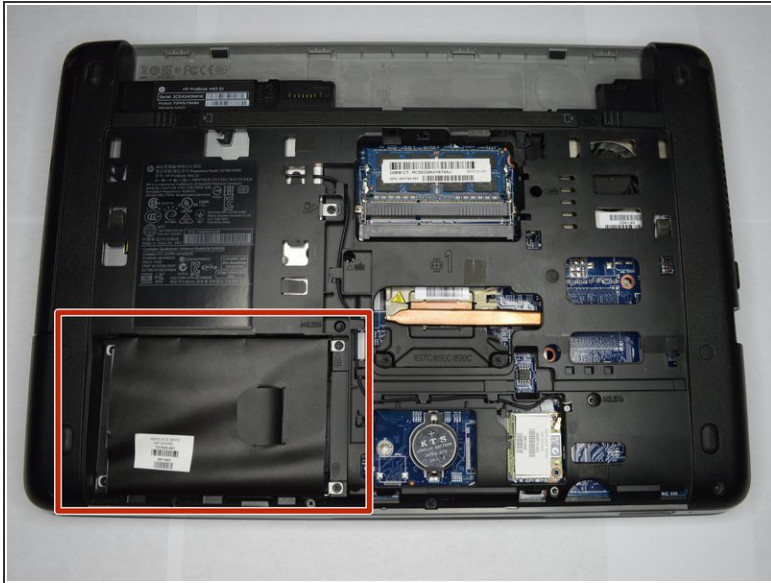

- Locate the hard drive, opposite the battery across from the wireless card.

## Step 6




- Remove all four Phillips #00 screws that hold the hard drive in place.

## Step 7



- Lift up on the outer part of the hard drive.
- Pull the hard drive out.

## Step 8

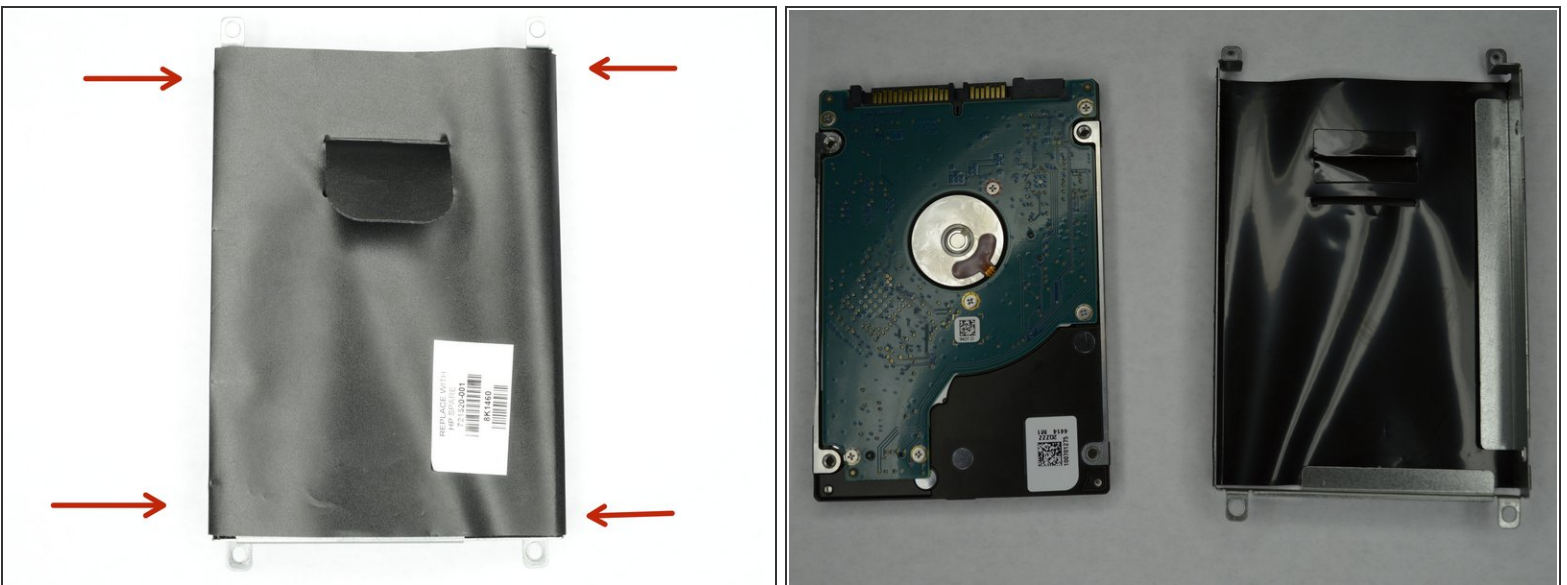

- Remove the four Phillips #00 screws holding the HDD in the HDD cover.
- The HDD should slide out after all screws are removed.

To reassemble your device, follow these instructions in reverse order.