




Sony Vaio SVE151G11L Hard Disk Drive Replacement

How to replace a Sony Vaio SVE151G11L hard drive.

Written By: Alex Theg

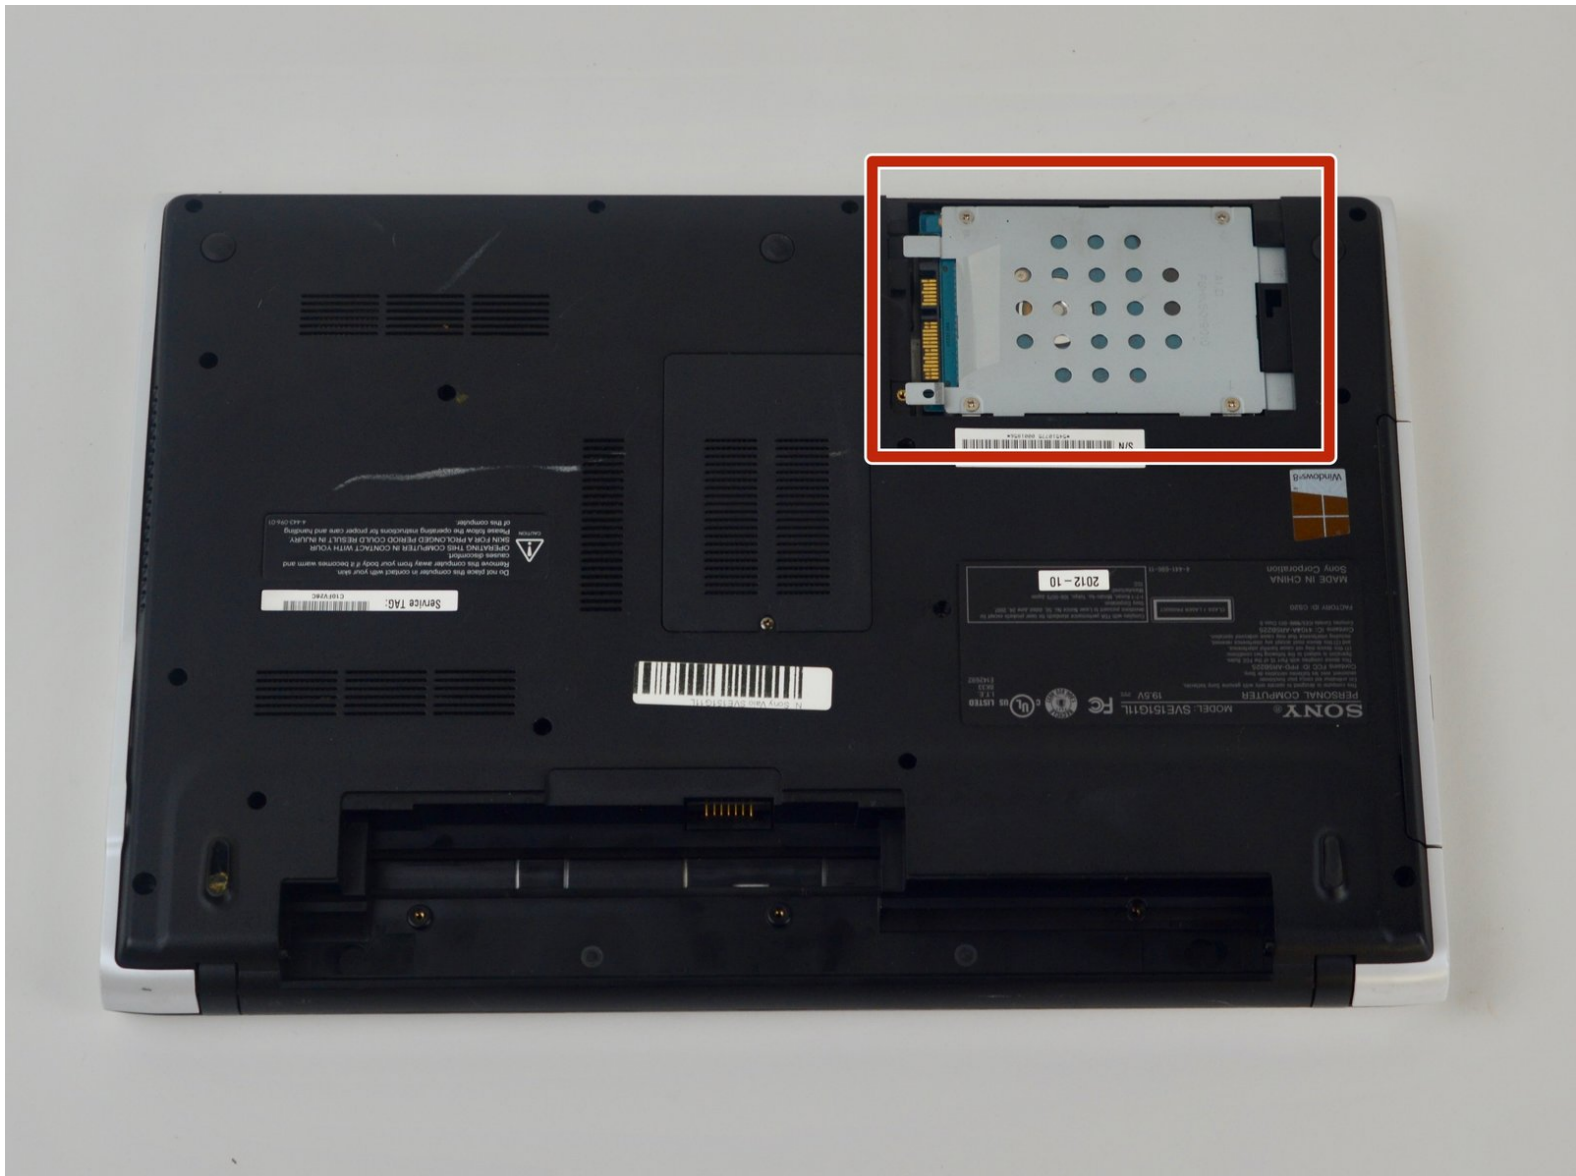

INTRODUCTION

The Hard Disk Drive is responsible for storing your data. This is a comprehensive guide for replacing the HDD (Hard Disk Drive).



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Hard Disk Drive



- Flip laptop over so the bottom is facing upwards.

Step 2

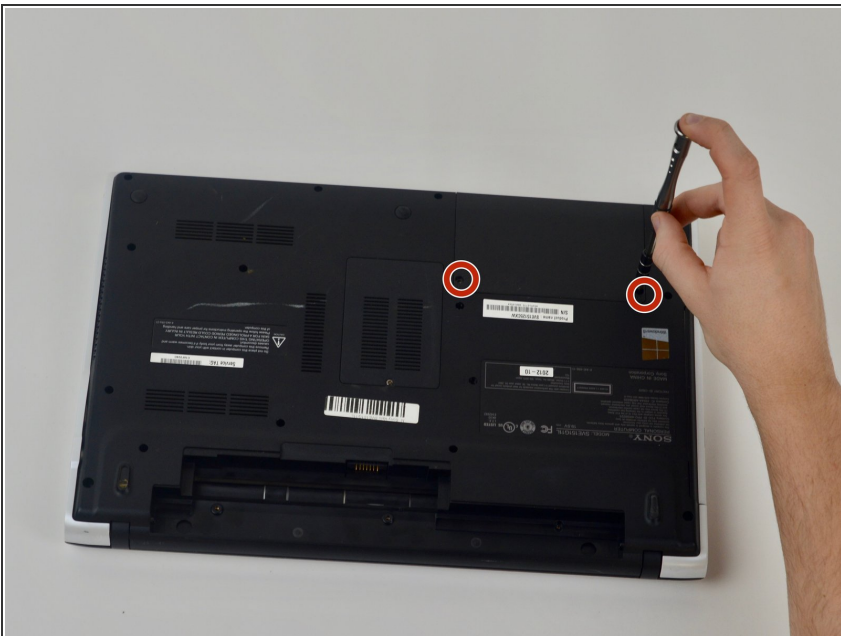


- Remove 2 bottom screws in the top right on the HDD cover, with a size P000 screwdriver.

Step 3



- Pop open the cover to the HDD.

Step 4

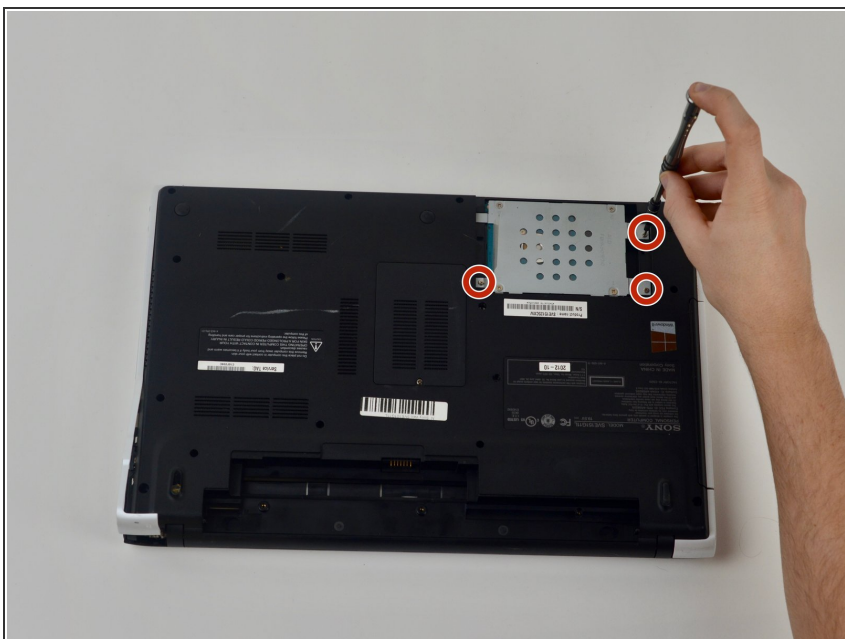

- Remove the screws on the HDD with a Phillips #000 screwdriver.

Step 5



- Pull plastic tab away from the laptop.
- Lift HDD away from laptop.

To reassemble your device, follow these instructions in reverse order.