


Lenovo Tab 4 8 MicroSD Card Reader Replacement

Learn how to replace the microSD card reader from the Lenovo Tab 48.

Written By: Ivan Chavez

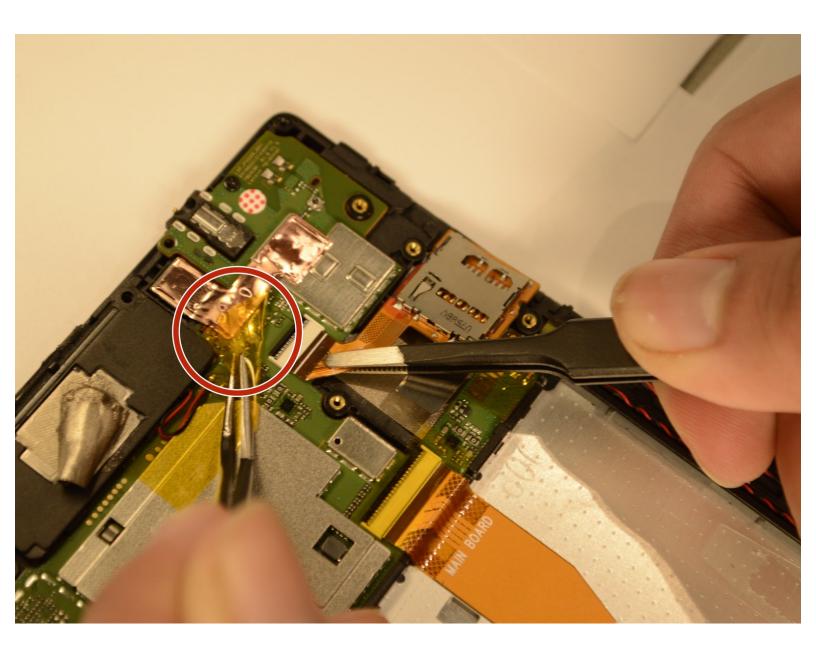

This document was generated on 2020-11-28 07:27:26 AM (MST).



TOOLS:

- Phillips #000 Screwdriver (1)
- Spudger (1)
- iFixit Opening Picks set of 6 (1)
- Tweezers (1)

Step 1 — Battery







- Start at the microSD slot.
- Use the opening pick to slide underneath the back cover of the tablet.
- Slide the opening pick around the tablet until the back cover is off.

Step 2







- Remove the 8 screws with a Phillips #000 screwdriver [bit].
 - There is a screw under the blue "s" sticker.
- Remove tape holding plate down.
- Use precision tweezers or your fingers to remove plate.

Step 3





- Remove yellow tape.
- Use a spudger or plastic opening tool to remove the battery's ribbon cable from the motherboard.

Step 4









- Gently pull on the two stretch release adhesive strips. Do not pull up, pull away from battery.
- Once the tabs are off, lift the battery up from the frame.


Step 5 — **MicroSD Card Reader**

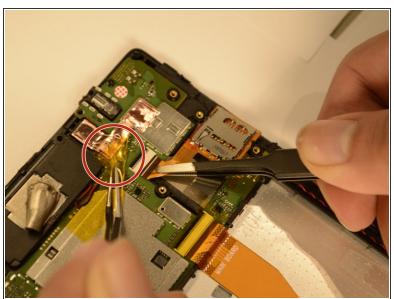


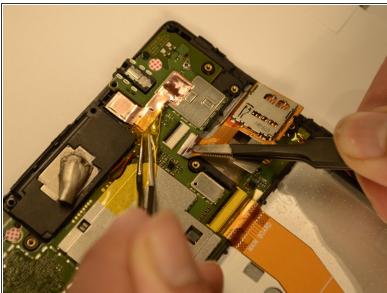

- There is a yellow tape holding the microSD card reader connector. Use tweezers to hold down the tape.
- Gently lift the tab on the microSD card reader's ZIF connector, and gently pull the ribbon cable free.

Step 6

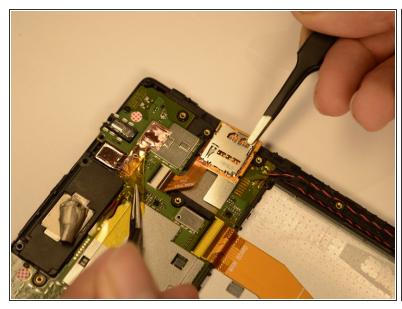

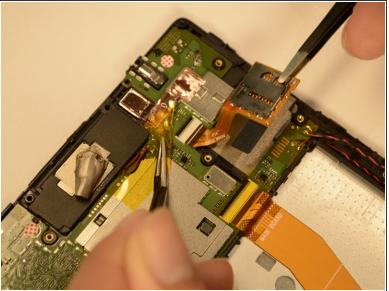

• Lift the microSD card reader with tweezers or your fingers.

This document was generated on 2020-11-28 07:27:26 AM (MST).

To reassemble your device, follow these instructions in reverse order.