



Asus F555LA-AB31 RAM Replacement

This guide will show how to install more RAM, or replace pre-existing RAM in your Asus F555LA-AB31 laptop.

Written By: Jordan Renteria



INTRODUCTION


This guide will show how to install more RAM, or replace pre-existing RAM in your Asus F555LA-AB31 laptop. This laptop comes from the factory with 4gb of DDR3 SDRAM soldered to the motherboard. Behind the small panel located on the bottom of the Asus F555LA-AB31 there is one slot for installing additional memory.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM

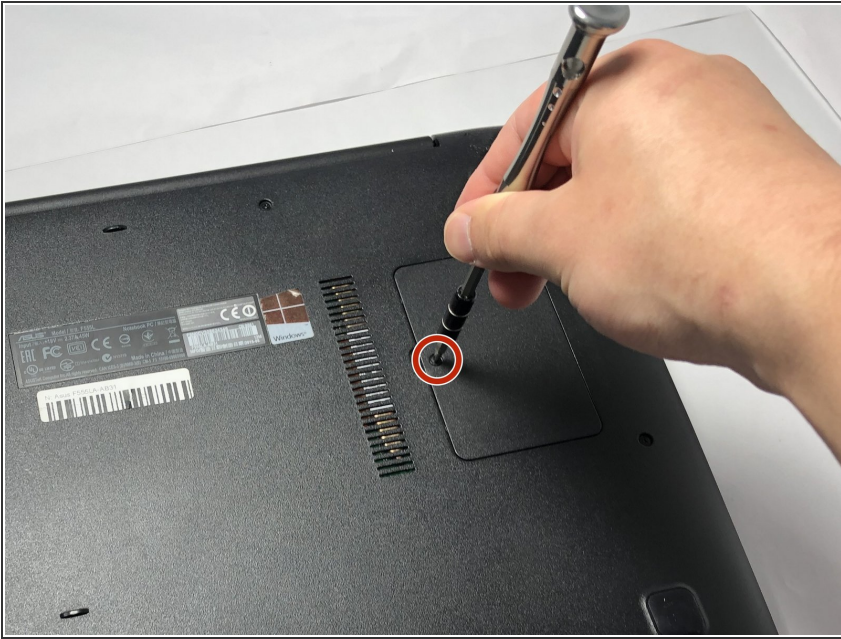

- Remove the Phillips #0 screw holding the RAM access panel in place.
- Gently lift up on the edge of the panel to remove it.

Step 2



- With the panel removed, The single upgradable RAM slot is easily accessible.
- If RAM is already installed, it can be removed by gently pulling the retainers sideways away from the RAM to release it.
- ☑ To install RAM, slide the DIMM into the socket at an angle of approximately 20 degrees from flat. Make sure the notch in the RAM module aligns with the notch in the socket. Gently push down on the RAM module until the retainers click into place.

To reassemble your device, reinstall the access panel by following these instructions in reverse order.