




Asus F555LA-AB31 CD Drive Replacement

This guide shows how to replace the compact disk drive in a Asus F555LA-AB31 laptop.

Written By: Darren Early

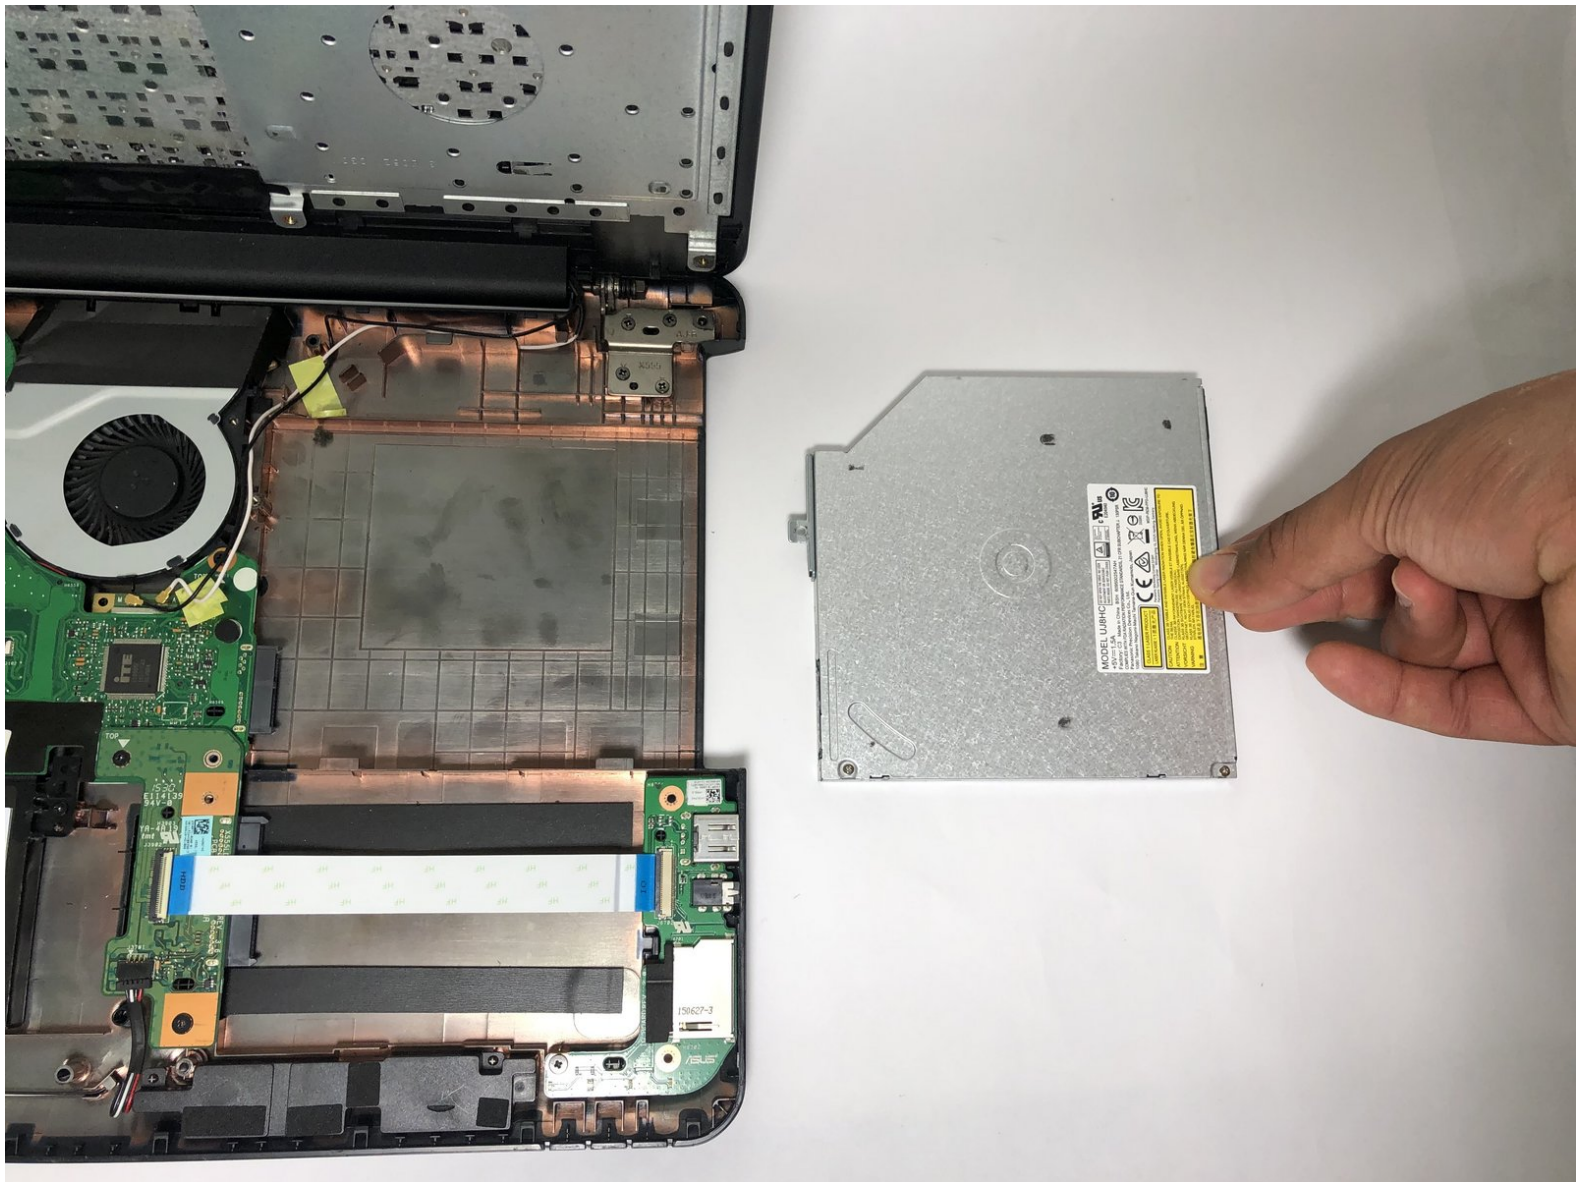

INTRODUCTION

This guide has four uncomplicated and easy-to-follow steps to replace the CD drive of your Asus F555LA-AB31 laptop.

There are just two things that could be wrong with your CD drive. The first one is that you might have a faulty drive, which is highly unlikely. The second one, which is the most common problem, is faulty drivers; you may find that discs are not being read correctly.


Before completing this guide, unplug and turn off your laptop.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — CD Drive

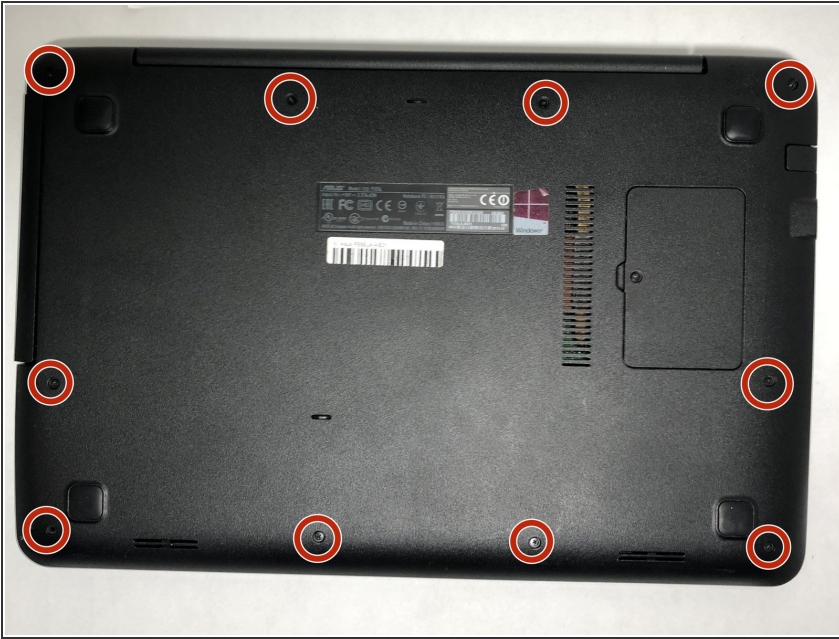

- ✦ Turn off and unplug the device before starting repairing.
- Use the Phillips #0 screwdriver head to remove the ten 18mm Phillips #0 screws on the laptop's bottom.

Step 2

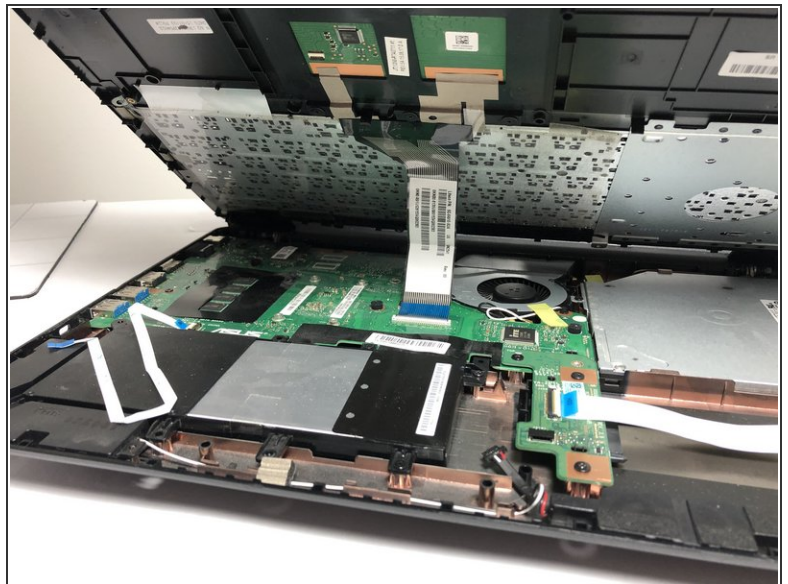


- Flip the laptop over and flip the screen up.
- Pry upward on the edges of the faceplate in order to separate the keyboard and trackpad from the rest of the device.

⚠ Be cautious of the cables connecting the keyboard and trackpad to the motherboard.



This document was generated on 2022-01-05 03:15:54 AM (MST).

Step 3

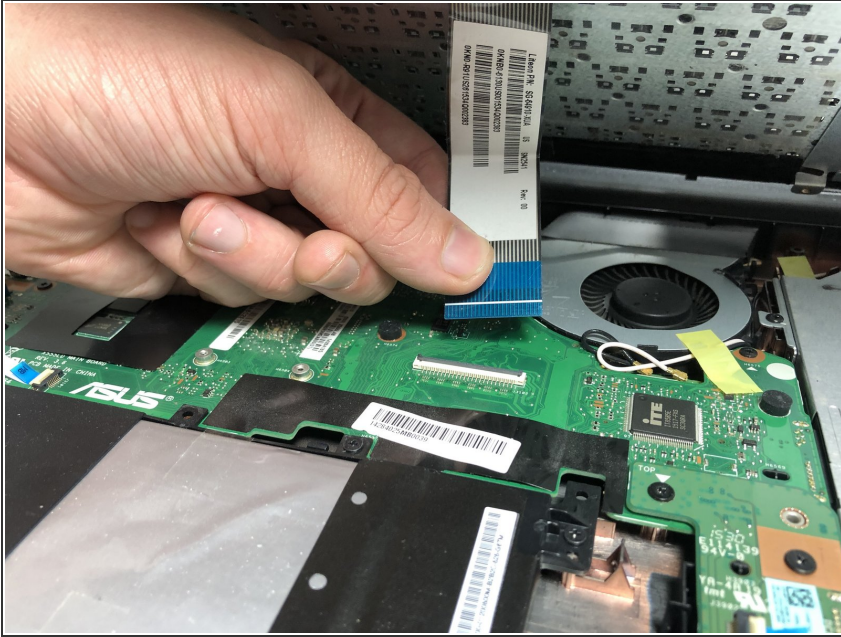

- Disconnect the keyboard flex cable from its motherboard ZIF socket.
- ⓘ To unlock a [ZIF connector](#), use the tip of a spudger or your fingernail to flip up the small, hinged locking flap. Carefully slide the unlocked cable out of the socket.

Step 4

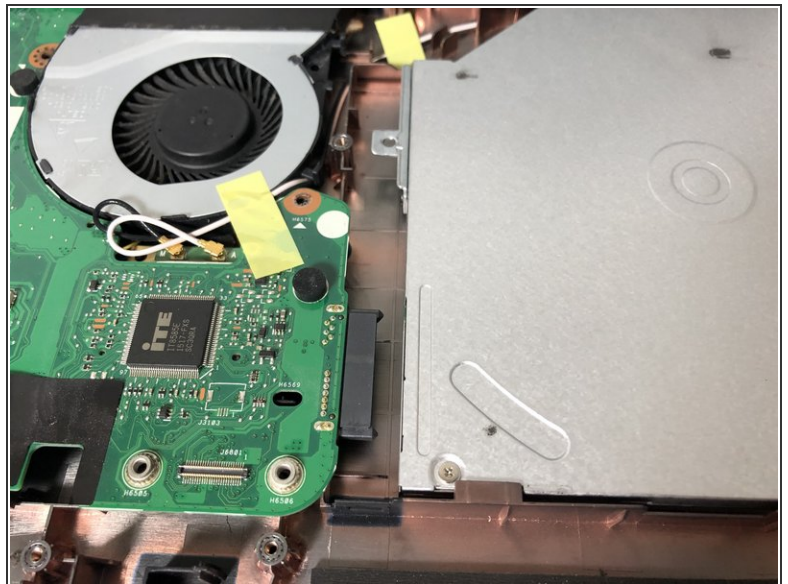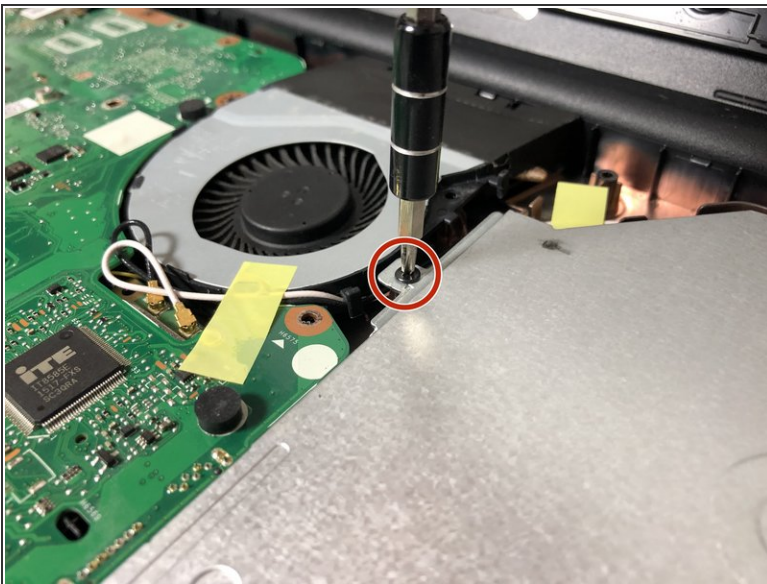

- Use the Phillips #0 screwdriver to unscrew the one Phillips #0 screw that connects the CD drive to the motherboard.
- Slowly slide out the CD drive, keeping it level, to remove it.

To reassemble your device, follow these instructions in reverse order.