



# Sony DVP-SR200P Top Cover Replacement

Follow this guide in order to remove the Sony DVP-SR200P top cover.

Written By: Brian Hua



---

## INTRODUCTION

This guide will teach you how to remove the top cover of the Sony DVP-SR200P and access the inside components.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Top Cover



- Remove the five #1 Phillips screws (black, 3/16") attaching the cover to the DVD player.
  - One 3/16" screw on the right side of the DVD player.
  - One 3/16" screw on the left side of the DVD player (directly opposite of other screw).
  - Three 3/16" screws on the back of the DVD player.

## Step 2



- Slide the cover away from the front of the DVD player until it is off.

To reassemble your device, follow these instructions in reverse order.