



Disassembling Canon Pixma MP480 Rear and Side Panel

This guide will show you how to disassemble the...

Written By: Kevin Cole



INTRODUCTION

This guide will show you how to disassemble the back and side panel of the printer.

TOOLS:

[Phillips #1 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Rear and Side Panel



- Remove the two 7.9 mm screws using a Phillips #1 screwdriver.

Step 2



- Lift up the back cover to remove it.
- ① You may need to lift firmly as it requires quite a bit of force.

Step 3



- Open the front tray.

Step 4



- Open the scanner compartment.
- ⓘ Make sure the blue lever locks into place to keep the compartment open.

Step 5




- Remove the blue lever from its slot by pushing it back and twisting clockwise.
- Close the scanner compartment and cover.

Step 6



- Pry open the side cover with the plastic opening tool.

Step 7

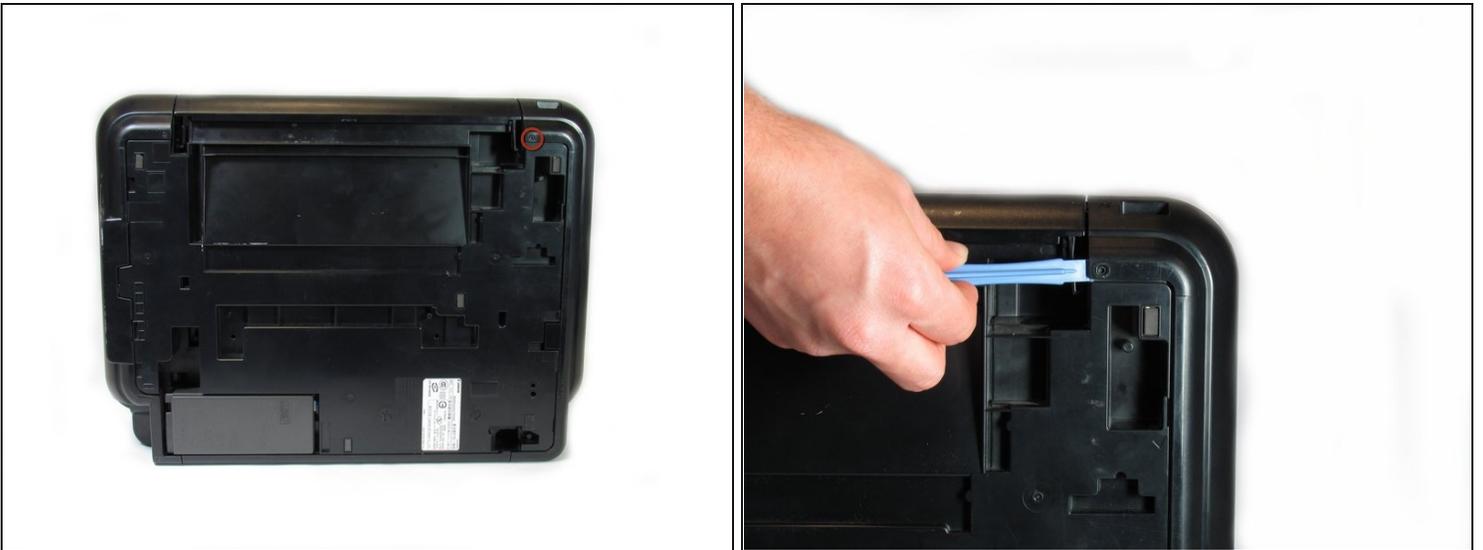

- Flip the printer over so that the bottom of the printer is facing you.
- Use the plastic opening tool to remove the corner of the side panel from the plastic pin.

Step 8



- Use the plastic opening tool to loosen the side panel from the bottom of the printer.

To reassemble your device, follow these instructions in reverse order.