



HP Envy x360 m6-aq003dx Battery Replacement

Use this guide to replace the battery in your HP Envy x360 m6-aq003dx.

Written By: Paris Williams



INTRODUCTION



This guide will be go over how to replace an old and/or faulty battery. The guide starts with back panel already removed. If needed, go to our guide going over how to remove the back panel from the laptop. While working on the laptop it is recommended to use a tray to keep track of the screws that are removed to avoid misplacing any of them.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Panel

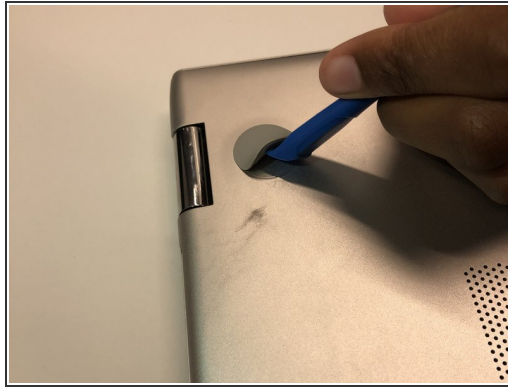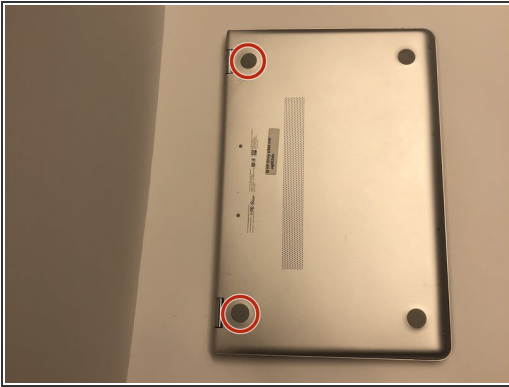


- Turn the laptop over and use the plastic opening tool to take off the rubber pads. You only need to take off the two pads at the top for this device.

Step 2

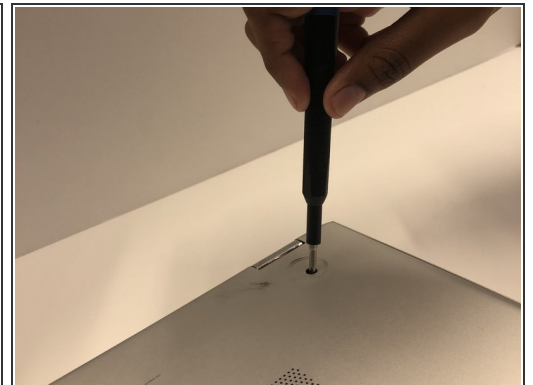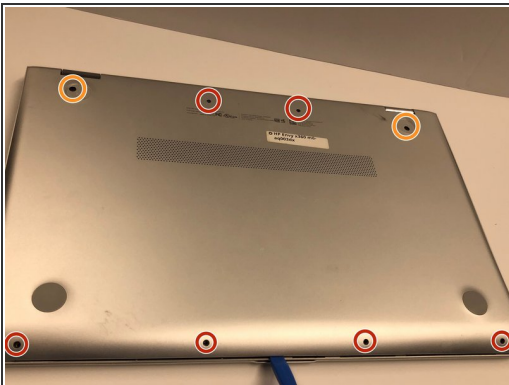

- Use the Torx T5 screwdriver to remove the six small screws.
- Use the Phillips #0 screwdriver to remove the screws under the rubber pads in step 1.

Step 3

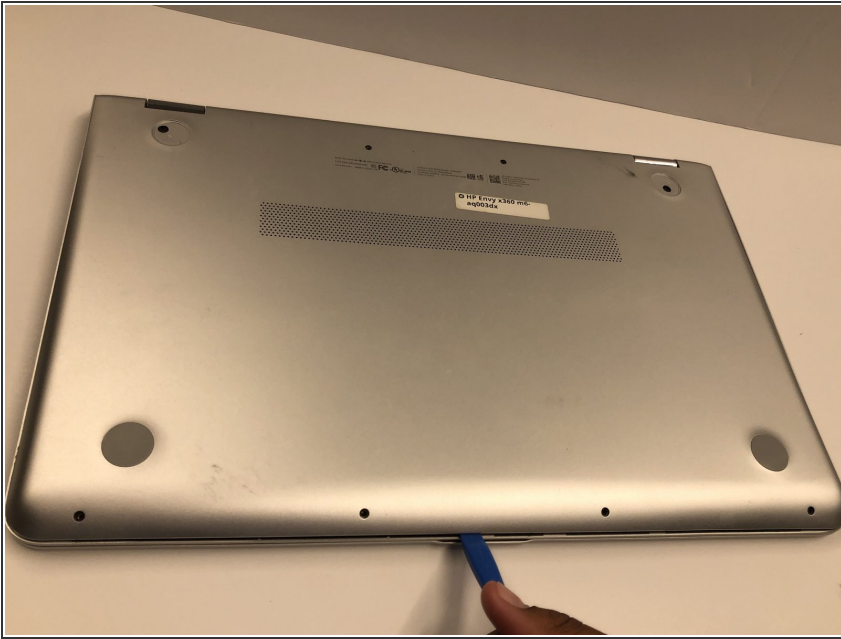

- Go slowly around the edge with the opening tool. The noises you will hear are due to the small joints popping open. Continue this until you have made your way around the entire laptop.

Step 4 — Battery



- Remove the six 4mm screws around the battery using a Phillips #0 screwdriver.

Step 5



- Disconnect the white connector from the battery to the board. (It is recommended to use pliers to remove the cord to avoid touching the board).
- Once the connector and screws are both removed, lift the battery up and remove it from the laptop.
- ① The removal of the connector and the screws can be done in either order.

To reassemble your device, follow these instructions in reverse order.