




# Acer Chromebook 14 CB3-431-C3WS Back Cover Replacement

How to replace an Acer Chromebook 14 CB3-431-C3WS back cover.

Written By: Samantha Postma

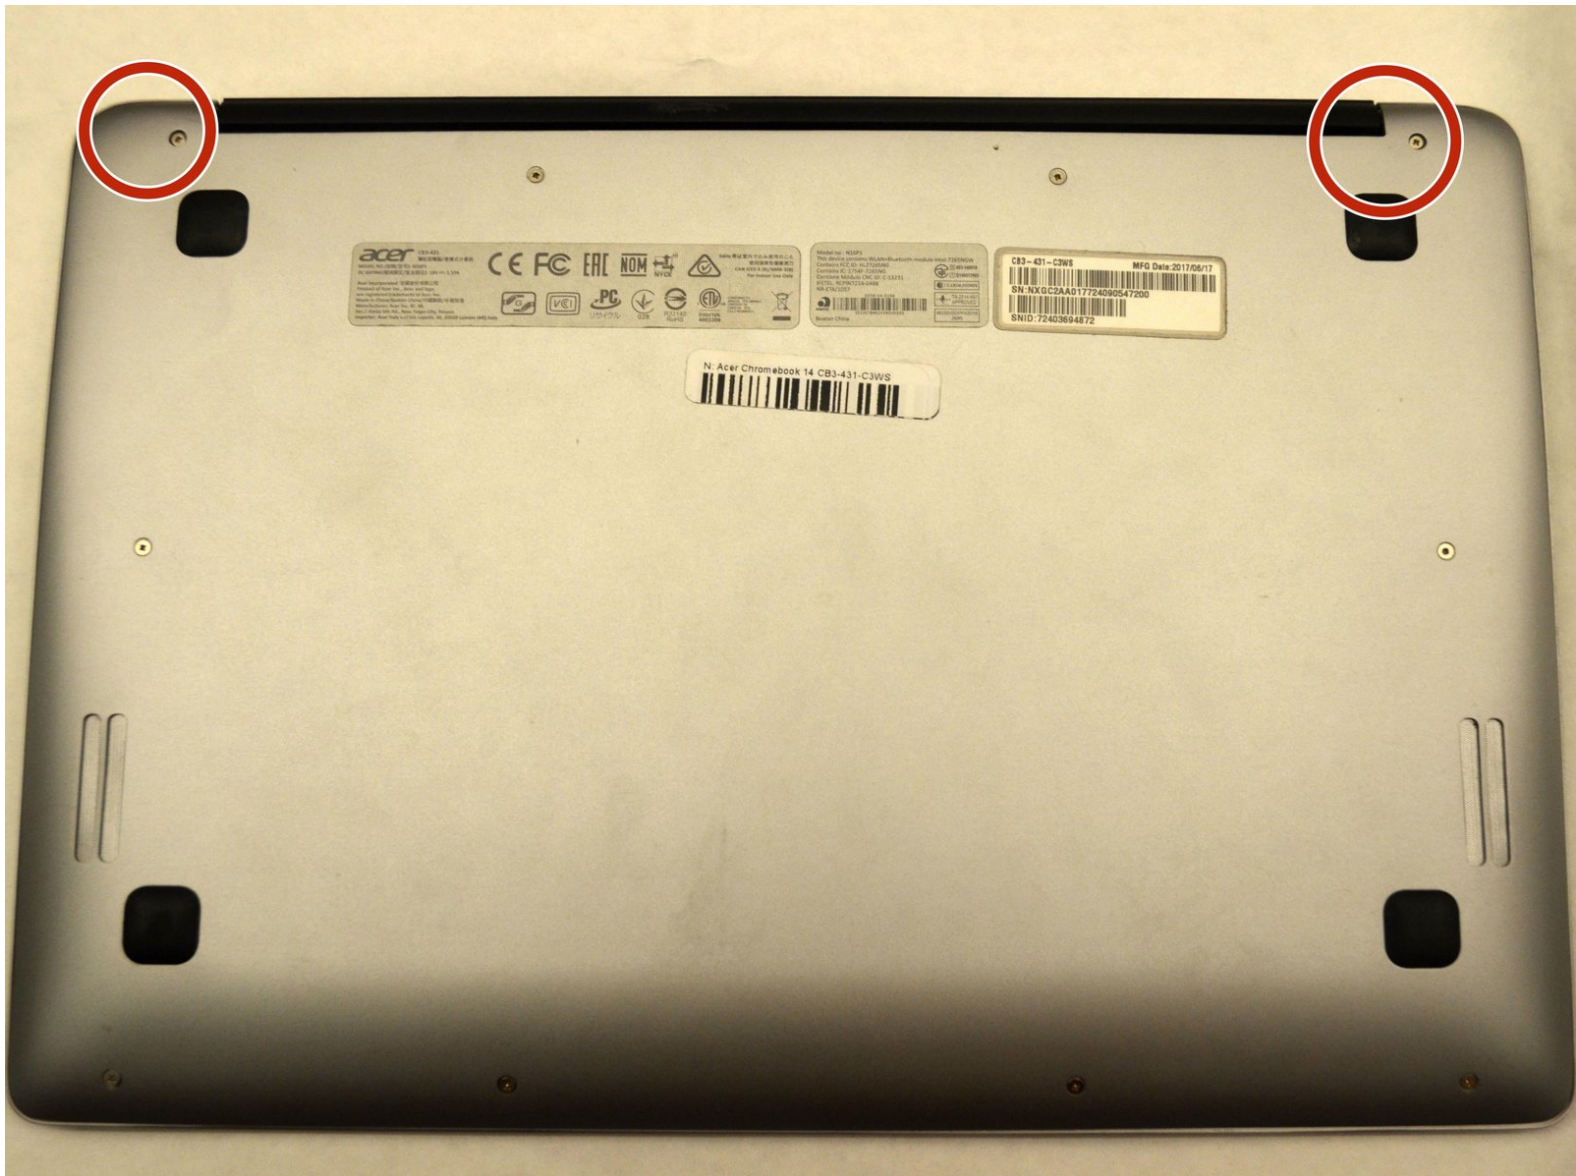

---

## INTRODUCTION


In each of the replacement guides, you will need to remove the back cover of the Acer Chromebook 14 CB3-431-C3WS. This guide will show you how to remove the back cover in order to complete all other replacements.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [JIS #0 Screwdriver](#) (1)
-

## Step 1 — Back Cover

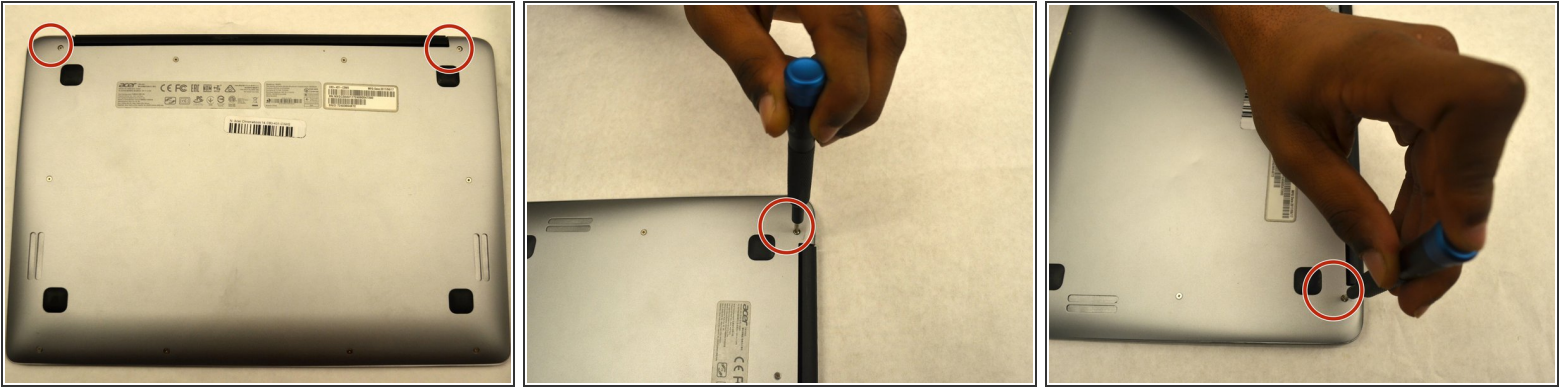

- Remove the two 6mm JIS #0 screws from either side of the hinges.

## Step 2



- Remove the eight 4mm JIS #0 screws from the back cover.




### Step 3



- Insert an opening pick between the back panel and the sides of the computer to begin lifting the back off.
  - ⓘ There are several clips holding the cover in place.
- After the sides have been lifted, use the opening tool to finish opening the back cover.

### Step 4

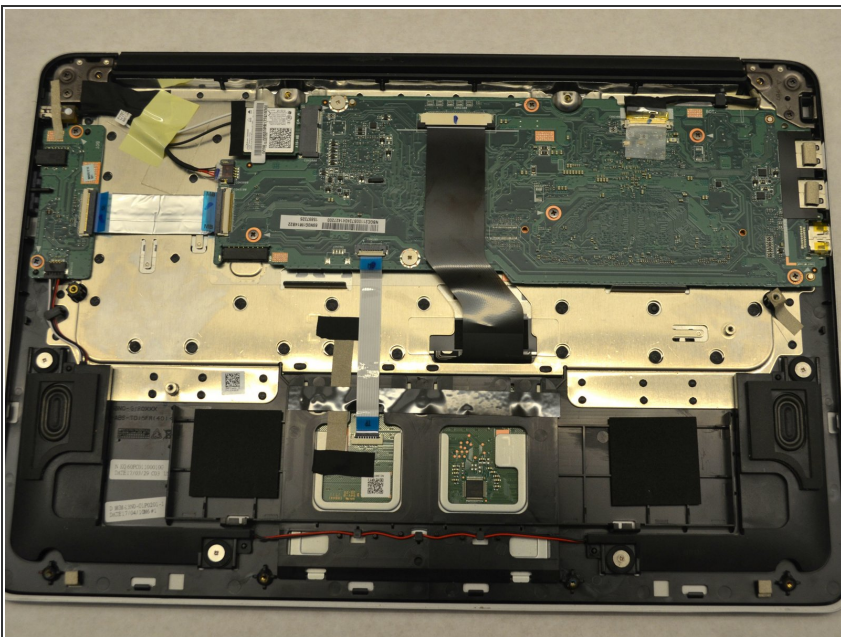

- Lift off the back cover.

To reassemble your device, follow these instructions in reverse order.